



SHERWOOD INDUSTRIES IS AN ENVIRONMENTALLY RESPONSIBLE COMPANY. THIS MANUAL IS PRINTED ON RECYCLED PAPER.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE



# FOCUS

BY: SHERWOOD INDUSTRIES LTD

## OWNER'S MANUAL

### WHAT TO DO IF YOU SMELL GAS

- Open windows/extinguish any open flame.
- Do not try to light any appliance.
- Do not touch any electrical switch or use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

This appliance may be installed in an after market permanently located, manufactured (mobile) home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless a certified kit is used.

### WARNING

**If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.**

**Installation and service must be performed by a qualified installer, service agency or the gas supplier.**

### FOR YOUR SAFETY

**Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.**



Massachusetts installations (Warning): This product must be installed by a licensed plumber or gas fitter when installed within the Commonwealth of Massachusetts. Other Massachusetts code requirements: Flexible connector must not be longer than 36in, shut off valve must be a "T" handle gas cock; only direct vent sealed combustion products are approved for bedrooms/bathrooms; fireplace dampers must be removed or welded in the open position prior to the installation of a fireplace insert or gas log.

**EG31-118**

# SAFETY PRECAUTIONS

## FOR SAFE INSTALLATION AND OPERATION OF YOUR “ENVIRO” HEATER, PLEASE CAREFULLY READ THE FOLLOWING INFORMATION:

- All ENVIRO gas-fired appliances must be installed in accordance with their instructions. Carefully read all the instructions in this manual first. Consult the building authority having jurisdiction to determine the need for a permit prior to commencing the installation.
- **NOTE:** Failure to follow these instructions could cause a malfunction of the fireplace, which could result in death, serious bodily injury, and/or property damage.
- Failure to follow these instructions may also void your fire insurance and/or warranty.

### GENERAL

- Installation and repair should be done by a qualified service person. The appliance should be inspected before the first use and, at least, annually by a qualified service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. It is imperative the control compartments, burners and circulating air passageways of the appliance be kept clean.
  - Due to high temperatures, the appliance should be located out of high traffic areas and away from furniture and draperies.
- Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burn or clothing ignition.**
- Young children should be carefully supervised when in the same room as the appliance.
  - Clothing or other flammable materials should not be placed on or near the appliance.

### FOR YOUR SAFETY

- Installation and service must be performed by a qualified installer, service agency or gas supplier.
- This installation must conform to local codes or, in the absence of local codes, to the current CAN/CGA-B149 installation code (Canada) or National Fuel Gas Code ANSI Z223.1.2 (USA)

- To prevent injury, do not allow anyone who is unfamiliar with the stove to operate it.

**• To prevent injury, if the pilot or pilot and burners have gone out on their own, open the glass door and wait 5 minutes to air out before attempting to re-light the stove.**

- Always keep the area around these appliances clear of combustible material, gasoline and other flammable liquids and vapours.
- These appliances should not be used as a drying rack for clothing or for hanging Christmas stockings/decorations.
- Due to the paint curing on the stove, a faint odor and slight smoking will likely be noticed when the stove is first used. Open a window until the smoking stops.

Always connect this gas stove to a vent system and vent to the outside of the building envelope. Never vent to another room or inside the building. Make sure the specified vent pipe is used; properly sized and of adequate height to provide sufficient draft. Inspect the venting system annually for blockage and signs of deterioration.

**WARNING:** Failure to position the parts in accordance with the diagrams in this booklet, or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.

**WARNING:** Do not operate with the glass front removed, cracked or broken. Replacement of the glass should be done by a licensed or qualified service person.

- Never use solid fuels such as wood, paper, cardboard, coal, or any flammable liquids, etc., in this appliance.
- Do not use this heater if any part has been under water. Immediately call a qualified service technician to inspect the heater and to replace any part of the control or gas control systems that have been under water.
- Do not abuse the glass by striking it or slamming the door shut.

# TABLE OF CONTENTS

---

Safety Precautions.....	2
Table of Contents.....	3
Codes And Approvals.....	4
Specifications.....	5
Rating Label Location.....	5
Dimensions And Clearances To Combustibles.....	5
B-Vent Model.....	6
Direct Vent Model.....	6
Automatic Flue Gas Spill Switch.....	6
Operating Instructions.....	7
Before lighting.....	7
Pilot Lighting Instructions.....	7
Turn Off Gas To Appliance.....	8
Removing Burner Controls.....	8
Maintenance And Service.....	9
Routine Maintenance.....	9
Removing Burner Controls.....	10
Adjusting Venturi Air Settings.....	10
Maintaining Face and Surround Finishes.....	10
Initial Installation.....	11
Venting Fireplace Inserts.....	11
Preparing Your Focus For Installation.....	12
Fuel Conversion.....	13
Electrical Requirements.....	14
Installing the Blower.....	14
Converting A Direct Vent Fireplace To A B-Vented Fireplace.....	15
Converting A B-Vent Fireplace To A Direct Vented Fireplace.....	15
Gas Line Connection:.....	16
Secondary Installation.....	17
Installing Fan Controller.....	17
Log Set and Ember Installation.....	17
Removing and Installing The Brick Panel.....	18
Trouble Shooting.....	19
Parts List.....	20
Cast Parts List.....	21
Parts Diagram - Body.....	22
Parts Diagram - Surrounds.....	23
Parts Diagram - Cast Bay Front.....	24
Warranty.....	25
Installation Data Sheet.....	26

## CODES AND APPROVALS

---

**DIRECT VENT:** This type is identified by the prefix **DV**. This appliance draws all of its' air for combustion from outside the dwelling, through a specially designed vent pipe system.

**\*\* DV ONLY\*\***      **Certified for installation from 0-4500 ft (1372 m)**

**VENTED** Type is identified by the suffix **BV**. This appliance draws in room air for combustion and vent dilution air.

- These appliances have been tested by INTERTEK TESTING SERVICES (**Warnock Hersey**) and found to comply with the established standards VENTED GAS FIREPLACE HEATER in CANADA and the USA as follows:

**VENTED GAS FIREPLACE HEATER (FOCUS BV / DV) (NG/LPG)**

TESTED TO: ANSI Z21.88.1998    CSA 2.33.M98 VENTED GAS FIREPLACE HEATER  
CSA 2.17 GAS FIRED APPLIANCES FOR HIGH ALTITUDES

**\*\*BV ONLY\*\***      **Certified for installation from 0-2000 ft (610 m)**

**FOR INSTALLATIONS ABOVE 2000 ft (610 m)**

In Canada, there appliances are certified for altitudes of 0-2000 ft (610 m) and must be derated by 10% for installations at elevations between 2000 ft (610 m) and 4500 ft (1372 m).

**NATURAL GAS**

**INPUT;** 26,700 Btu/h (7.76 kW h)  
ORIFICE SIZE #39 DMS

**PROPANE GAS**

**INPUT;** 26,700 Btu/h (7.76 kW h)  
ORIFICE SIZE # 53 DMS

- In the USA, these appliance are certified for elevations up to 2,000 feet (810 m). For elevations above 2,000 feet (810 m), input should be reduced 4% for each 1,000 feet (405 m) above sea level.

**This ENVIRO FOCUS Fireplace:**

- Has been certified for use with either natural or propane gas. (See rating label.)
- Is not for use with solid fuels.
- Is approved for bedroom or bed sitting room. (Canada; must install an approved wall thermostat.
- Must be installed on a non combustible surface.
- Must be installed in accordance with local codes. If none exist, use current installation code CAN/CGA B149 in Canada or ANSI Z223.1/NFPA 54 in the USA.
- Must be properly connected to a venting system and not connected to a chimney flue serving a separate solid-fuel burning appliance.
- Must have inner flat unit glass installed before bay window can be installed.

**WARNING: For installation only in a solid fuel burning fireplace with a working flue and constructed of non-combustible material using a chimney liner kit.**


# SPECIFICATIONS

**WARNING:** Operation of this heater when not connected to a properly installed and maintained venting system can result in carbon monoxide (CO) poisoning and possible death.

## DIMENSIONS AND CLEARANCES TO COMBUSTIBLES:

Mantle pillar to glass door	- 9" (22.8 cm)
From floor to 8" wide mantle	- 38" (96.5 cm)
Minimum non-combustible surface in front of unit	- 11" (27.9 cm)

**Stove must sit on a non-combustible surface. Maintain sufficient clearances for operation, service and maintenance.**

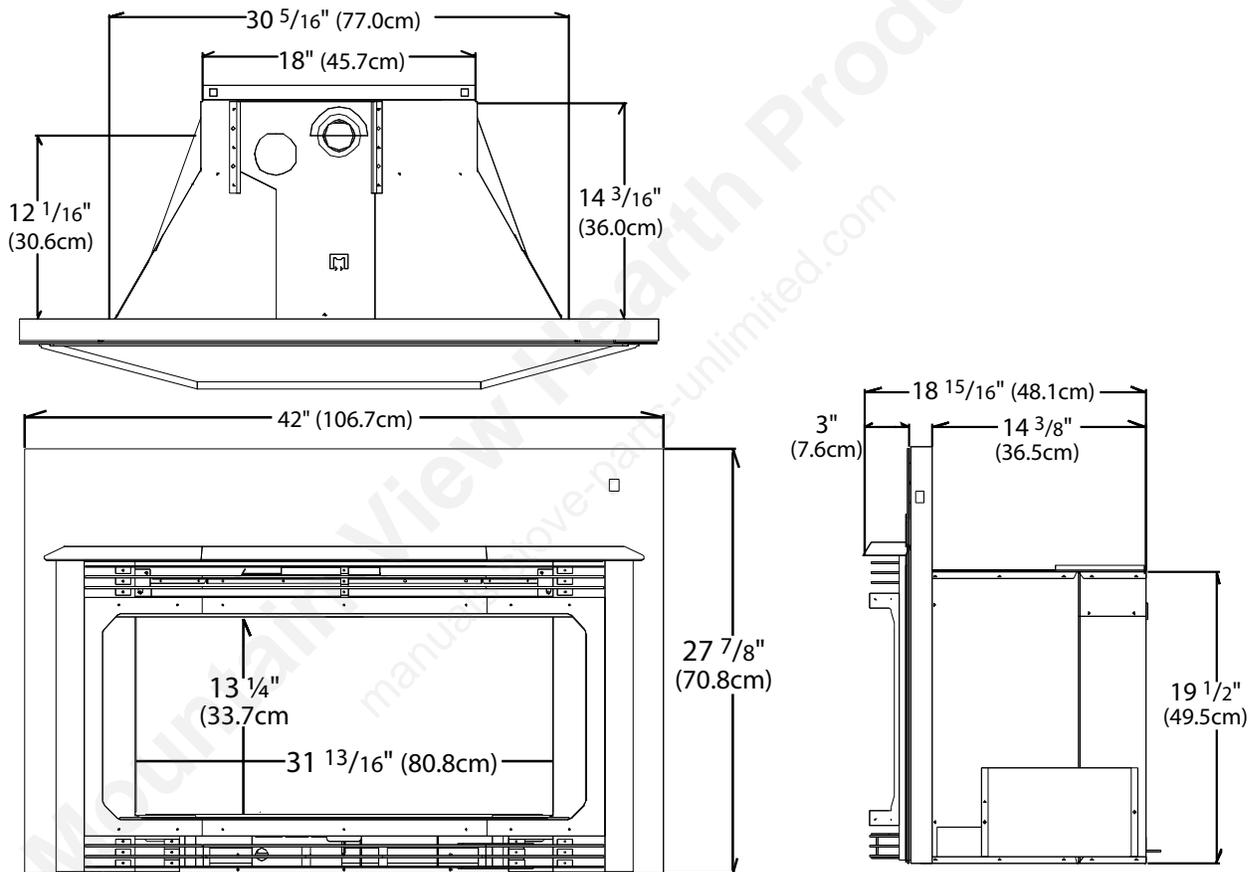

- A. Depth of unit into fireplace  
16" (41 cm)
- B. Depth of unit out of fireplace  
3" (7.6 cm)
- C. Minimum firebox size  
W 34" (86.36 cm) x H 21" (53.34 cm) x D 18" (45.72 cm)

## RATING LABEL LOCATION:

The rating label is located under the control panel and is attached to a rectangular metal sheet that is chained to the fireplace.

# SPECIFICATIONS

**WARNING:** Operation of this heater when not connected to a properly installed and maintained venting system can result in carbon monoxide (CO) poisoning and possible death.

## B VENT MODEL:

**WARNING:** This appliance has been designed to operate by drawing combustion air and dilution air from the room. It is also designed to draw room air for proper heat circulation from the sides of the unit. Blocking or modifying the louvers in any way can create hazardous situations, either through poor venting or by overheating. It is important that this unit has sufficient air circulation for proper venting and combustion. Provisions must be made for the supply of adequate combustion and ventilation air. These openings must not be blocked. The appliance must not be connected to a chimney flue servicing a separate solid fuel burning appliance.

## DIRECT VENT MODEL:

**WARNING:** This appliance has been designed to draw room air for proper heat circulation from the sides of the unit. Blocking or modifying the louvers in any way can create hazardous situations.

This model is vented with TWO (2) 3" aluminum or stainless steel flex vent leading into a co-linear to co-axial vent adaptor and using a Simpson Dura Vent vertical termination cap. The flue collars of this model will fit inside of standard 3" vent and may be fastened directly to the vent. The Exhaust vent is in the center of the flue connector. The Air Intake is on the left side of the vent collar plate (this outlet is not in the center it is off to one side of the vent collar plate.)


Check periodically that the vents are unrestricted. Also ensure that all direct vent pipes have been properly sealed and installed after routine inspection or cleaning. The air intake and exhaust pipes must be installed in the correct locations on the removable draft hood connector.

## AUTOMATIC FLUE GAS SPILL SWITCH:

**NOTE:** THIS HEATER MUST BE PROPERLY CONNECTED TO A VENTING SYSTEM. THIS HEATER IS EQUIPPED WITH A VENT SAFETY SHUTOFF SYSTEM DESIGNED TO PROTECT AGAINST IMPROPER VENTING OF COMBUSTION PRODUCTS. THIS SAFETY SWITCH IS LOCATED ON THE REAR OF THE APPLIANCE CLOSE TO THE DRAFT HOOD RELIEF OPENING. IF THE SWITCH TRIPS MORE THAN ONCE, THE VENTING SHOULD BE INSPECTED BY A QUALIFIED SERVICE TECHNICIAN FOR POSSIBLE BLOCKAGE OR SEVERE DOWN DRAFT CONDITIONS.

**BV Only:** The draft hood must be in the same pressure zone as the air inlet. To inspect draft from the front of the unit, locate the 1/4" tube between the louvers and check for a draft using smoke. A vacuum or suction into the tube will indicate proper drafting.

This model can be vented with 4" aluminum or stainless steel flex vent and/or certified Type B Gas Vent. The flue collar of the appliance will fit inside of a standard 4" vent and may be fastened directly to the vent, check periodically that the vent is unrestricted and an adequate draft is present when the unit is in operation.

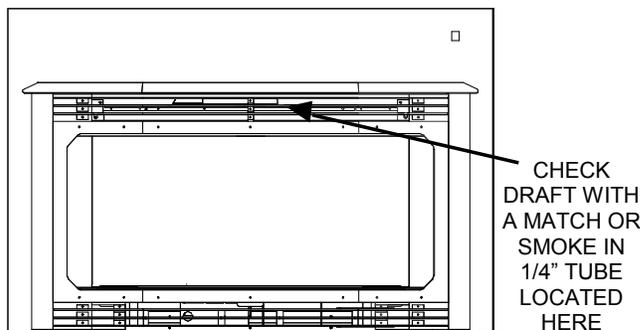

# OPERATING INSTRUCTIONS

## For Your Safety, Read Safety Precautions And Lighting Instructions Before Operating

**WARNING: IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY A FIRE OR EXPLOSION MAY RESULT, CAUSING PROPERTY DAMAGE, PERSONAL INJURY OF LOSS OF LIFE.**

### BEFORE LIGHTING:

This appliance is equipped with a pilot, which must be lit by following these instructions exactly:

A) BEFORE LIGHTING, smell around the appliance area for gas. Smell next to the floor because some gas is heavier than air and will settle on the floor.

#### WHAT TO DO IF YOU SMELL GAS:


- Do not try to light any appliance
- Do not touch any electrical switch
- Do not use any phones in your building
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

B) Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in, or turn by hand, do not try to repair it. Force or attempted repair, may result in a fire or explosion. Call a qualified service technician.

C) Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any part of the gas system that has been under water.

### PILOT LIGHTING INSTRUCTIONS:

The pilot light will remain on when the fireplace is in regular use, but when the fireplace is used only in certain seasons, the pilot may be extinguished during the off months. When the pilot is to be re-lit, the following steps MUST be followed.

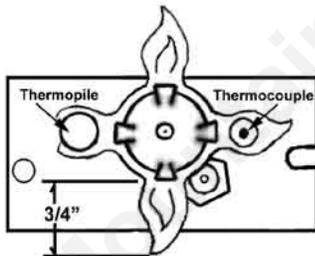

1. STOP! Read the safety information above.
2. Turn off all electrical power to the appliance.
3. Turn the gas control knob CLOCKWISE (↻) to the OFF position.
4. Open door. **Wait five (5) minutes to clear out any gas.** Close Door. **If you smell gas, including near the floor, STOP! Follow A-C in the above safety information. If you do not smell gas, continue to the next step.**
5. Find the pilot located to the right between the front and rear burner.


6. Turn the gas control knob COUNTER CLOCKWISE (↺) to PILOT.

7. Push the gas control knob in fully and hold. Immediately light the pilot by pushing the piezo spark ignitor. Keep knob depressed for about 30 seconds after pilot is lit. Release knob. If pilot goes out, repeat steps 4 through 6. If the knob does not pop up when released or if the pilot will not stay lit after several tries stop and immediately turn the gas control knob to «OFF» and call your service technician or gas supplier.

8. Turn gas control knob COUNTER CLOCKWISE (↺) to the «ON» position. Flip burner switch to "ON" Turn "HI / LO" knob to the desired setting. Turn on all electrical power to the unit

**NOTE:** Make sure the pilot light completely engulfs the thermocouple and that the burner lights completely.

**Warning:** The gas valve has a lockout device that prevents the pilot burner from being re-lit until the thermocouple has completely cooled.

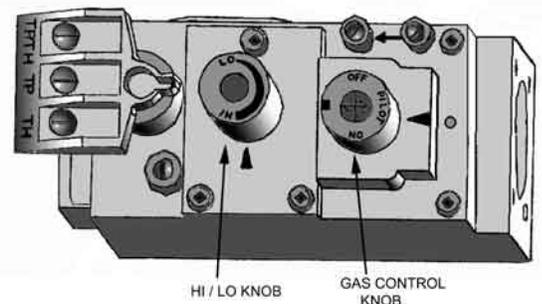

# OPERATING INSTRUCTIONS

## For Your Safety, Read Safety Precautions And Lighting Instructions Before Operating

**WARNING: IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY A FIRE OR EXPLOSION MAY RESULT, CAUSING PROPERTY DAMAGE, PERSONAL INJURY OF LOSS OF LIFE.**


### TURN OFF GAS TO APPLIANCE:

1. To turn off burners only, flip burner switch to off.
2. Turn the gas control knob CLOCKWISE (↻) to "OFF." DO NOT FORCE.
3. Turn off all electrical power to the appliance if service is to be performed.

**IMPORTANT NOTE:** When the unit is turned on for the first time, it should be turned onto high without the fan on for the first 4 hours. This will cure the paint, logs, gasket material and the other products used in the manufacturing process. It is advisable to open a window or door, as the unit will start to smoke and can irritate some people. After the unit has gone through the first burn turn the unit off including the pilot, let the unit get cold then remove the glass door and clean it with a good gas fireproof glass cleaner, available at your local ENVIRO dealer.

### REMOVING BURNER CONTROLS:

1. Shut of gas supply to appliance.
2. Remove surround panels by pulling up then out. Disconnect gas line from the valve. Disconnect harness at connector on side of unit.
3. Open the door and remove the log. Remove the burner tray assembly by removing the TWO screws in the center of the burner. Slide tray to the left, lift tray out.
4. Remove right and left side brick panel as per instructions. Undo the three screws that hold the air deflector to the rear of firebox. Undo the remaining screws that hold the burner controls in the firebox.
5. Install in the reverse order.

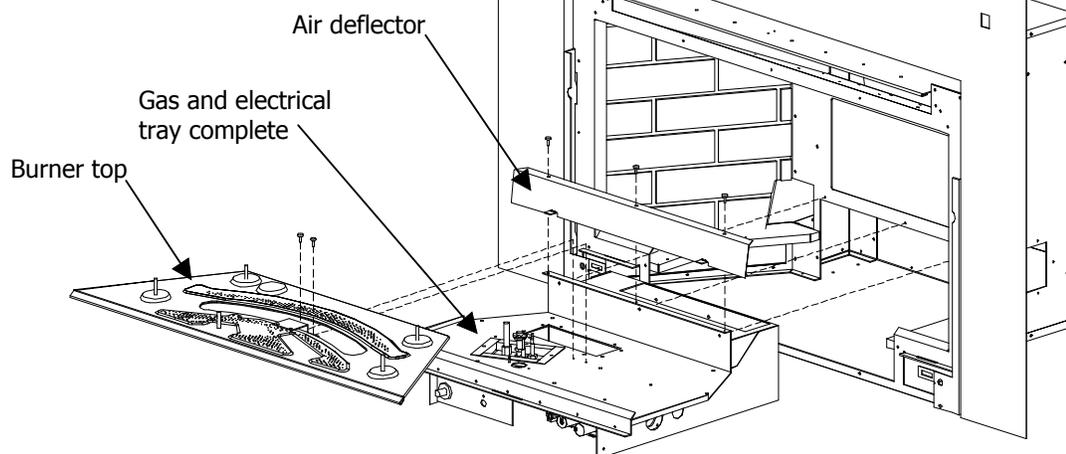

# MAINTENANCE AND SERVICE

---

## **ROUTINE MAINTENANCE:**

At least once a year, run through the following procedures to ensure the system is clean and working properly. Periodically check the burner and pilot. Check the burner to see if all the ports are clear and clean. Check the pilot to make sure it is not blocked by anything. The pilot flame should be blue with little or no yellow on the tips.

## **OPENING THE DOOR:**

Turn unit off and wait until the appliance has cooled down.

Remove the decorative fascia by lifting up and remove from the slots in the body of the unit.

If a clip-on bay window is installed, lift up and remove from the slots in the body of the unit.

Undo the two  $\frac{5}{16}$ " bolts at the top of the door frame and then lift the glass and frame, being careful that the glass does not fall out of the door frame assembly. Install in the reverse order.

Ensure the door is properly fastened after cleaning before attempting to re-light the appliance.

## **CLEANING THE GLASS:**

### **Do not clean glass when hot**

It will be necessary to clean the ceramic glass periodically. During a cold start up, condensation will sometimes form on the glass. This is a normal condition with all gas fireplaces and stoves. However, this condensation can allow dust and lint to cling to the glass surface. Initial paint curing of the appliance can leave behind a slight film on the glass. This is a temporary problem. It is therefore recommended that the glass be cleaned initially after the first two weeks of use.

Depending upon the amount of use, cleaning should be required no more than two or three times per season.

To clean the door, use a **mild glass cleaner** and a **soft cloth**. **Abrasive cleaners will damage the glass and gold surfaces.**

## **CLEANING THE FIREBOX:**

Remove the log carefully from the firebox. Gently remove the embers and place on a piece of paper towel, until ready to replace.

Vacuum the bottom of the firebox thoroughly. Carefully clean off any dust on the logs and brick panels and remove any lint from the main burner and pilot burner.

After carefully replacing the log and embers in their correct positions, and the door has been resealed, re-light the pilot, following the instructions on the attached label.

## **REPLACING DOOR GLASS:**

The glass in this appliance is ceramic. If the glass is damaged or broken a factory replacement must be fitted.

### **To Replace:**

- Open door, remove the glass carefully.
- Install the new piece of glass with the large bulb in the gasket tape against the unit. Place the joint in the tape in a bottom corner. Close door.

**Glass must be purchased from an Enviro dealer. No substitute materials are allowed.**


**Warning:** Clearances must be sufficient to allow access for maintenance and service

**Warning:** Failure to position the parts in accordance with this manual, or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.

# MAINTENANCE AND SERVICE

## REMOVING BURNER CONTROLS:

1. Shut off gas supply to appliance.
2. Remove surround panels by pulling up, then out. Disconnect gas line from the valve. Disconnect harness at connector on side of unit.
3. Open the door and remove the log. Remove the burner tray assembly by removing the TWO screws in the center of the burner. Slide tray to the left, lift tray out.
4. Remove right and left side brick panel as per instructions. Undo the three screws that hold the air deflector to the rear of firebox. Undo the remaining screws that hold the burner controls in the firebox.
5. Install in the reverse order.

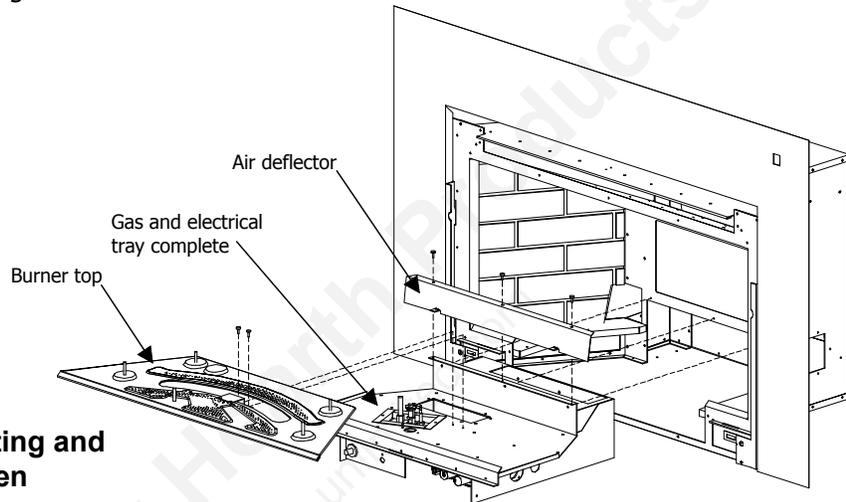


**Caution: Bleed lines before lighting and light pilot with door open**

## ADJUSTING VENTURI AIR SETTINGS:

There is only one venturi and one air shutter to be adjusted.

When installing the burner top, ensure that the venturi tube is engaged to the air shutter adjustment rod.

Use this small venturi adjustment rod to achieve a proper and efficient flame.

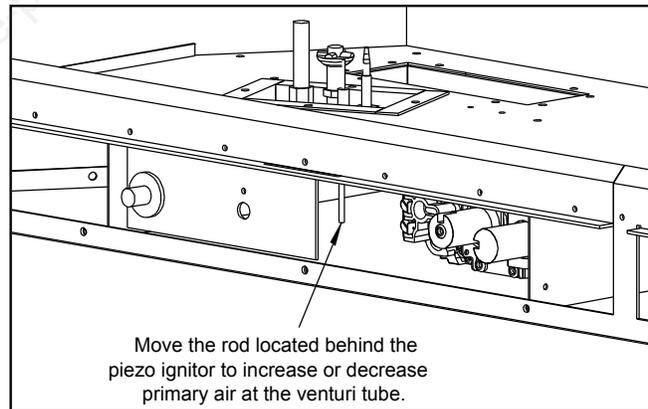

## MAINTAINING FACE AND SURROUND FINISHES:

When a plated surround or face is received, it should be unpacked/unwrapped carefully to avoid getting anything on the surface of the finish, including cleaners, polish and finger prints. If your fingers come into contact with the finishes, the oils left as fingerprints on the plating can become permanently etched in the surface. To prevent this, clean all finishes with denatured alcohol after the installation and prior to first firing of the fireplace.

If your fingers come into contact with the antique copper finish, the oils left as fingerprints on the copper can cause discoloration, which will eventually turn green in that area. You can clean the patina or discolored areas of the antique copper finish with "OO" 3M green sanding pads. These can be purchased from most hardware stores. On the areas with discoloration, use the sanding pads to sand in the same direction as the brushed finish, then blend the finish by feathering in the surrounding area. This refinishing procedure has been approved by the manufacturer and will not harm the finish. Please note: ANTIQUE COPPER IS THE ONLY FINISH THAT CAN BE SANDED, DO NOT SAND PEWTER, GOLD OR NICKEL FINISHES.


# INITIAL INSTALLATION

## QUALIFIED INSTALLERS ONLY

### VENTING FIREPLACE INSERTS:

The **ENVIRO** FOCUS may be installed and vented into any solid fuel fireplace that has been installed in accordance with the National, Provincial/State and local building codes and has been constructed of non-combustible materials.

An approved chimney liner and rain cap must be used. A throat connector or flashing **must** be installed to ensure a tight seal, top performance, safety and efficiency. Carefully follow the manufacturer's instructions which accompany the chimney liner kit.

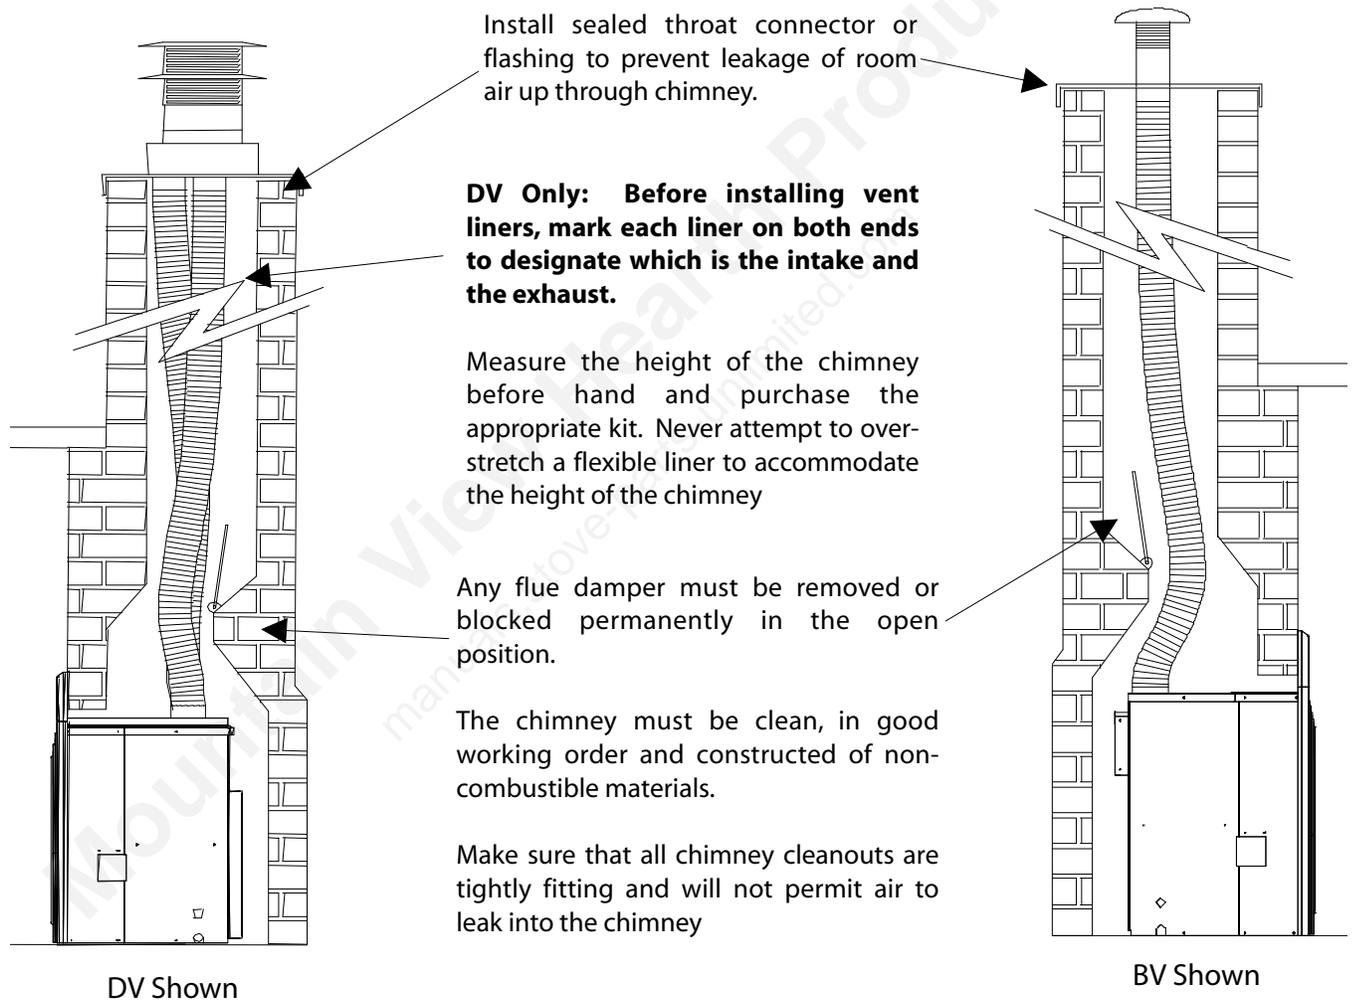

Remove the vent collar plate from the top of the insert and connect it securely with sheet metal screws and/or hose clamps. Check for any tears in the liner at this point. (See also Initial Installation Instructions.)

**IMPORTANT:** The screws that hold the vent collar plate in its' approved position must be installed.



# INITIAL INSTALLATION

## QUALIFIED INSTALLERS ONLY

### PREPARING YOUR FOCUS FOR INSTALLATION:


- Remove the packaging from the appliance and surround panels; check to make sure there is no damage. Carefully check the glass door. Do not use the unit if it is damaged. In the event damage is found, please report it to both the courier and your dealer as soon as possible.
- Carefully clean the fireplace and flue before installing the stove. Failure to do so may result in fumes or dirt being blown into the room and may cause a fire leading to death or serious injury.

1. Remove the unit from the box and remove all packaging material from the appliance.
2. Open the door by removing the two 5/16" bolts located at the top outside corners of the glass frame. Lift door up and remove from unit. **CAUTION GLASS MAY SEPARATE FROM DOOR.**

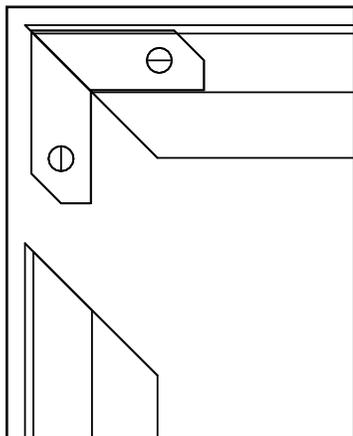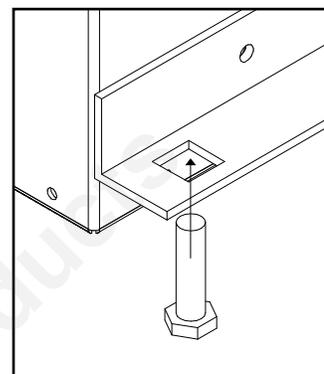

3. Remove log and ember set and all wrapping material from the stove. Remove wrapping material from log and embers and check for any damage. If damage is observed, do not use unit and contact your local dealer.
4. Remove the vent collar plate from the top of the stove by unscrewing the two T20 Torx screws located on the center top of the stove. Slide collar plate backwards. Properly secure the vent collar plate to the flexible vent pipe liner(s) previously installed in the chimney. Be careful not to over-stretch the liner(s)
5. Install the leveling legs. (Thread the 5" (13 cm) bolt and locknut up into the captive nut from the bottom).
6. Place the unit part way into the fireplace. Connect the fireplace insert's flexible gas line to the household gas supply, using locally approved methods. Place the electric cable so it can be connected to the power supply.
7. As you push the unit into its' final position in the fireplace, reinstall the vent collar plate to the stove by sliding it along the draft hood and secure with the screw. Adjust the leveling legs to ensure the unit is level.

8. Place one side and the top of the brass trim onto the surround panel and use corner bracket to secure pieces together. Place the second side of brass trim on the surround panel and secure in the same manner. Install spring clips provided behind the brass trim to secure trim to the surround panel.
9. Connect the wires from the unit to the ON/OFF/THERMOSTAT switch and the FAN CONTROLLER (see "Electrical Requirements" section).
10. Place the assembled surround panel around the stove, align the slots. Push back then down to engage the surround panel hooks with the slots in the fireplace. Install the decorative fascia or bay window options to the appliance by aligning the hooks and the slots in the fireplace as seen in the surround panel installation.

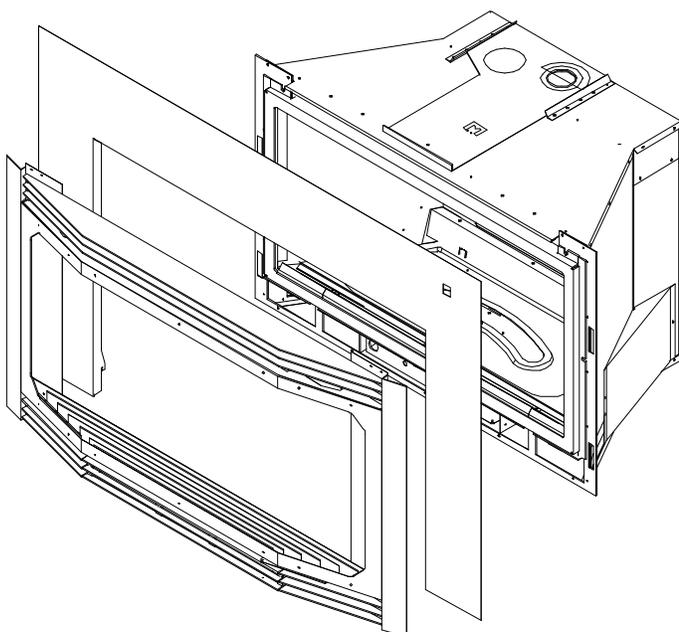

# INSTALLATION

## QUALIFIED INSTALLERS ONLY

### FUEL CONVERSION:

**Warning: A qualified service technician, in accordance with the manufacturer's instructions as well as all applicable authority having jurisdiction, shall install this conversion kit. If the information in these instructions is not followed exactly, a fire, explosion or CO poisoning, may result. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper or complete until the operation of the converted appliance is checked as specified in the owner's conversion kit.**

Please read and follow these instructions. Also please read the instruction guide lines provided by S.I.T on how to remove and install the HI-LOW regulator.

- STEP 1.** Carefully inspect all parts supplied with this conversion kit.
- STEP 2.** Shut the gas off and disconnect the main gas line from the unit.
- STEP 3.** Open the door by unscrewing the two 5/16" bolts on the top corners of the doorframe. Lift the door off the mount at the bottom of the doorframe. Remove the burner tray top from the appliance.
- STEP 4.** Change the regulator on the front of the gas valve. (Follow the instructions provided by S.I.T)
- STEP 5.** To change the pilot orifice, simply pull the pilot hood straight up to access the pilot injector. Using a 5/32" Allen key remove the pilot injector and replace with new pilot injector supplied in the conversion kit.
- STEP 6.** Install the new pilot injector supplied with this conversion kit. Simply screw the new injector inside the pilot hood and reinstall pilot hood by placing hood on the assembly, lining up the key-way and snap into place.
- STEP 7.** Remove the main burner orifice with a 1/2" deep socket.
- STEP 8.** Install the new orifice supplied. Be sure to put a bead of pipe thread sealant or approved Teflon tape on the orifice before installing into the burner assembly.
- STEP 9.** Re-install burner tray, log set and door.
- STEP 10.** Reconnect the gas line to the unit. Do a leak check using a soap and water solution or an approved method on the gas supply line.
- STEP 11.** Re-light the appliance to insure proper operation and proper flame appearance. Be sure to adjust the venturi setting to achieve an efficient flame in the fireplace.
- STEP 12.** MAKE SURE that the sticker provided by S.I.T is installed to signify that this valve has been converted to a different type of fuel. Also make sure that the rating plate has a conversion label to show that this unit has been converted to a different fuel type.

A VISUAL CHECK OF THE REGULATOR KNOB IS NECESSARY TO DETERMINE WHETHER OR NOT THE REGULATOR IS THE CORRECT PART. A 50% TURN DOWN REGULATOR WILL HAVE ONLY ONE CORNER ON THE KNOB.

1 50% turn down HI-LOW Regulator with 3 T-20 Torx screws

1 pilot injector

1 Main orifice

	NATURAL GAS	PROPANE
Pilot Orifice.	.51mm	.35mm
Burner Orifice.	#38 dms	#52 dms
Venturi Settings	1/16" min	3/16" min


Conversion instructions.

Labels to show conversion.

# INITIAL INSTALLATION

## QUALIFIED INSTALLERS ONLY

### ELECTRICAL REQUIREMENTS:

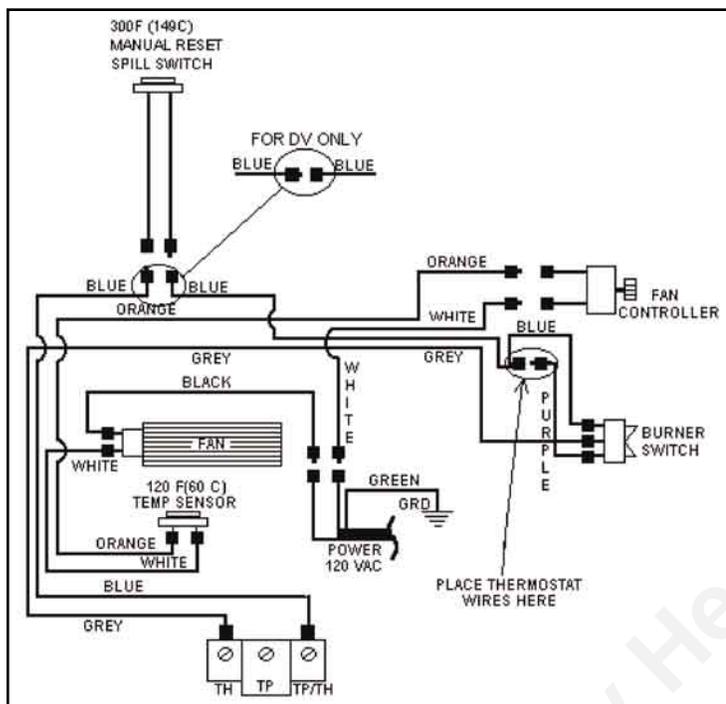

The **Focus** will operate without electrical power. This model has a Millivolt gas control which uses the pilot flame to generate enough electricity to operate the main burners. This appliance when equipped with a blower, must be electrically connected and grounded in accordance with local codes or in the absence of local codes, with the current CSA C22.1 CANADIAN ELECTRICAL CODE Part 1, SAFETY STANDARDS FOR ELECTRICAL INSTALLATIONS, OR THE NATIONAL ELECTRICAL CODE ANSI / NFPA 70 in the U.S.

**WARNING:** Electrical grounding instructions. This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard, and should be plugged directly into a properly grounded three-prong outlet. DO NOT cut or remove the grounding prong from this plug.

**CAUTION:** Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

### INSTALLING THE BLOWER:

1. Turn the unit off, open the door and remove the log set. Remove the burner tray top by removing the two screws located in the center of the burner tray. Slide tray to the left and lift out. Remove brick panels (see Removing and Installing Brick Panels).
2. Remove the surround panel by lifting straight up and then pull out to free from the body of the unit. Turn gas supply off and remove gas connection. Disconnect the wiring from the side of the appliance.
3. Remove the screws that hold the air deflector located on the back firewall and undo the remaining screws that hold the burner assembly in the appliance. Carefully remove the gas tray assembly from the firebox, ensuring that no wires or gas lines are damaged.
4. Remove the blower and housing from the gas tray assembly by removing the fastening screws located on the back of the gas tray assembly. Disconnect the wiring from the fan temperature sensor and remove.
5. Hook up wires from the new blower to main wiring harness and fan temperature sensor. Install the blower in the reverse order as described in Step 4.
6. Reinstall the completed gas tray into the firebox, being careful not to damage any wires or gas lines. Properly secure the gas tray assembly in the firebox. Hook up gas lines and wiring harness. Perform a gas leak check on all gas line with a soap and water solution or an approved method.
7. Install surround panel. (Return unit to original location if moved). Re-install brick panels, burners, logset and door.
8. Check burner and blower assembly for proper operation.

# INITIAL INSTALLATION


## QUALIFIED INSTALLERS ONLY

### CONVERTING A DIRECT VENT FIREPLACE TO A B-VENTED FIREPLACE:

#### Parts required for conversion:

- 1-300°F (149°C) manual reset spill switch and wires
- 1-Draft hood (4" chimney connection)
- 2-Air channels
- 1-Draft hood diverter


1. Remove the chimney connector, fresh air cover plates and draft hood cover plate.
2. Install the 300° (149°C) spill switch in the location provided.
3. Install the two fresh air channels in the correct locations.
4. Install a new 4" chimney liner into the existing and attach with 3 sheet metal screws evenly spaced to new 4" chimney connector.
5. Test fire the appliance and ensure proper operation. A venturi adjustment could be required to achieve an efficient flame. Improper operation or adjustment could result in Carbon Monoxide production causing personal injury or property damage.

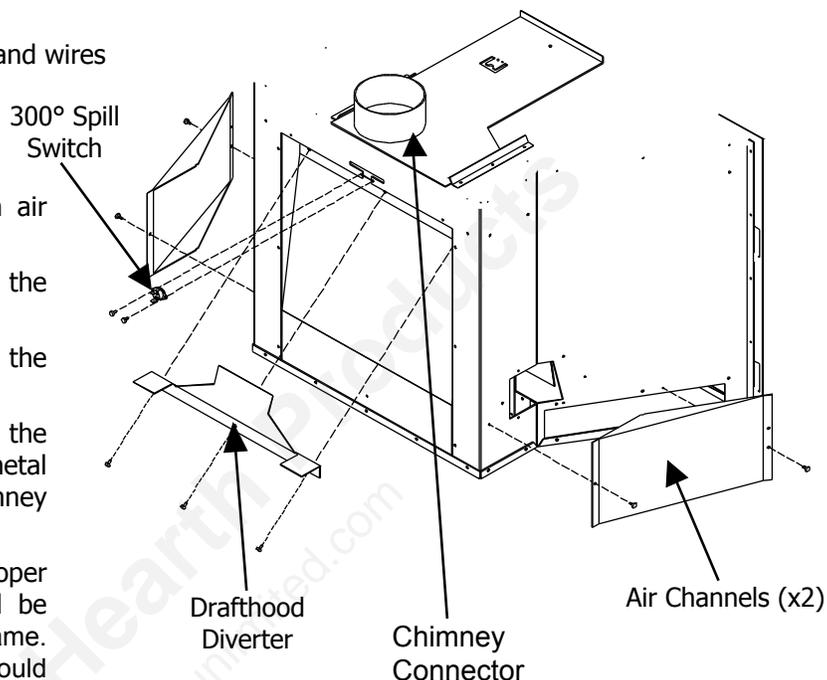

### CONVERTING A B-VENT FIREPLACE TO A DIRECT VENTED FIREPLACE:

#### Parts required for conversion

- 1-Draft hood (2-3" dual pipe chimney connector)
- 2-Air channel cover plates
- 1-Draft hood cover plate.

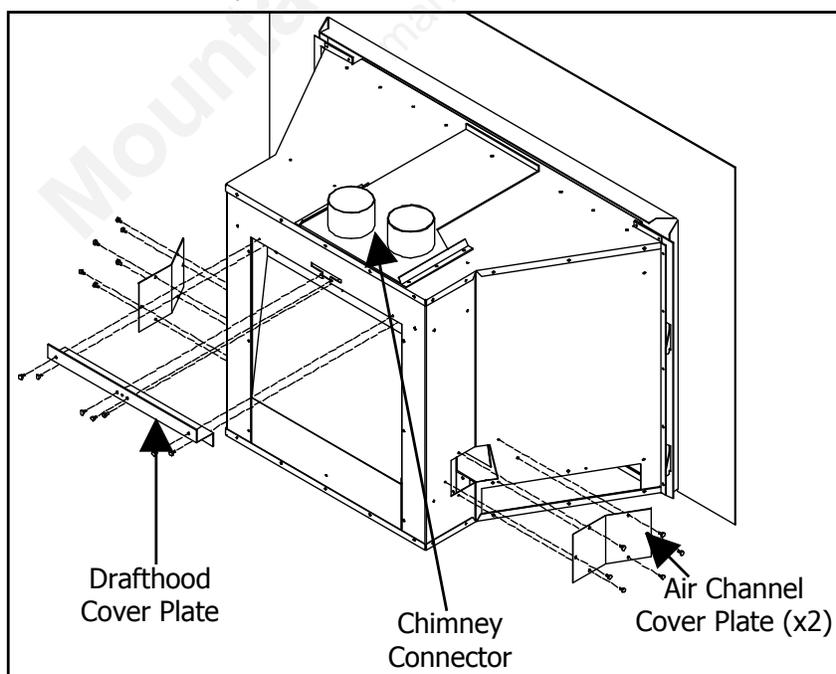

1. Remove the chimney connector, 300° spill switch, two (2) B-vent air channels and B-vent draft diverter plate.
2. Install the two (2) air channel cover plates in the locations provided.
3. Install the draft hood cover plate in the location provided.
4. Install two (2) 3" chimney liners in the existing chimney, securing the 3" liners with 3 sheet metal screws evenly spaced to the new chimney connector.
5. Test fire the appliance and ensure proper operation. A venturi adjustment could be required to achieve an efficient flame. Improper operation or adjustment could result in Carbon Monoxide production causing personal or property damage.

# INITIAL INSTALLATION

## QUALIFIED INSTALLERS ONLY

### GAS LINE CONNECTION:


**Warning:** Only persons licensed to work with gas piping may make the necessary gas connections to this appliance.

#### Gas Line Connection:

•This fireplace is equipped with a certified flexible pipe located on the right side of the unit, terminating in a 3/8" male NPT fitting. Consult the local authorities for local codes or use the CAN/CGA B149 (1 or 2) installation code in Canada. In the US, gas installations follow either local codes or the current edition of the National Fuel Gas Code ANSI Z223.1.

•The efficiency of this unit is a product thermal efficiency rating determined under continuous operating conditions and was determined independently of any installed system.

The appliance and its' shut-off valves must be disconnected from the gas supply piping system during any pressure testing where the pressure **exceeds** 1/2 psig (3.45kPa) or the valve will be damaged.

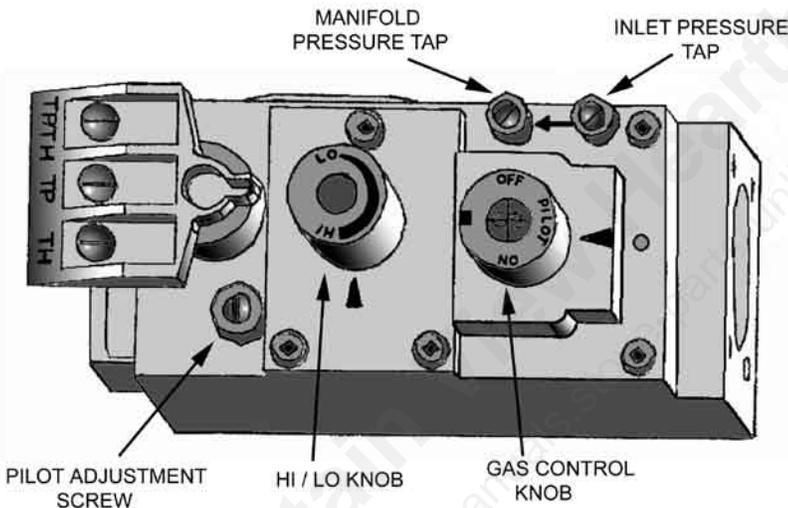

The unit must be isolated from the gas supply piping system by closing its' individual manual shut off valve during any pressure testing of the gas supply piping system at pressures **equal to or less than** 1/2 psig (3.45 kPa).

**Always check for gas leaks with a soap and water solution after completing the required pressure test.**

#### TO TEST VALVE PRESSURES:

The pressure taps are located on the top right of the valve.

- Turn set screw 1 turn counterclockwise to loosen.
- Place 5/16in (8mm) I.D. hose over the pressure taps.
- Check pressures using a manometer.
- When finished, release pressure, remove hose and tighten set screw.

Main Burner	Natural Gas (in wc/kPa)	Propane Gas (in wc/kPa)
Orifice:	#38 DMS	#52 DMS
Manifold Press:	3.8 / 0.95	11.0 / 2.74
Min. Manifold Press:	1.1 / 0.27	2.7 / 0.67
Max. Supply Press:	7.0 / 1.74	13.0 / 3.28
Min. Supply Press:	5.0 / 1.24	12.0 / 2.98
Max. BTU Input:	30,000/ 8.8kWh	28,500/ 8.2kWh
Min. BTU Input:	15,000/ 4.4kWh	14,000/ 4.1kWh

**NEVER USE AN OPEN FLAME FOR LEAK TESTING.**


# SECONDARY INSTALLATION

## INSTALLING FAN CONTROLLER

This is for installing the fan controller when using the cast iron faceplate and bay door assembly.

Install the fan controller in the control panel already provided on this unit (see right).

Cut one wire tie so that the wires can be dressed correctly through the body of the unit. Place the Orange and White wires behind the front edge of the fireplace bottom, and connect the two wires at the fan controller. Use wire ties provide to bundle and secure wire.

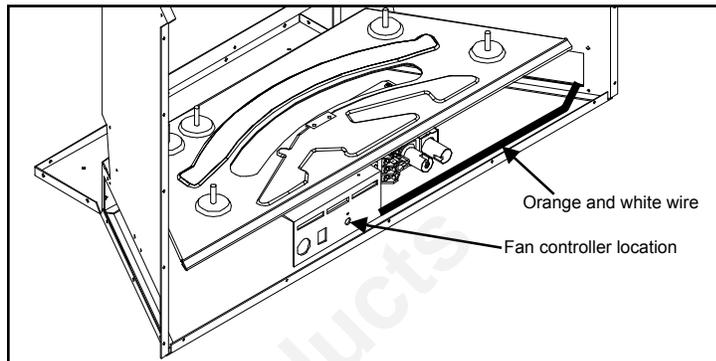

## LOG SET AND EMBER INSTALLATION:



The placement of the logs is not arbitrary. If they are positioned incorrectly, the flames can be "pinched" and will not burn correctly. The burner comes with placement pins and rest areas, which make alignment easier. Using the pictures provided, carefully set the logs in place.


**NOTE: The logs are fragile and should be handled with care.**

Place the rear log on the two back placement pins.

Install the left front log on the left placement pin with the narrow end of the log resting on the rectangular rest area. Install the right front log on the right placement pin with the narrow end of the log resting on the rectangular rest area. These two logs should meet tip to tip on the rest area.

One end of the big log twig will rest on the pin on the right log and the other will lay within the left rest area. The small log twig should be placed so it sit completely within the right rest area.

Once the logs are in place the embers can be placed lightly between the logs. Bags of ceramic fiber embers and rock wool are provided. The ceramic fiber comes in chunks that are about 2"-4" (5-10cm) long. Break these roughly in half and place them irregularly around the burner. When there is a sparse but even layer of embers, spread the rock wool in the same manner. DO NOT pack this ember material as this could create an unsafe condition. The pieces should be lightly place so they don't completely block any of the tiny ports. DO NOT allow any of the embers to rest against the pilot assembly.

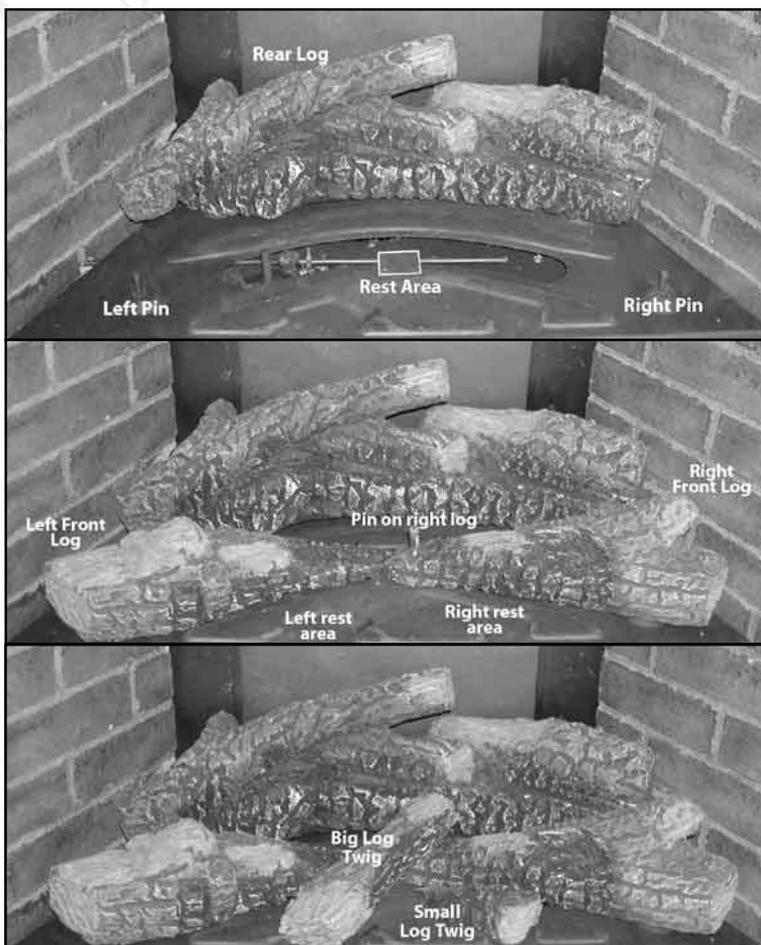

# SECONDARY INSTALLATION



**Caution:** Use only the type of ember material supplied with this fireplace. Due to the irregular size of the ember material, there may be more than required. Use of other foreign materials on the burners may create dangerous conditions.

If over time, through cleaning and servicing, these embers require replacement, contact your nearest Enviro dealer.

**IMPORTANT:** Upon the first light up after installing logs and embers, watch for ignition to ALL burner ports. If a long delay is noted wait for the appliance to cool down:

- Open the front door of the appliance
- Carefully reposition the embers, making sure that the burner ports are not plugged or blocked.



## REMOVING AND INSTALLING THE BRICK PANEL:

Open the door. Remove the log set. Remove the burner tray by undoing the hold-down screws located in the center of the pan burner and sliding the assembly to the left, then up.

Gently pull right brick side panel inward from the bottom back. Pull towards the back then out, freeing it from the front retainer.

Caution Pilot may damage panel. Remove left side panel in the same fashion.

To install, insert front edge of brick panel into the retainer and very gently move panel forward and out until flush against firebox side.

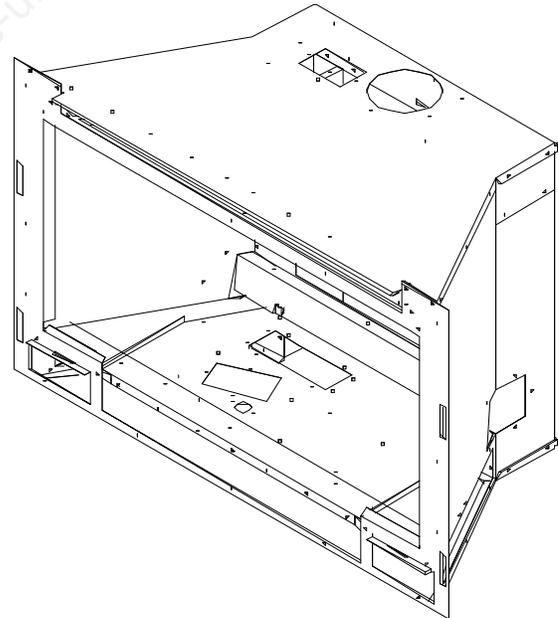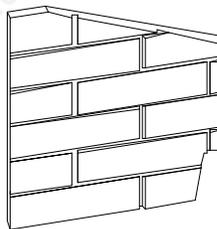

# TROUBLE SHOOTING

Problem	Possible Cause	Solution
Spark will not arc to the pilot after repeatedly pressing the spark ignitor	Defective piezo ignitor	<ul style="list-style-type: none"> <li>• Check connections to ignitor</li> <li>• If ignitor connections are good but no spark, replace ignitor.</li> </ul>
	Broken spark electrode	<ul style="list-style-type: none"> <li>• Check for broken ceramic insulation. Replace electrode if broken.</li> </ul>
	Mis-aligned spark electrode	<ul style="list-style-type: none"> <li>• If spark is not arcing from electrode to pilot, adjust by loosening the screws on the pilot base. Adjust and tighten.</li> </ul>
Pilot will not remain lit	Problem with thermocouple circuit	<ul style="list-style-type: none"> <li>• Check for proper connection of the thermocouple to the rear of the valve; if loose fully tighten.</li> <li>• Check pilot for full flame impingement around thermocouple. If flame is too small, check gas pressure, adjust pilot rate screw, check pilot head for damage.</li> <li>• Check thermocouple voltage at valve. It must be greater than 5mV. If low, replace thermocouple.</li> </ul>
	Air in gas line (pilot dies while knob is depressed)	<ul style="list-style-type: none"> <li>• Bleed line.</li> <li>• Check gas line pressure.</li> <li>• Contact dealer.</li> </ul>
Burners will not remain lit	Problem with thermopile circuit	<ul style="list-style-type: none"> <li>• Check gas line pressure .</li> <li>• Check for flame impingement in thermopile. If low, see "Pilot will not remain lit".</li> <li>• Check thermopile for minimum of 300mV when burner is switched on.</li> <li>• Check wiring to thermostat for breaks</li> </ul> <p><b>BV ONLY:</b></p> <ul style="list-style-type: none"> <li>• Check for spillage at draft hood that may trip spill switch</li> </ul>
Flame lifting	Leak in vent pipe	<ul style="list-style-type: none"> <li>• Check for leaks in vent connections.</li> </ul>
	Improper vent configuration	<ul style="list-style-type: none"> <li>• Check vent configuration with manual.</li> </ul>
	Terminal may be recirculating flue gases	<ul style="list-style-type: none"> <li>• Check to see if terminal is on correctly.</li> <li>• May need to install high wind termination cap.</li> <li>• Contact dealer.</li> </ul>
Glass fogs up	Normal Condition: after the appliance warms up the glass will clear. **Due to additives in gas, glass may get hazy during operation** Clean as needed	
Blue Flames	Normal during start up: flames will yellow as the fireplace heats up.	
Flames are burning "dirty" or sooting	Flame impingement	<ul style="list-style-type: none"> <li>• Check log positioning.</li> <li>• Increase primary air by opening the venturi shutter. See also "Burners will not remain lit".</li> </ul>
<b>BV ONLY:</b> Insufficient air for combustion	<ul style="list-style-type: none"> <li>• Air tight house.</li> <li>• A vacuum in room due to other air-moving device.</li> </ul>	<ul style="list-style-type: none"> <li>• Supply make up air to the unit.</li> </ul>

# PARTS LIST

Part #	Part Description
30-030	Extension Knob (Pilot)
30-031	Extension Knob (HI-LO)
30-034	Relief Door & Gasket
50-343	Blank Orifice #73
50-506	Rear Log
50-507	Left Front Log
50-508	Right Front Log
50-509	Big Log Twig
50-510	Small Log Twig
50-520	300°F (149°C) Temperature Sensor N/C Spill Switch
50-528	BV Flue Collar Gasket
50-529	DV Flue Collar Gasket
50-531	Steel Bay Cover - Painted
50-588	Log Set & Embers (Post S/N 12663)
50-634	Dual Bulb Door Gasket (10 feet)
50-897	Pan Burner
EC-001	120°F (49°C) Ceramic Fan Temperature Sensor
EC-006	S.I.T. Nova Valve NG (50% Turn Down)
EC-007	S.I.T. Nova Valve LP (50% Turn Down)
EC-009	Thermocouple (Post 10/00)
EC-011	Spark Electrode with Ignitor Cable (Post 10/00)
EC-012	Thermopile
EC-015	Fully Assembled Pilot NG
EC-016	Fully Assembled Pilot LP
EC-021	Pilot Gasket
EC-023	S.I.T. Piezo Ignitor
EC-026	FPI Burner Switch
EC-039	FPI Fan Controller - 115V
EC-041	FPI Fan Controller Knob
EC-042	Domestic Power Cord - 115V
EC-044	Heyco Strain Relief
EC-046	Embers (Coal & Wool)
EC-069	Convection Blower - 115V
EG31-052	Burner Control Assembly NG
EG31-053	Burner Control Assembly LP
EG31-062	18" Flex Line With ¾ Elbow
EG31-072	Log Set With Embers (Pre S/N 12663)
EG31-074	Brick Liner - Ceramic

Part #	Part Description
EG31-075	Burner Switch Bracket
EG31-089	Window Channel Tape
EG31-090	1 Piece Glass With Tape
EG31-091	Steel Bay 3 Pieces Glass Set with Tape
EG31-092	Door Only - Painted
EG31-099	Venturi
EG31-118	Owner's Manual
EG31-124	¾" NTP Male ¾ Comp. 90° Elbow
EG31-125	¼" NTP Female ¾ Comp. 90° Elbow
EG31-200	LP to NG Conversion Kit
EG31-202	NG to LP Conversion Kit
EG31-205	Conversion Kit BV to DV
EG31-206	Conversion Kit DV to BV
50-092	Bay Face - Polished Nickel
50-111	Regular Surround Panel - Black Trim
50-112	Oversized Surround Panel - Black Trim
50-123	Trim Only - Black
50-135	Trim Only - Nickel
50-141	Steel Bay Face With Glass - Painted Black
50-142	Steel Bay Cover - Gold
50-143	Steel Bay Cover - Polished Nickel
50-487	Square Face - Nickel
50-505	Louvre Set Top & Bottom - Painted Black
50-595	Cape Cod Front
50-597	Cottage Trim Kit - Gold
50-598	Cottage Trim Kit - Pewter
50-599	Cottage Trim Kit - Antique Copper
50-610	Ceramic Brick Liner (Post S/N 12663)
50-695	Cottage Face - No Trim
50-696	Cottage Trim Kit - Painted Black
EG31-103	Standard Surround Panel Trim - Brass
EG31-106	Arched Face - Painted Black
EG31-107	Oversized Surround Panel Trim - Nickel
EG31-108	Arched Face - Gold
EG31-110	Square Face - Painted Black
EG31-112	Square Face - Gold
EG31-113	Arched Face - Nickel


# CAST PARTS LIST

30-036	Cast surround only - Painted	50-402	Cast front only (no surround, glass, valve door, or clip-on) - Painted
30-035AW	Cast surround only - Antique White	50-403	Cast front only (no surround, glass, valve door, or clip-on) - Antique White
30-035DB	Cast surround only - Diamond Black	50-404	Cast front only (no surround, glass, valve door, or clip-on) - Diamond Black
30-035IR	Cast surround only - Inferno Red	50-405	Cast front only (no surround, glass, valve door, or clip-on) - Inferno Red
30-035PG	Cast surround only - Pearl Grey	50-406	Cast front only (no surround, glass, valve door, or clip-on) - Pearl Grey
30-035WB	Cast surround only - Wedgewood Blue	50-407	Cast front only (no surround, glass, valve door, or clip-on) - Wedgewood Blue
30-035WG	Cast surround only - Westport Green	50-408	Cast front only (no surround, glass, valve door, or clip-on) - Westport Green
50-886	Cast surround only - Antique Chestnut	50-890	Cast front only (no surround, glass, valve door, or clip-on) - Antique Chestnut
50-381	Cast surround top piece.only - Painted	30-028	Cast valve access door - Painted
50-382	Cast surround top piece.only - Antique White	50-451	Cast valve access door - Antique White
50-383	Cast surround top piece.only - Diamond Black	50-452	Cast valve access door - Diamond Black
50-384	Cast surround top piece.only - Inferno Red	50-453	Cast valve access door - Inferno Red
50-385	Cast surround top piece.only - Pearl Grey	50-454	Cast valve access door - Pearl Grey
50-386	Cast surround top piece.only - Wedgewood Blue	50-455	Cast valve access door - Wedgewood Blue
50-387	Cast surround top piece.only - Westport Green	50-456	Cast valve access door - Westport Green
50-887	Cast surround top piece.only - Antique Chestnut	50-891	Cast valve access door - Antique Chestnut
50-388	Cast surround left piece.only - Painted	50-743	Cast iron front complete - Painted
50-389	Cast surround left piece.only - Antique White	50-744	Cast iron front complete - Antique White
50-390	Cast surround left piece.only - Diamond Black	50-745	Cast iron front complete - Diamond Black
50-391	Cast surround left piece.only - Inferno Red	50-746	Cast iron front complete - Pearl Grey
50-392	Cast surround left piece.only - Pearl Grey	50-747	Cast iron front complete - Inferno Red
50-393	Cast surround left piece.only - Wedgewood Blue	50-748	Cast iron front complete - Wedgewood Blue
50-394	Cast surround left piece.only - Westport Green	50-749	Cast iron front complete - Westport Green
50-888	Cast surround left piece.only - Antique Chestnut	50-811	Cast iron front complete - Antique Chestnut
50-395	Cast surround right piece.only - Painted	EG31-399	Cast trim piece - Painted
50-396	Cast surround right piece.only - Antique White	EG31-399AW	Cast trim piece - Antique White
50-397	Cast surround right piece.only - Diamond Black	EG31-399DB	Cast trim piece - Diamond Black
50-398	Cast surround right piece.only - Inferno Red	EG31-399IR	Cast trim piece - Inferno Red
50-399	Cast surround right piece.only - Pearl Grey	EG31-399PG	Cast trim piece - Pearl Grey
50-400	Cast surround right piece.only - Wedgewood Blue	EG31-399WB	Cast trim piece - Wedgewood Blue
50-401	Cast surround right piece.only - Westport Green	EG31-399WG	Cast trim piece - Westport Green
50-889	Cast surround right piece.only - Antique Chestnut	50-812	Cast trim piece - Antique Chestnut
		50-462	Clip-on assembly only (for cast bay door)
		50-496	Cast Bay 3 pieces Glass set with tape


# PARTS DIAGRAM - BODY



EG 31 / FOCUS  
BODY  
November 2003

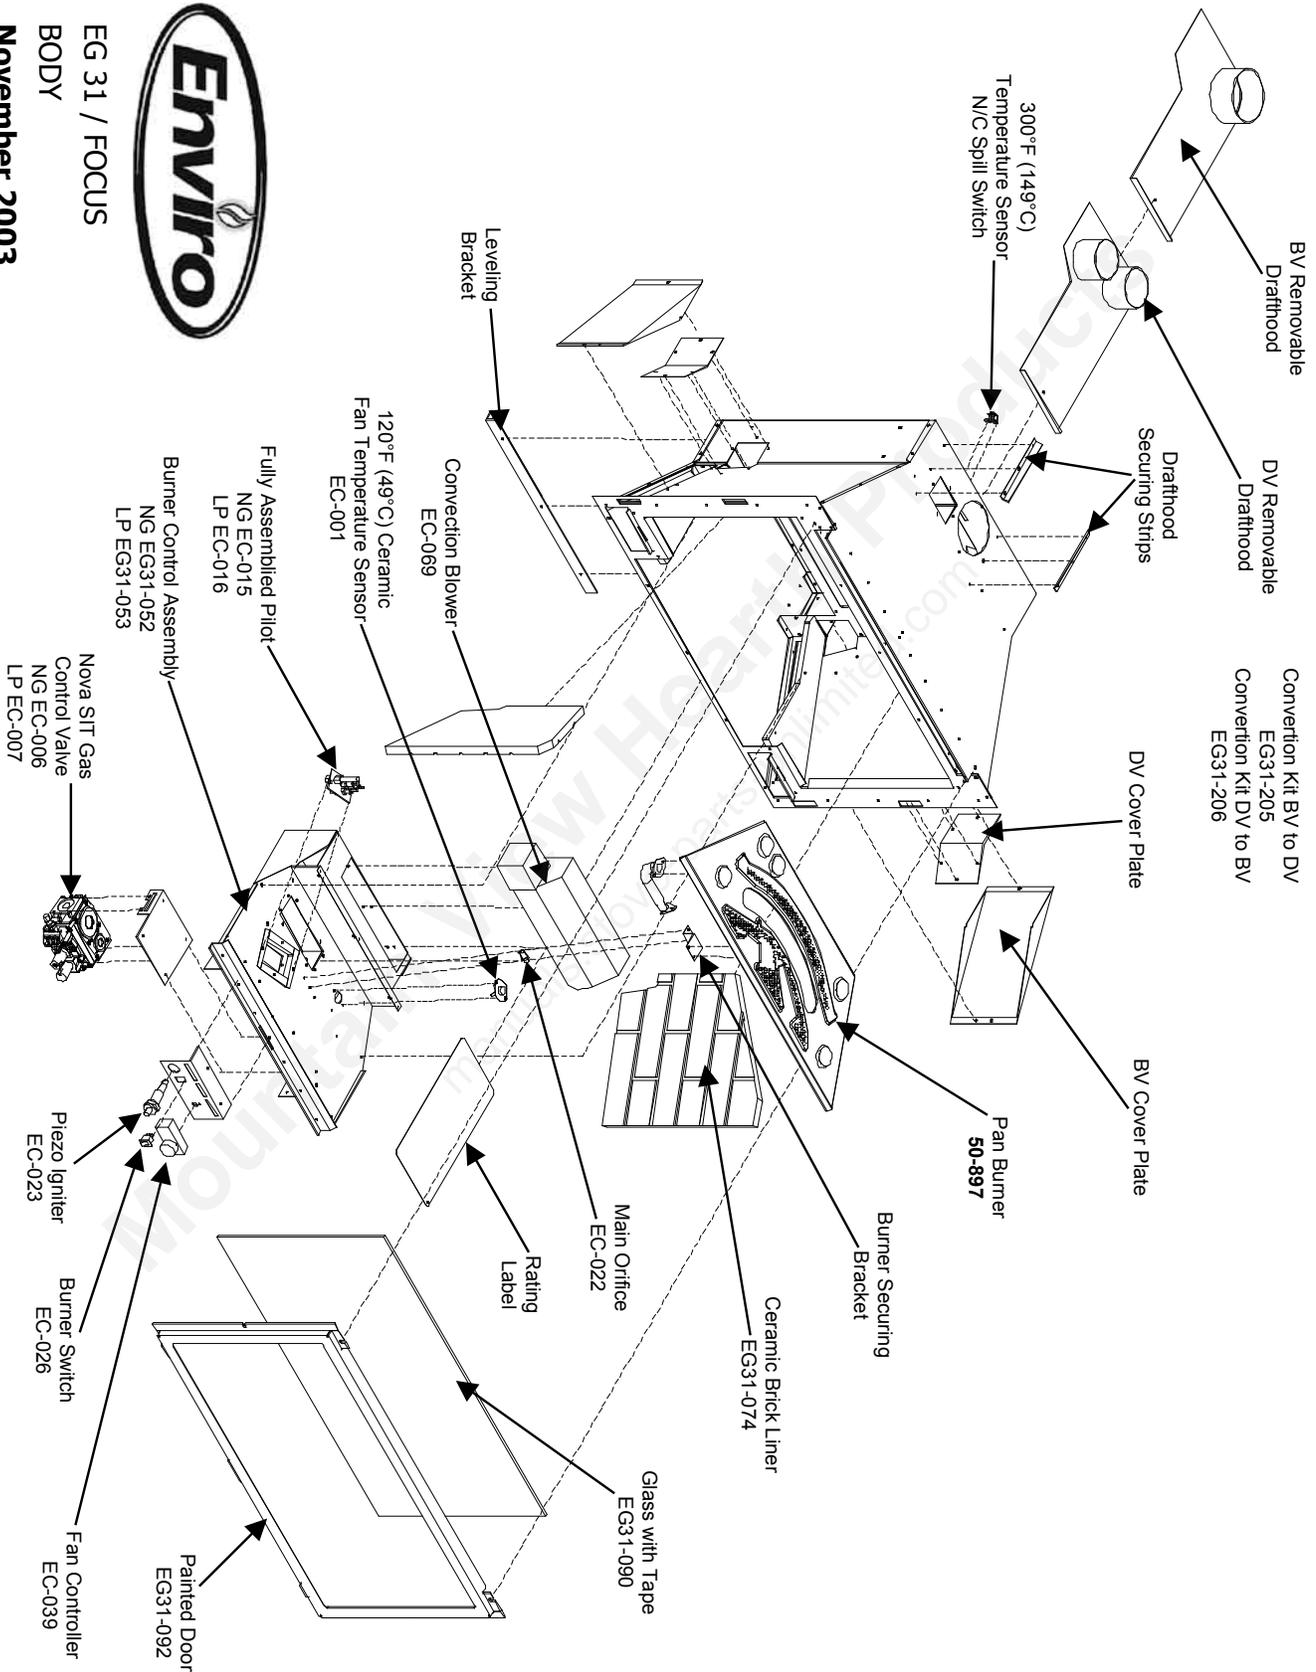

# PARTS DIAGRAM - SURROUNDS

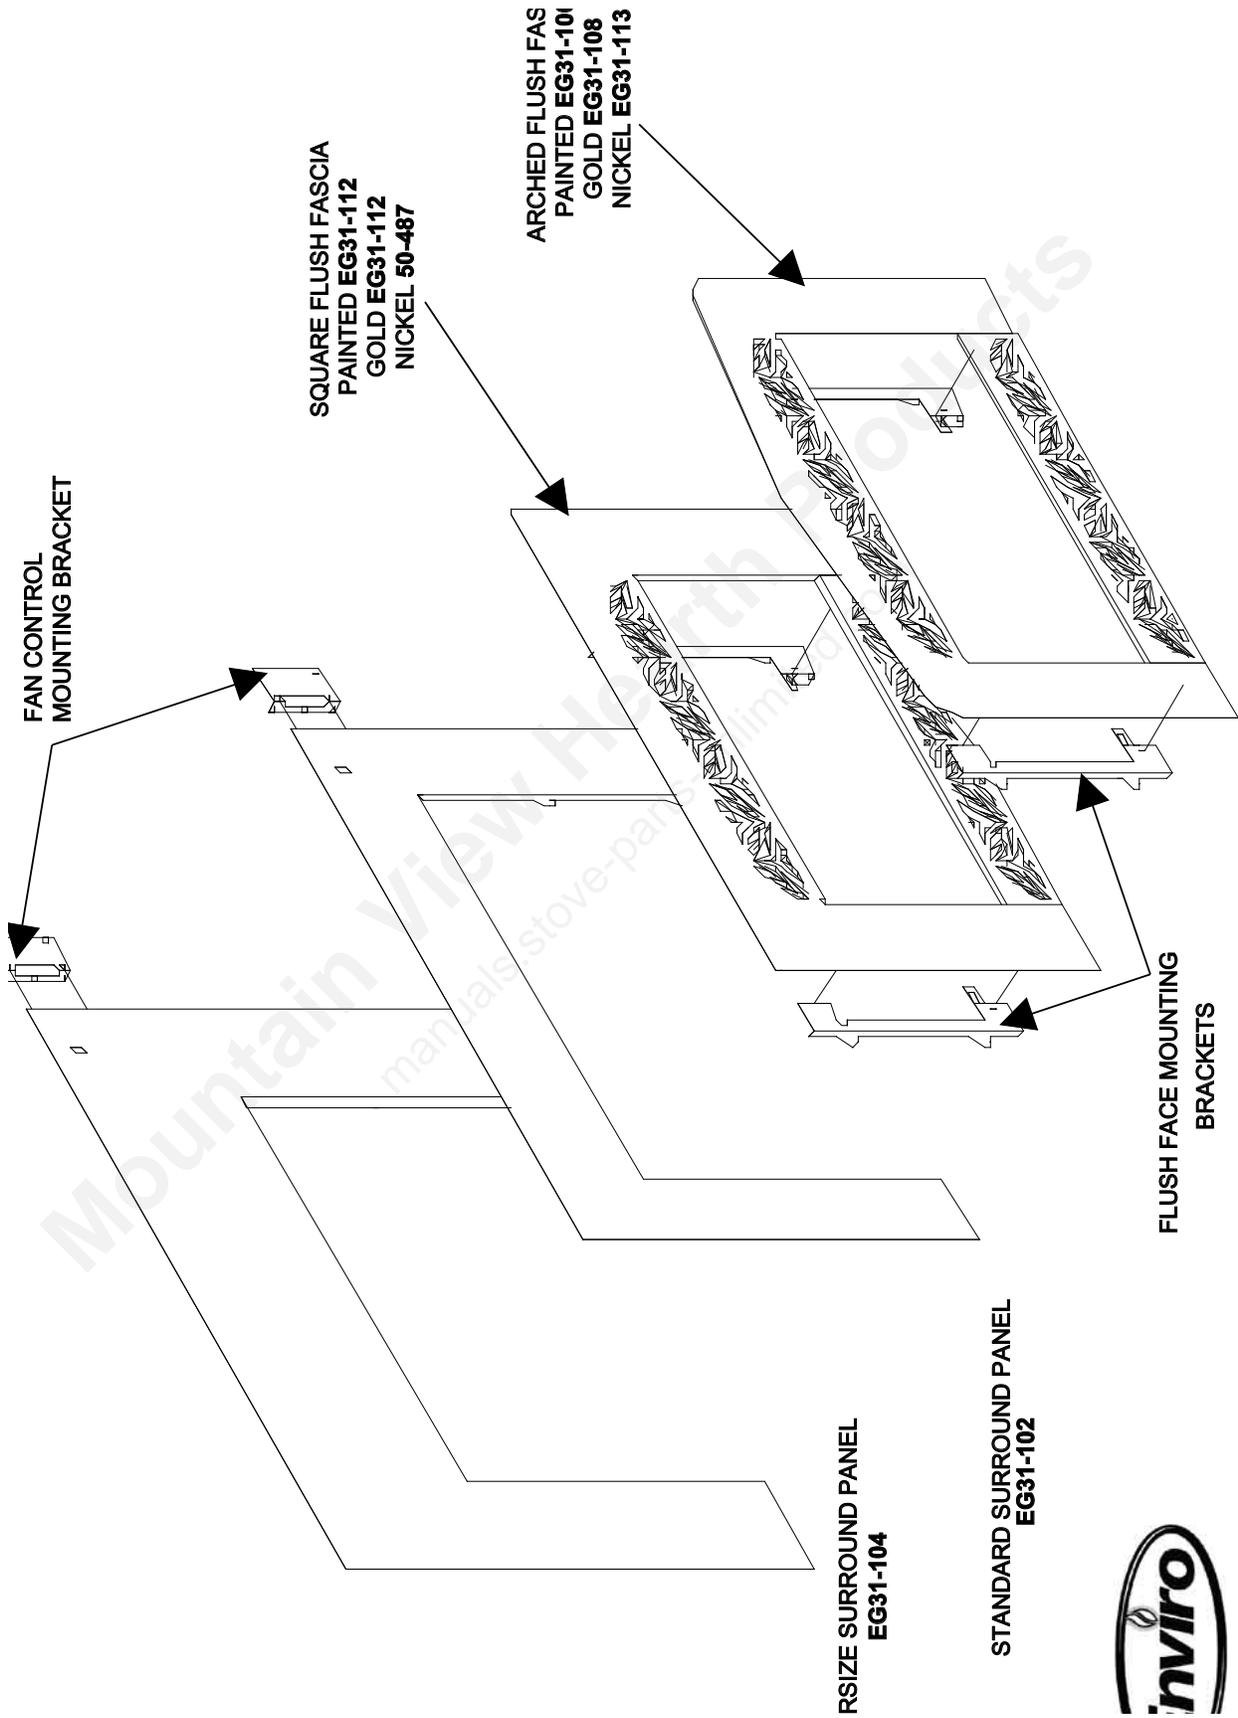


**1 / FOCUS  
ROUNDS**

# PARTS DIAGRAM- CAST BAY FRONT



EG 31 / FOCUS  
CAST BAY FRONT  
November 2003

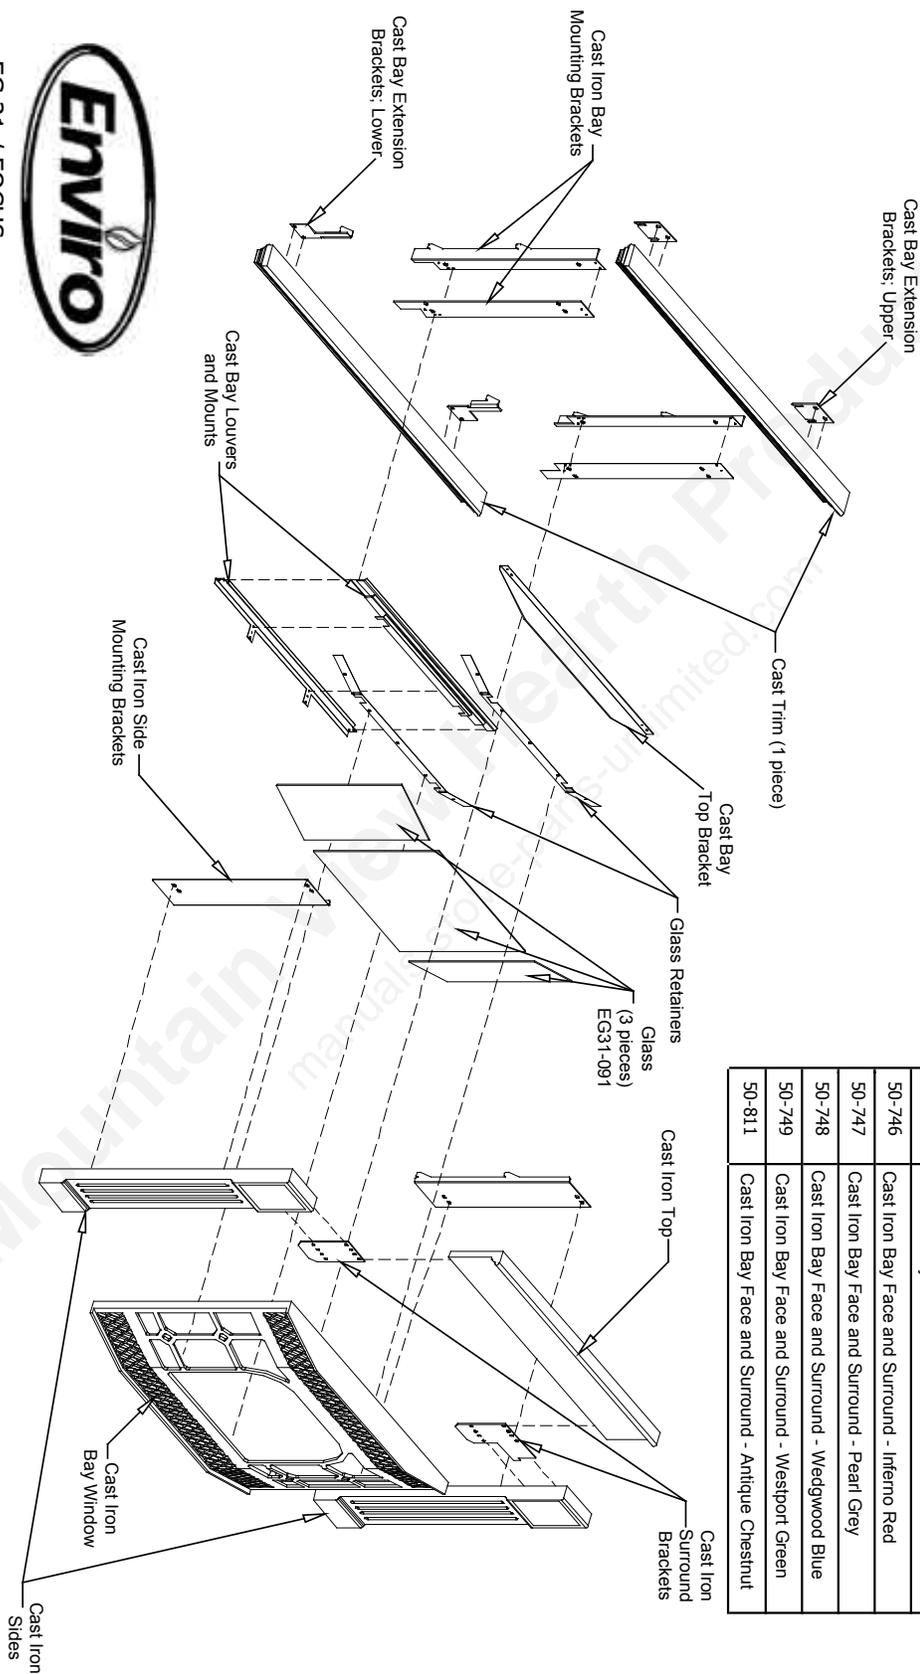

Note: If individual cast pieces are required refer to Cast Parts List for numbers.

Part Number	Description
50-743	Cast Iron Bay Face and Surround - Painted Black
50-744	Cast Iron Bay Face and Surround - Antique White
50-745	Cast Iron Bay Face and Surround - Diamond Black
50-746	Cast Iron Bay Face and Surround - Inferno Red
50-747	Cast Iron Bay Face and Surround - Pearl Grey
50-748	Cast Iron Bay Face and Surround - Wedgwood Blue
50-749	Cast Iron Bay Face and Surround - Westport Green
50-811	Cast Iron Bay Face and Surround - Antique Chestnut

# WARRANTY

---

Sherwood Industries Ltd. offers a Limited Lifetime Warranty on this gas product. This Limited Lifetime Warranty covers the appliance for a period of seven years from the date of installation. This warranty applies only to the original owner in the original location.

Covered under the lifetime warranty are: the surround, the chassis and the heat exchanger. These steel components are covered against manufacturer's defects for seven (7) years and the labour for the first year. The following exclusions apply: over-firing due to incorrect setup or tampering, or damage caused by incorrect installation, usage or abuse. The unit must be properly installed by a qualified technician or installer, and must meet all local and national gas and building code requirements.

We also cover against manufacturer's defects, under our Limited Lifetime warranty, the following components: Log Set, Burners and Glass.

The following exclusions apply:

Plating - Damage caused by scratching, marring, chemicals, fingerprints, abrasive cleaners or discoloration with age. Items with Antique Copper that have had a green discoloration of the finish. If discoloration occurs, please follow the cleaning instructions as outlined in the "Maintaining Face and Surround Finishes" section.

Pocelain Finishes - Damage caused by chipping, scratching, marring, chemicals, fingerprints, abrasive cleaners, discoloration with age

Glass - use of harsh or abrasive cleaners, striking the glass or surface contaminates.

Logset - Damage caused by incorrect handling or misuse.

Burners - damage caused by improper or continuous operation under incorrect conditions.

Sherwood Industries Ltd. offers a two-year warranty on all the electrical components and gas components, against manufacturing defects. Paint is also covered against flaking. This offer includes parts and labour for one year, and parts only thereafter.

Your dealer shall make all claims under this warranty in writing.

## **WHEN FILING A WARRANTY CLAIM, PLEASE COMPLETE THE FOLLOWING INFORMATION ON AN OFFICIAL WARRANTY CLAIM FORM:**

### **TO THE DEALER:**

Name, address and telephone number of purchaser and date of purchase, date of installation, name of installer and dealer, nature of complaint, defects or malfunction, description and part number of any parts replaced.

### **TO THE DISTRIBUTOR:**

Sign and verify that work and information are correct.

This warranty covers defects in materials and workmanship only if the product has been installed according to the manual's instructions. If the product is damaged or broken as a result of misuse or mishandling, the warranty does not apply. The warranty does not cover removal and reinstallation costs.

Sherwood Industries Ltd. reserves the right to repair or replace the defective product. The shipping costs are to be paid by the consumer. All warranties by the manufacturer are set forth and no claim shall be made against the manufacturer on any oral warranty or representation.

Sherwood Industries Ltd. and its' employees or representatives will not assume any damages, either directly or indirectly, caused by improper usage, operation installation, servicing or maintenance of this appliance.

Sherwood Industries Ltd. reserves the right to make changes without notice. Please complete and mail the warranty registration card and have the installer fill in the installation data sheet in the back of the manual for warranty and future reference.

# INSTALLATION DATA SHEET

The following information must be recorded by the installer for warranty purposes and future reference.

NAME OF OWNER: \_\_\_\_\_

ADDRESS: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

PHONE: \_\_\_\_\_

NAME OF DEALER: \_\_\_\_\_

ADDRESS: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

PHONE: \_\_\_\_\_

MODEL: \_\_\_\_\_

SERIAL NUMBER: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_ (dd/mm/yyyy)

DATE OF INSTALLATION: \_\_\_\_\_ (dd/mm/yyyy)

NATURAL GAS (NAT)     PROPANE(LPG)

INLET GAS PRESSURE: \_\_\_\_\_ in wc

MAIN BURNER ORIFICE: \_\_\_\_\_ # DMS

PILOT ORIFICE # \_\_\_\_\_ OR \_\_\_\_\_ in diam.

INSTALLER'S SIGNATURE: \_\_\_\_\_

NAME OF INSTALLER: \_\_\_\_\_

ADDRESS: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

PHONE: \_\_\_\_\_

MANUFACTURED BY:  
SHERWOOD INDUSTRIES LTD.  
6782 OLDFIELD RD. SAANICHTON, BC, CANADA V8M 2A3  
www.envirofire.biz  
November 21, 2003  
C-10152