

Essence Doors for 8000 Series

- Installation Instructions -



Leave this manual with party responsible for use and operation.



WARNING

**HOT! DO NOT TOUCH.
SEVERE BURNS MAY RESULT.
CLOTHING IGNITION MAY RESULT.**

Glass and other surfaces are hot during operation and cool down.

- Keep children away.



- CAREFULLY SUPERVISE children in same room as appliance.
- Alert children and adults to hazards of high temperatures.
- To avoid burns or clothing ignition, the doors must remain closed if children will be present during the operation and cool down of the fireplace.
- Doors supplied from factory locked shut for child safety.
- Do NOT operate with protective barriers open or removed.
- Doors may be unlocked only upon request of a person responsible for the use and operation of the fireplace.
- Doors may be returned to the locked position following these instructions.
- Keep clothing, furniture, draperies and other combustibles away.



Figure 1



Figure 2

Safety Lock

1. This door is supplied and shipped with a safety lock device in place. The 3/8" stop nuts on the back of the doors have to be loosened about one turn to make the doors operable (see Figure 1).
2. Slide the safety lock to the right side (see Figure 2) to open the doors.
3. Slide the safety lock back to the left after each use of operable doors. Tighten the 3/8" stop nuts to return the doors to the locked position.

Installation

1. Remove any existing door from fireplace (if one is sent with fireplace).
2. Remove packaging from cabinet style doors and frame.

3. Hang door on fireplace by inserting hooks on sides into slots on each side of glass.
4. The gap between the doors may be adjusted. The door gap should be approximately 1/16" - 1/8" and consistent from the door top to bottom. If not, remove the cabinet door frame from the unit.
5. Loosen the screw on the backside of the door frame and slide the hinge block pin(s) within the slot(s) to adjust gap (see Figure 3).


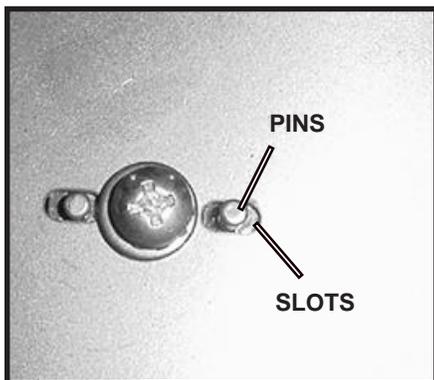


Figure 3.
Door gap adjustment (back side of frame)

6. Reinstall door frame and doors.
7. Install handles with screws provided. Insert screws from back of door into threaded holes in handles.

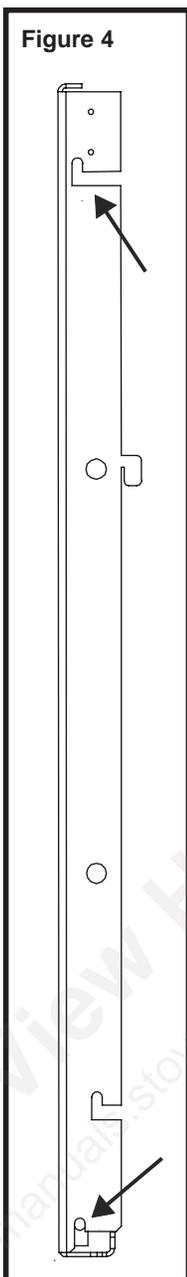

Interchangeable Decorative Panels

8. The decorative panels at the bottom of the cabinet door are interchangeable with many different options.
9. To replace these panels remove the two 3/8" nuts on the back of each panel (see Figure 5). Remove the panel from the two bolts. Slide the mesh out of the panel and place it in the new panel. Place the new panel onto the bolts and secure with nuts.

CAUTION

DO NOT use abrasive polish to clean the brass doors. This may damage the clear lacquer finish and cause the brass to discolor.



Figure 5

Service Parts

Door Model	Right Door Assembly	Left Door Assembly	Hinge Blocks	Left Hinge	Right Hinge	Handle	Lower Door Assembly	Hood
DF-8-ESSENCE-BK	2056-010	2056-009	289-876	289-879	289-880	370-210	2056-108	SRV560-175
DF-8-ESSENCE-PT	2056-005	2056-004	289-876	289-879	289-880	370-210	2056-108	SRV560-175
DF-8-ESSENCE-BZ	2056-080	2056-079	289-876	289-879	289-880	370-210	2056-108	SRV560-175
DF-8-ESSENCE-BN	2056-048	2056-047	289-876	289-879	289-880	370-210	2056-108	SRV560-175
DF-8-ESSENCE-PB	2056-043	2056-042	289-875	289-881	289-882	370-211	2056-108	SRV560-175