

First thing you will have to remove the narrow access cover on your fireplace and under that cover you will find another panel that has 2 switches on it.

You will have to have a Phillips screwdriver to remove the 2 screws that hold the 2nd panel (shown below with the blue arrow).


You must now lift the 2nd panel up and off to expose the gas & electrical components below.



The first picture below is looking down at the top of the ignition module (note: the module shown in the picture has 2 slide switches, some models only have 1 slide switch. The learning of the remote is the same for both).

The slide switch (switches) must be in the remote position (indicated with the blue arrow in first picture).

Just as an FYI,,, the back up battery pack is located under the bundle of wires to the right of the ignition control module pointed out with the orange arrow.

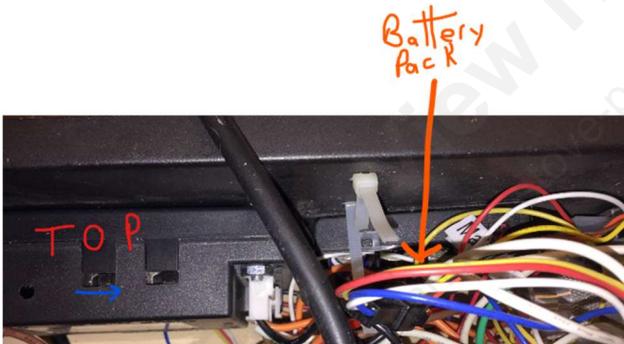

The second and third pictures below are for reference of where the learn / pairing button is. The blue arrows point out the Learn button location and the button.

You must press and release the learn button (don't hold the button in). You should hear a beep.

Once you here the beep, press and release the "on" button or on some remotes it is the "mode" button on the hand held remote (Green arrows in last picture).

After pressing the On button on the remote you should hear 3 more the beeps from the ignition module.

