


Disabling / Re-enabling Function Zones

Step 1:


Turn the remote to Manual OFF mode.

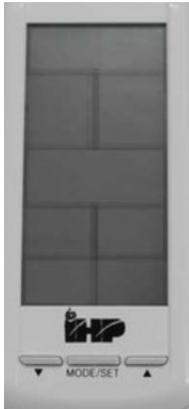


Step 2:

Press and HOLD the desired function zone and the DOWN button at the same time for 10 seconds. Zones for Flame, Light, Fan, and Aux are pictured below:


To add Flame Control:
Red Square + Down Button
Hold for 10 Seconds

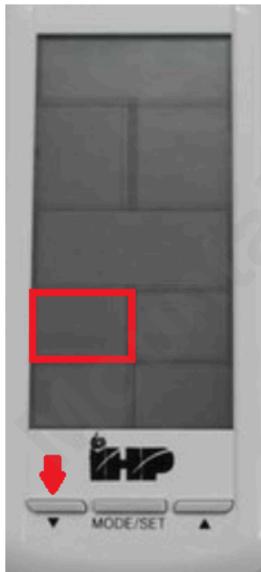


To add Light Control:
Red Square + Down Button
Hold for 10 Seconds

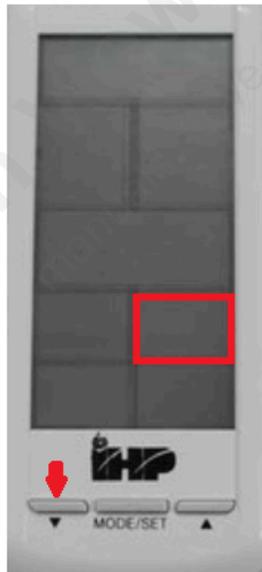

To add Fan Control:
Red Square + Down Button
Hold for 10 Seconds

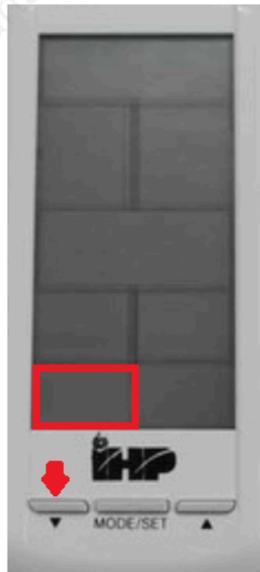

To add Aux Control:
Red Square + Down Button
Hold for 10 Seconds

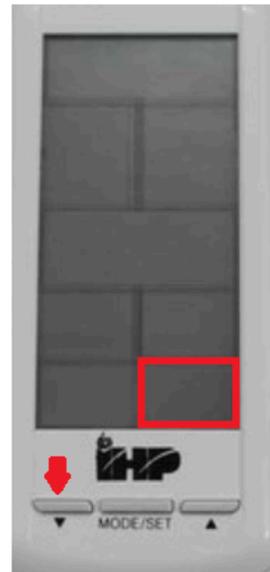

Step 3:

After releasing the function and down button, the LCD screen will show the zone held and either ON or OFF, indicating whether that feature was turned ON or OFF. To add a feature, you will want it to show as ON. This will flash 3 times. If it flashes OFF when you wanted it ON, you will have to restart at step 1.