


# Programming an SIT Proflame 1 or 2 Remote

## Key Layout:



## Display/Icon Layout:

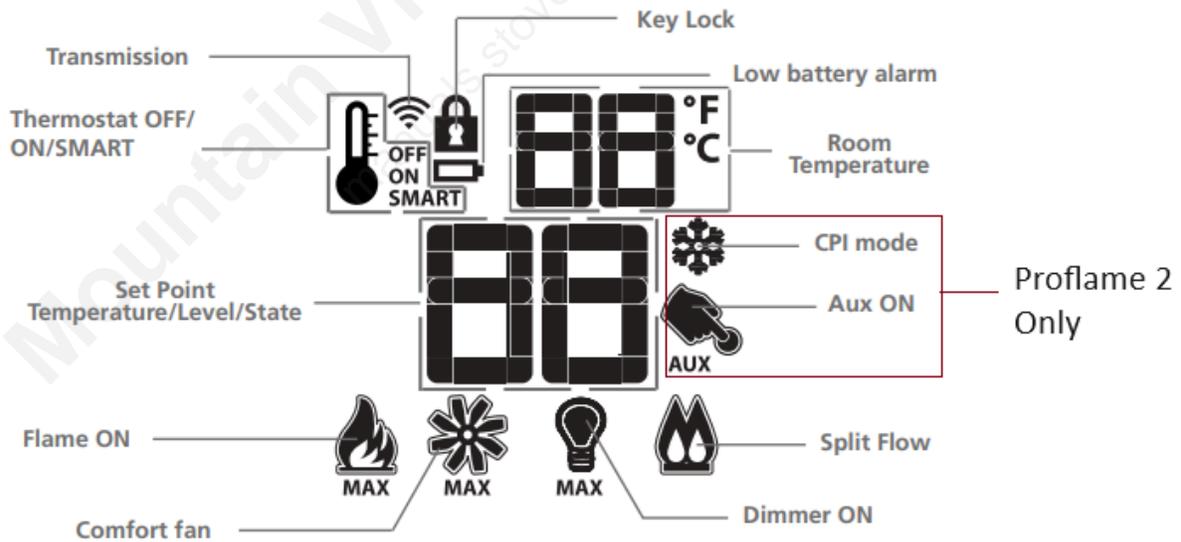

## Programming instructions

1. Start with the remote in the OFF position.
2. Remove a battery (does not matter which one).
3. Press and hold the ON/OFF key and the MODE key.
4. Put the battery back in remote (while still holding down buttons).
5. Once the screen lights up you can now release the mode key, but you will need to hold down the ON/OFF key until programming is complete.
6. Now you can use the MODE key to cycle through the feature icons.

### Icons for Possible Features:

To add a new feature may also need additional parts.  
Please contact Mountain View Hearth Products for more information.

Flame Height Control



Fan Control



Light Control



Split Flow



Auxiliary Control



Cold Climate Control



7. Once your desired feature is highlighted you can either add that feature or remove it.

- To Add:

- Press the up arrow key.  
The screen will show SET



- To Remove:

- Press the down arrow key.  
The screen will show CLr



8. When you are finished adding and removing features, release the ON/OFF key to exit programming.

### To add or remove the thermostat function:



1. Start with the remote in the OFF position.
2. Remove a battery (does not matter which one).
3. Press and hold the ON/OFF key and the THERMOSTAT key.
4. Put the battery back in remote (while still holding down buttons).
5. Use the up and down keys to choose either SET or CLr.
6. Release keys to exit programming.