



# VF32RC - Remote Control Kit Installation Instruction Sheet

## Items required for installation:

(4) "AA" Batteries

## Installing batteries in receiver:

Open side panel of receiver and install batteries as shown in Figure 1.

(Note: Handheld transmitter comes with a "9V" battery.)

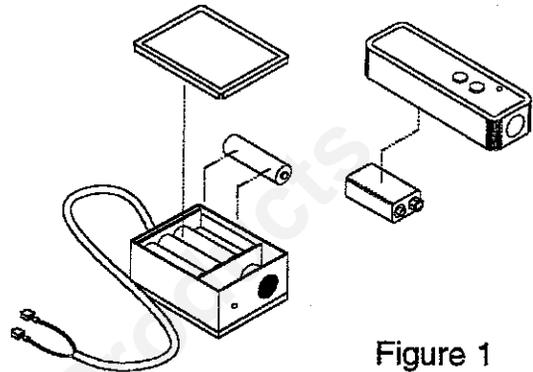


Figure 1

## Wiring Remote Control to the Control Valve:

The remote control receiver comes supplied with a wire harness with (1) 3/16" Female Disconnect and (1) 1/4" Female Disconnect attached.

Connect Disconnect terminals to the control valve as shown in wiring diagram below.

Note: Remote control can be placed anywhere in the base of the fireplace as long as the sensor is facing forward as shown in figure 2.


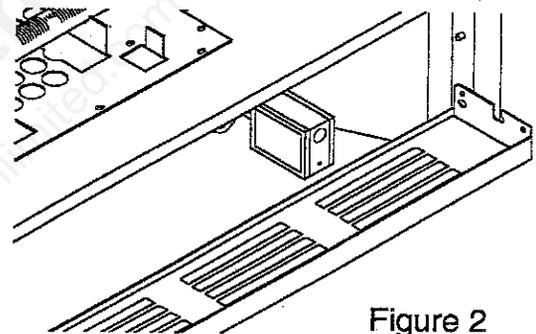


Figure 2

## How the Remote Control works:

After the pilot has been lit and the main control is set to on, simply aim the handheld remote at the fireplace lower grill and hold the "ON" button down until flame reaches desired height. (Note: remote control only controls the front burner flame. To control the rear flame, make adjustments on the control valve.)

To turn front burner flame off, hold down the "OFF" button until flame has completely disappeared.

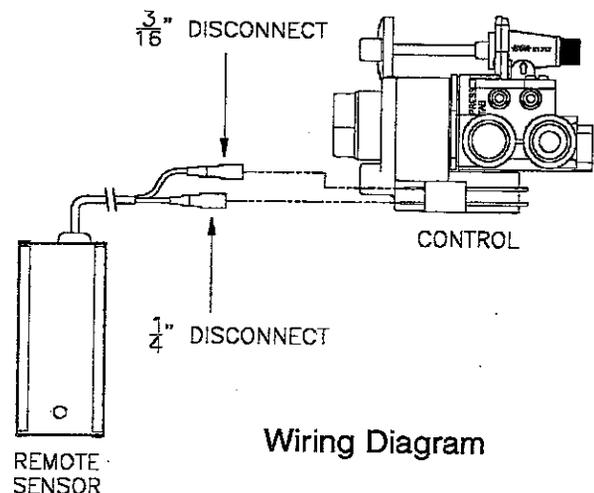

Wiring Diagram

**United States Stove Company**

227 Industrial Park Road, P.O.Box 151, South Pittsburg, TN 37380

(888) 299-1440 • WWW.USSTOVE.COM