

M14B + M14R

ORDER ALL REPAIR PARTS FROM YOUR KING DEALER BY SUPPLYING THE FOLLOWING INFORMATION:


1. Part Name
2. Part Number (Not Key No.)
3. Model Number

KEY NO.	PART NAME	QTY. Per Unit	PART NO.
1	Insulation	1	025584
2	Cover Plate Painted	1	015446
3	Bushing	4	011055
4	Fan Switch	1	009818
5	Raceway Assy.	1	025572
6	Motor & Blower Assy.	1	025630
7	Gord Set/Cover Plate Assy.	1	016186
8	Wrap Blower Painted	1	025945
9	Switch Rocker	1	024574
10	Switch	1	015426
11	Washer No. 10 Star	4	*
12	Nut No. 10-24	4	*
13	Washer No. 10 Flat	4	*
14	Washer No. 10 Rubber	8	*
15	Screw 8 x 1/4 Type A BOF	8	*
	* Purchase Locally		

NOTE:

The complete blower assembly may be ordered by using part number 025642 or individual components may be ordered as described above.

FIGURE 5

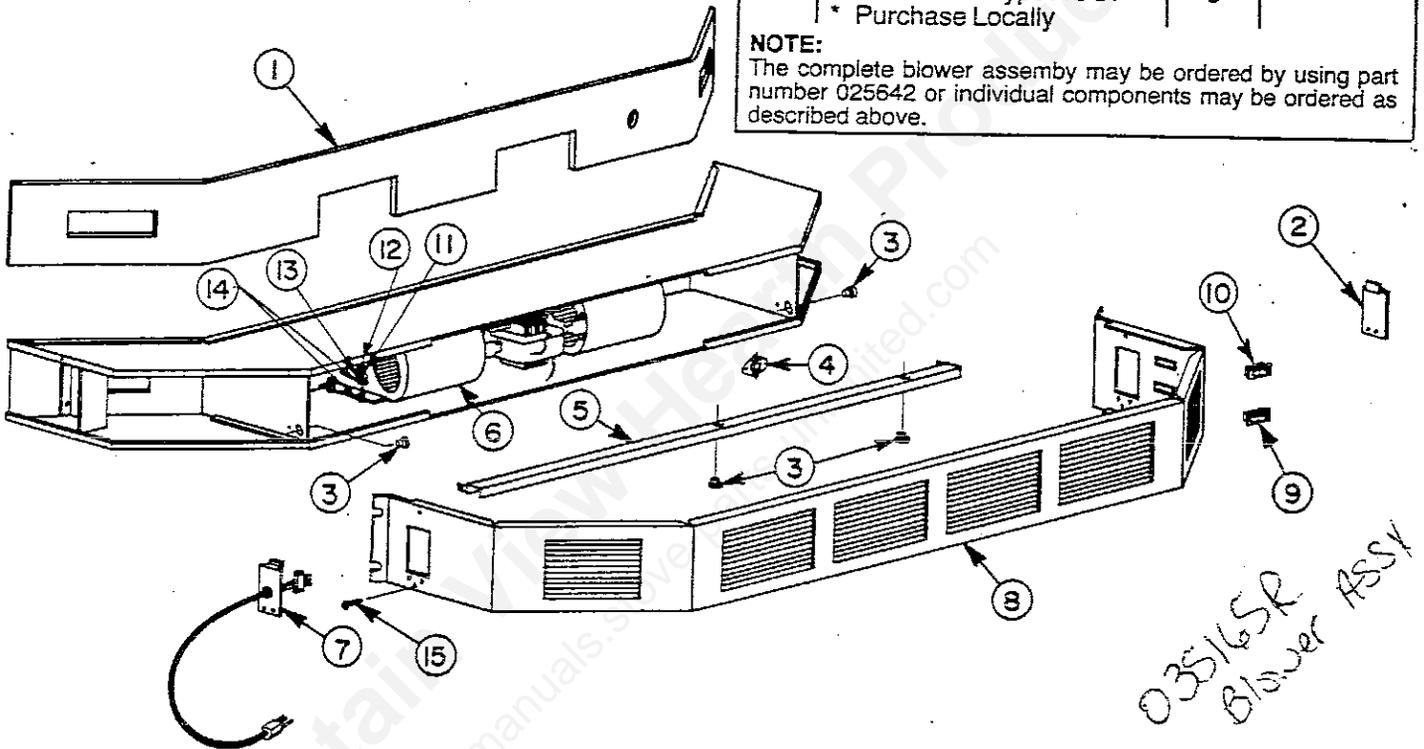

14. Route the power supply cord for the blower away from the insert and plug it into a properly grounded and fused receptacle. If a more appropriate location of the cord can be achieved by attaching the cord to the right end of the blower, relocate the cord as follows:
 - a. Be sure the cord is unplugged.
 - b. Remove the two screws and the cover plate (item 2, figure 5) on the right end of the blower.
 - c. Remove the cover plate from the left end of the blower and disconnect the special connector plug that joins the power cord to the internal blower wiring by pressing on the catch releases on the top and bottom of the connector and pulling along on the connector.
 - d. Attach the cord connector to the mating connector in the right end of the blower and reattach the cover plates on each end of the blower.

OPERATION OF THE FIREPLACE INSERT

THE PAINT ON THE EXTERIOR OF THE INSERT WILL GO THROUGH A CURING PROCESS DURING THE FIRST FIRING OF THE INSERT AND WILL EMIT SOME SMOKE AND ODOR. BE PREPARED FOR THIS BY RAISING A WINDOW OR OPENING A DOOR TO PROVIDE VENTILATION.

The first time the insert is fired, the fire should be regulated so as to increase in intensity gradually to allow the paint to cure slowly and the other components to adjust to their expanded size.

Build A Fire:

1. Lay crumpled paper and wood kindling on the bottom of firebox.
 2. Light the paper with a match. NEVER USE GASOLINE, GASOLINE TYPE LANTERN FUEL, KEROSENE, CHARCOAL LIGHTER FUEL OR SIMILAR LIQUIDS TO START OR "FRESHEN UP" A FIRE. KEEP ALL SUCH LIQUIDS WELL AWAY FROM THE FIREPLACE ACCESSORY WHILE IT IS IN USE.
 3. Close the door and open the combustion air slide.
- CAUTION: THE COMBUSTION AIR SLIDE GETS HOT. PROTECT YOUR HANDS WITH GLOVES OR A POT LIFTER.

Do not allow the insert to sit for long periods with ashes in it. Ashes combined with moisture in the air can be corrosive to the metal.

Your insert is equipped with a glass door. The glass door panel may be cleaned when it is cool with a household glass cleaner. Take care to avoid chipping or scratching the glass. Chipped or scratched glass can break suddenly when heated. Do not use the insert with a broken glass door panel.

Any other servicing should be performed by an authorized service representative.

ORDER ALL REPAIR PARTS FROM YOUR KING DEALER BY SUPPLYING THE FOLLOWING INFORMATION:

1. Part Name
2. Part Number (Not Key No.)
3. Model Number

KEY NO.	PART NAME	QTY. Per Unit	PART NO.
1	Shaft Handle & Bushing	1	022253
2	Door Feed & Rope Assy.	1	020049
3	Rope Fiberglass	1	022433
4	Latch & Latch Fasteners	1	018902
5	Retainer Glass (Left)	1	018176
6	Screw 1/4 x 1 2 Long Mach.	12	*
7	Spacer No. 10 x 7 16	1	P5138
8	Slide Air Painted	1	019897
9	Washer Lock Split No. 10	1	*
10	Screw 10-24 x 3 4 Mach.	1	*
11	Gasket	1	018311
12	Glass Ceramic	1	018421
13	Retainer Top	1	018175
14	Support Air Slide	1	026006
15	Retainer (Right)	1	018177
16	Handle Spring	1	022186
17	Handle 3/4 Dia. Ball	1	019848
18	Bushing Retainer	1	018655
	* Purchase Locally		

FIGURE 6

NOTE:

The complete feed door assembly may be ordered by using part number 026008 or individual components may be ordered as described above.


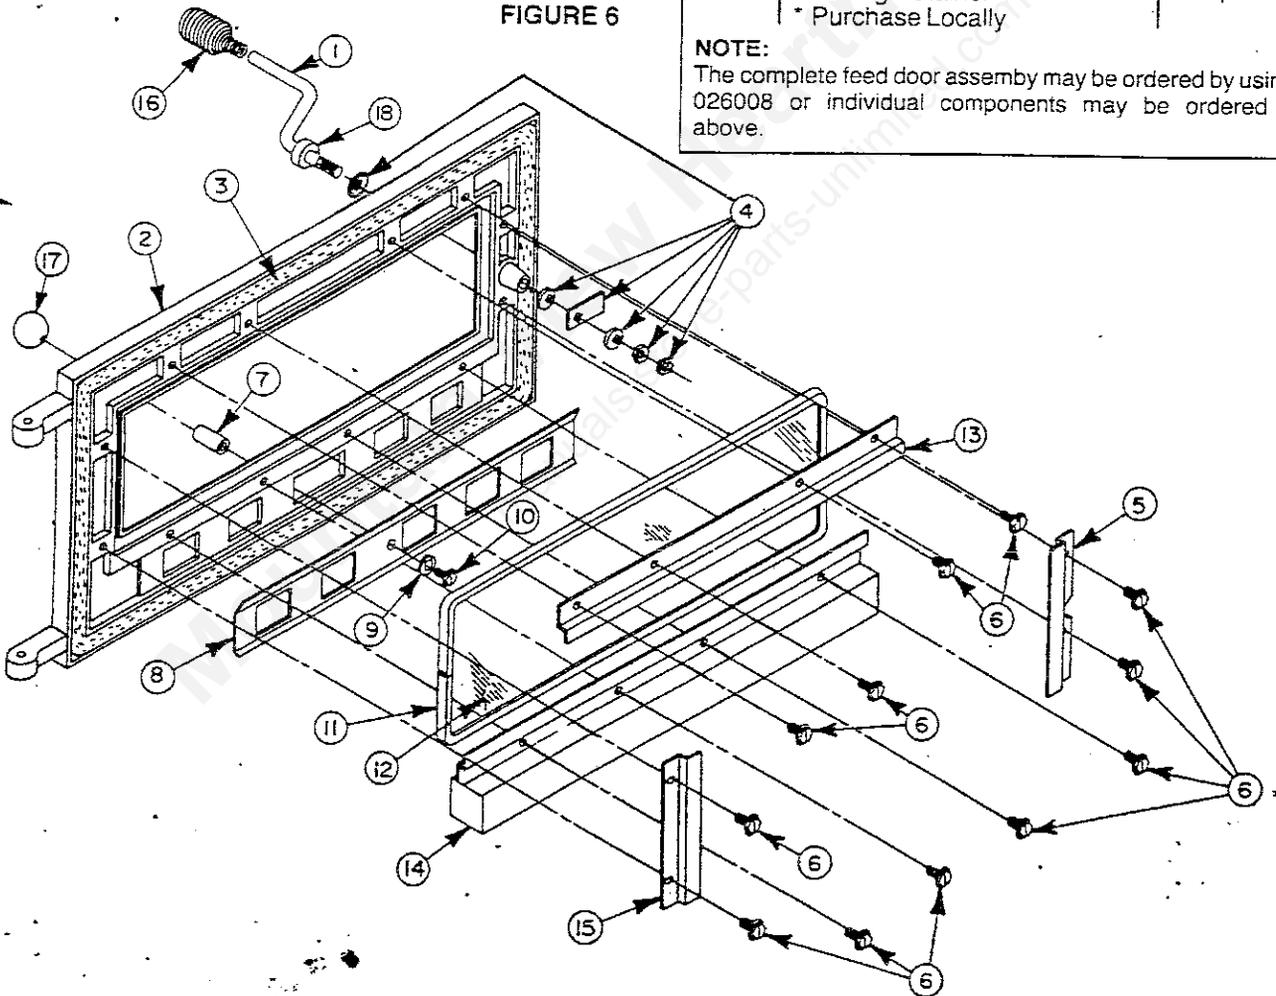


FIGURE 7

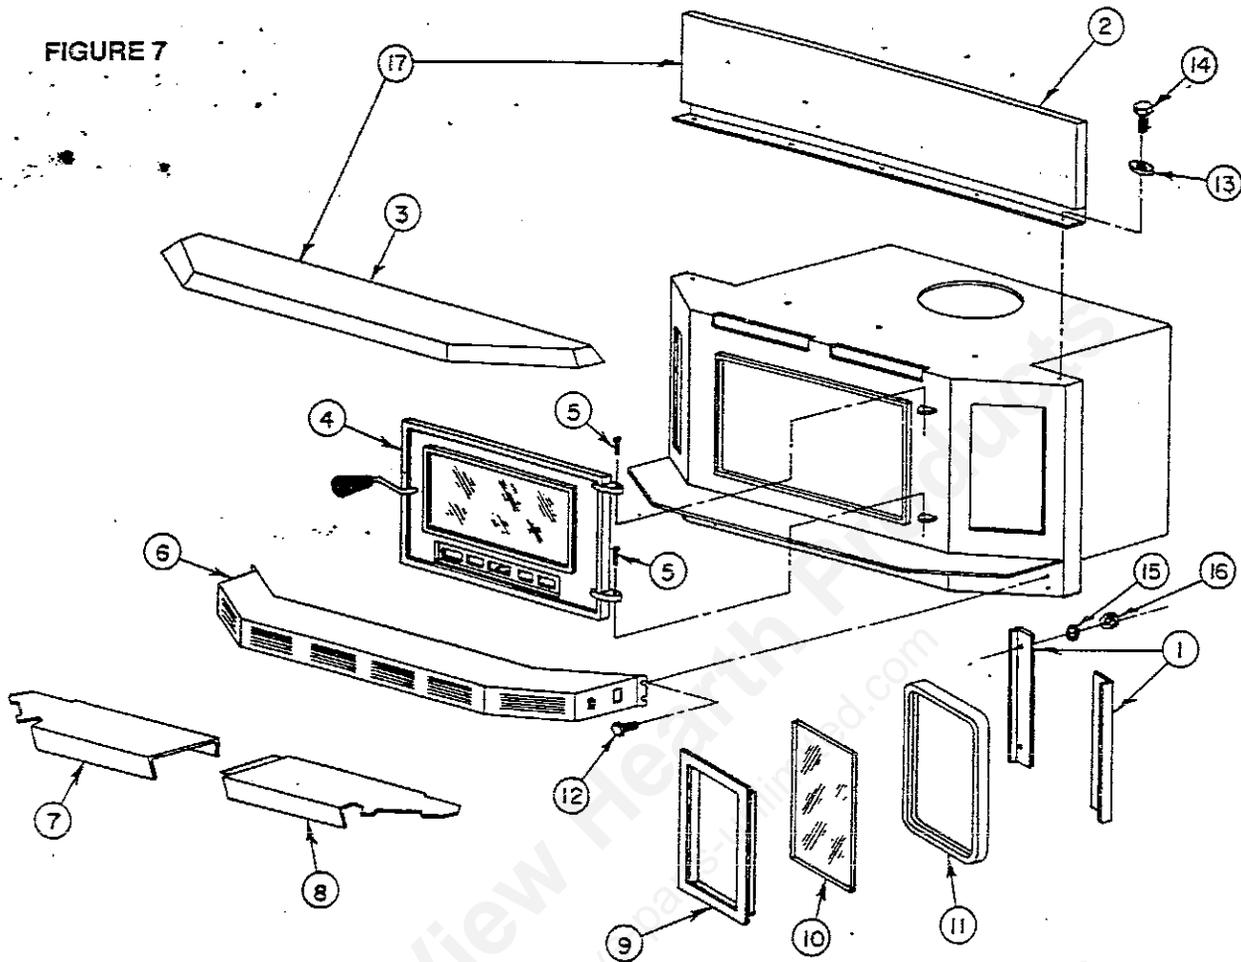

KEY NO.	PART NAME	QTY. Per Unit	MI4B PART NO.	MI4R PART NO.
1	Retainer Glass	4	025643	025643
2	Top Surround Assy.	1	025752	025756
3	Hood Surround Enameled	1	025754	025758
4	Door (Feed) & Handle Assy. (See fig. 6 for components)	1	026008	026008
5	Rivet Steel 1/4 x 1-1/4	2	P626	P626
6	Blower Assy. (See fig. 5 for components)	1	025642	025642
7	Retainer, Left Ash Ptd.	1	025942	025942
8	Retainer Right Ash Ptd.	1	025943	025943
9	Frame (For Side Glass)	2	025640	025640
10	Glass, 5 x 12 x 5mm Hi-Temp.	2	025459	025459
11	Gasket, Glass	2	025644	025644
12	Screw, No. 10-24 x 3/8 mach.	4	*	*
13	Washer, 1/4 Flat	5	*	*
14	Screw, 1/4 x 1/2 Long Mach.	5	*	*
15	Washer, No. 10 Lock	8	*	*
16	Nut, No. 10-24	8	*	*
17	Hood & Top Surround Pkg'd. * Purchase Locally	1	025639	025652

ORDER ALL REPAIR PARTS FROM YOUR KING
DEALER BY SUPPLYING THE
FOLLOWING INFORMATION:

1. Part Name
2. Part Number (Not Key No.)
3. Model Number