

Blower Alteration Instructions

1. Remove the three bolts that hold the blower to the housing. You may also need to loosen (but not remove) the fan blade within the housing.



OEM blower pictured above (This is how you will want the aftermarket one to look after rotation)



2. Rotate the blower 180 degrees.



3. The terminals should be positioned upward like the OEM blower seen here:



4. Bolt the motor back to the housing and tighten the fan blade, if necessary.