

Factory Reset Instructions

Please begin by unplugging stove from wall outlet!

Note: Each of the following steps must be performed within 3 seconds of the previous step!

Step 1: Plug stove into wall outlet

Step 2: Using three separate fingers press all three bottom buttons (Low Fuel Feed, Low

Burn Air, and Air On Temp) at the same time and release them at the same time. An “F” should appear in the Heat Range and an “S” in the Blower Speed.

Step 3: Using two separate fingers press both the UP Arrow and DOWN Arrow buttons on the Blower Speed side at the same time and release them at the same time. An “a” should appear in the Heat Range Window.

Step 4: Jump over to the Heat Range UP Arrow button and change the “a” to a “c”. Once you see the “c” – like cat – in the Heat Range Window, just leave the board alone and wait for all of the lights to go out.

Step 5: At that point, simply run your stove and see if it will now feed and heat properly

Mountain View Hearth Products
manuals.stove-parts-unlimited.com