



---Warning---The top row of 4 pins is **LEFT ALONE!!!** Do not move the jumper block on the top row... these pictures show the top row of pins blank, but that is only to give a clear view of the lower row of 5 pins in these pictures... (Leave the jumper block on the center pins on the top row)

-Note: High/Low & Auto/Off are the 2 options if (and only if) you are using a t-stat... if you are not using a t-stat you **MUST** be in Manual (no option)

-in Manual mode there should be a jumper wire connecting the 2 t-stat connections on the circuit board... some boards come with this and some you will simply use the jumper wire from the old board.

-Auto/Off (again only an option if using t-stat) has the improved “30 minute low fire delay” when t-stat is satisfied. Old programming would stop feeding pellets right away... new programming (since about 2006) will run the stove in “low fire” for 30 minutes to make sure and avoid starting and stopping more than needed (because that would not be an efficient way to run a pellet stove)