

Heat Exchanger Baffle Replacement Part #1-00-73418

HARMAN
BUILT TO A STANDARD, NOT A PRICE

To replace the existing heat exchanger baffle:

1. Remove existing heat exchanger baffle and discard.
2. Install new heat exchanger baffle into unit insuring the baffle tabs are placed in the baffle catch properly.
3. Install firebrick into brick bracket.

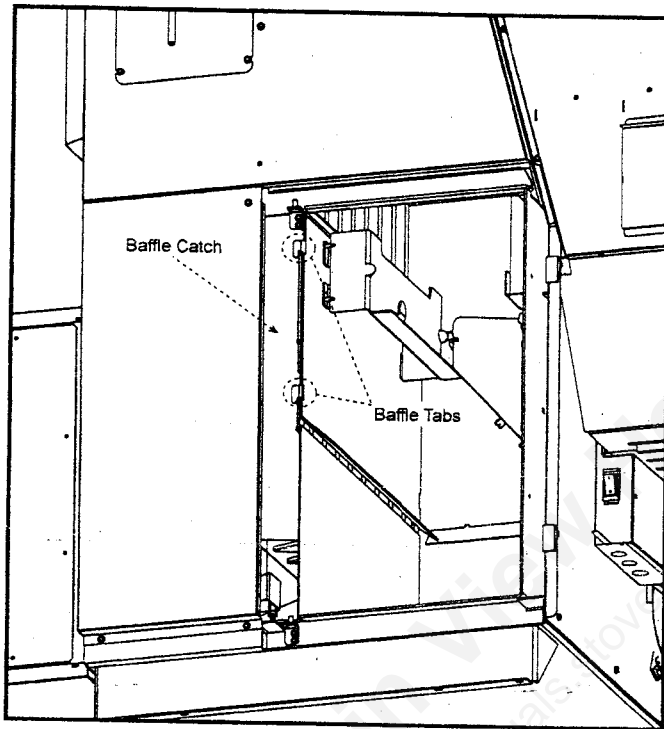


Fig 1

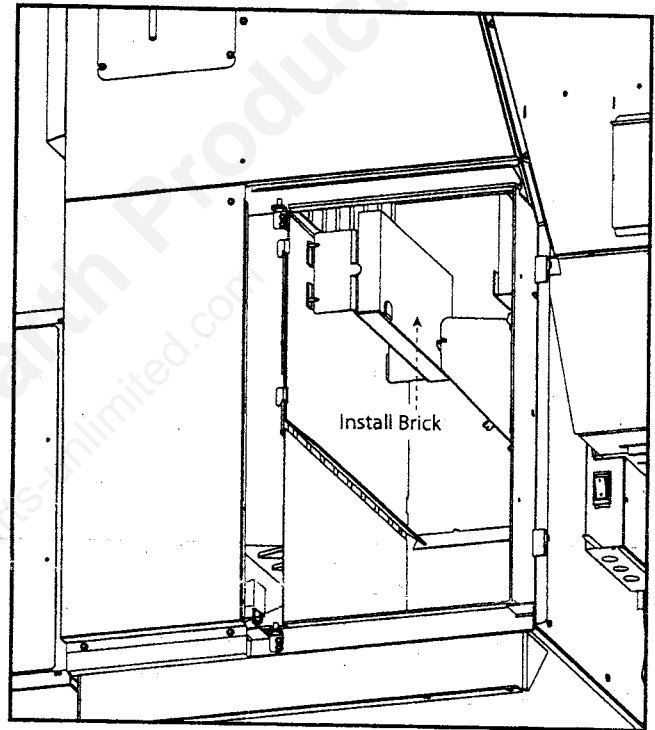


Fig 2