

Parts Included



Installation Instructions

PART NUMBER
KS 5020-1050

- 1- Convection Fan
- 1 - Convection Fan Gasket

Recommended Tools:

- 7/16" Narrow Deep Socket
- Socket Driver
- 1/4" Hex Nut Setter
- Putty Knife or Scraper

NOTE: Always Disconnect Power Before Performing Service Work

Step By Step Removal:

1. Unplug the stove power cord from the surge protected electrical source. Fig A.
Failure to do so could result in shorting out the control board.
2. To gain access to the Right Hand side of the appliance remove the 1/4" or 5/16" hex screws from the rear of the stove. There will be 3 or 4 depending on the model of stove. Slide loose panel straight back slightly, then lift off. Fig. B
3. Disconnect the Main Wire Harness from the Control Board.
4. Disconnect the Orange and double White wires from the convection fan.
5. Using your 7 1/16" nut setter and driver, remove the 4 x 7 1/16" nuts securing the convection fan to the stove. Fig C.
6. Using your putty knife or scraper remove the gasket material. Fig D.

Fig A



Fig B

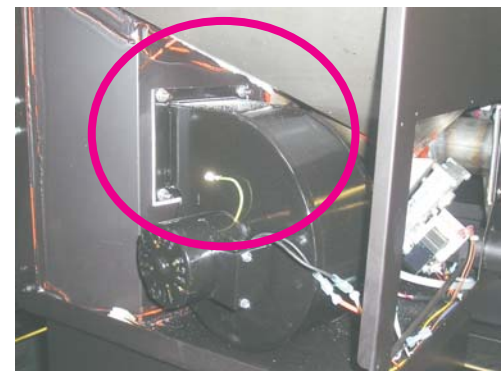


Fig C

Step By Step Re-Install:

1. Install the new gasketing
2. Place new Convection Fan over the threaded studs. Hand install and tighten the 4 x 7 1/16" nuts. Then tighten firmly, be careful not to over tighten, using the nut driver.
3. Re-connect the Fan wires to the Orange and Double White wires of the main harness. It does not matter which fan wire hooks to the main harness.
4. Re-install the Main Harness to the Control Board.
5. Re-install the Side Panel
6. Plug the appliance back into a surge protector, and start the Control Board to confirm that everything is working correctly.

Fig D

