



# AGP Pellet Stove - Cheat Sheet

The AGP Pellet Stove has several new features and characteristics that require special attention during installation and set-up. Refer to the manuals for full details.

- **The blower will start and run up to 20 minutes once the heater is plugged in (red light will turn on).**  
This safety feature evacuates smoke from the heater after a power interruption.
- **AGP stands for “All Grade Pellets” – Burn Wood Pellets Only**  
This stove is only for use with wood pellets of any grade. Do not burn corn or other materials.
- **This Stove Requires a Door (purchased separately)**  
This stove is shipped without a door. Order 96100793 (Avalon) or 96100774 (Lopi).
- **This Stove Requires Side Panels (purchased separately)**  
This stove is shipped without side panels. Order Black (94400024), Patina (94400025), or Stainless (94400026).
- **Disconnect Clips to Remove Stove from Pallet**  
This stove is attached to the pallet with four clips that slide over the leveling bolts. Remove the screws holding the clips to the pallet to remove.



- **This Stove has Lifting Handles on the Back**  
Two lifting handles are built into the back of the stove if you need to manually position the stove (we recommend using an Escalara® or hand truck to move the stove to the install site). Remove the cover plates shown below (1/4" nutdriver) and position the stove by grasping the door opening and handle. Replace plates after use.



- **Use 3” Diameter Type “L” Vent with this Pellet Stove**  
This stove has been listed for use with 3” diameter type “L” vent.
- **This Stove has a “Smart Blower” and Various “Thermostat Modes”**  
This stove has an improved circuit board that allows the blower speed to vary with burn rate. The circuit board also has thermostat programs to control the stove in a more sophisticated manner. See manual for details.
- **Burnpot Tool is Included in the Owner’s Pack**  
The included burnpot tool has two sides that allow you to scrape the burnpot and clean out any clogged burnpot openings. See manual for details.
- **Outside Air Kit (99200136) is Easy to Install and Highly Recommended**  
The outside air kit uses 1-3/4” flex (2” hole in wall) and is highly recommended. This kit improves efficiency and reduces chance of smoke spillage during power outages. See kit and manual for details.
- **New Wall Thermostat (99300687) Fits Directly Into the Stove**  
The new wall-mounted thermostat fits directly into the stove. See instruction sheet for details.
- **New Pellet-Feed System Doesn’t Require Priming**  
This stove uses a new feed system for feeding pellets to the firebox. When first used, or if pellets run out, the pellet stove will start normally after a 3 – 5 minute delay.