

If the hoper switch is working backwards (auger turns when open—  
auger stops when closed):

- ✓ The wires are plugged into the wrong prongs. They should be on the bottom two prongs as shown in the diagram:

80491 Microswitch

