



HOW TO ORDER REPAIR PARTS FOR SEARS RANGE

Sears, Roebuck and Co.  
 Please send me by Parcel Post the following part for  
 my soft coal and wood Range, Model Number 143.355110  
 Part No. 3052, Ash Pan  
 Your Name and Address \_\_\_\_\_

ALL PRICES SUBJECT TO CHANGE WITHOUT NOTICE

All parts shown on this list and illustrated on the parts  
 page 2 may be ordered through any Sears retail or  
 prices will be furnished on request  
 and you will be

Key No.	Part No.	Name of Part	Key No.	Part No.	Name of Part
1	2415	Fire Door Panel	51	3641	Register Slide Knob
2	2416	Fire Door Lining	52	1001	Oven Door Catch Knob
3	2417	Fire Door, Inside	53	2464	Protection Plate, Left End
4	2418	Grate Hole Plate	54	2465	Fire Door Hinge, Top
5	3052	Ash Pan	55	3062	Backguard, Splash Panel
6	2420	Front, Main	56	3063	Backguard, Top Panel
7	2421	Base	57	3064	Nameplate
8	2915	Oven Door Panel	*	3065	Flue Back
9	2912	Oven & Comp. Door Handle	*	3066	Bottom, Main
10	1038	Oven Thermometer	*	3067	Flue Strip, Bottom
11	2424	Utility Comp. Panel	*	2470	Fire Door Hinge, Bottom
12	2425	Fire & Resv. Door Knob	*	3068	Reservoir Compartment
13	3053	Reservoir Panel	*	2475	Utility Door Lining
14	2427	Reservoir Top	*	2359	Oven Door Catch Assembly
15	2428	Reservoir Cover, Small	*	2477	Left End Panel
16	2429	Reservoir Cover, Large	*	2478	Right End Panel
17	2430	Front Top	*	3616	Oven Door Spring
18	3054	Back, Main	*	1029	Utility Door Hinge, (2) required
19	3055	Oven Plate, Top	*	3623	Oven Spring Washer
20	1075	Damper	*	2484	Utility Door Limit Chain
21	2434	Back Top	*	2780	Fire Door Roller Catch
22	2435	Cover, any	*	2916	Oven Door Lining
23	2436	Short Center Panel, Open	*	3069	Oven, Welded
24	2437	Panel, Open	*	3070	Guides, Oven Rack Large
25	2438	Left End Top	*	3071	Guides, Oven Rack Small
26	3056	Backguard End, Left	*	3072	Oven Rack
27	3057	Backguard End, Right	*	3073	Reservoir Compartment, Front
28	2440	Panel, Closed	*	3074	End, Right Inside
29	2441	Reservoir Tank	*	3075	Pocket, Wood
30	2443	End Lining, Front	*	F3076	Customer Instructions & Parts List
31	2444	End Lining, Back	<u>OPTIONAL WATERFRONT PARTS</u>		
32	2445	Lifter & Shaker	*	1022	Waterfront
33	2446	Collar Section, Large	*	2487	Waterfront Left Side Lining
34	2447	Fire Box Liner, Left Side	*	2488	Waterfront Back End Lining
35	2448	Fire Back, Left Section			
36	2449	Fire Back, Right Section			
37	2450	Grate Cog, either			
38	2451	Grate Bar, Long			
39	2452	Grate Bar, Short			
40	3058	Left End Panel, Inside			
41	3607	Register Slide			
42	2454	Collar Section, Small			
43	3059	Damper Handle			
44	2456	Oven Door Hinge, Right			
45	2458	Center Post			
46	3060	Spring Rod & Lt. Oven Hinge			
47	2459	Oven Door Hinge Rod			
48	3061	Damper Arm			
49	2461	Coil Stop			
50	2462	Clean Out Door			

\* Not Illustrated