



PARTS LIST

- | | |
|--------------------------------|-----------------------------------|
| 1. Long Center (Half Section). | 16. Bottom, Extreme. |
| 2. Lifter. | 17. Oven Door, Right. |
| 3. Cover. | 18. Fire Door. |
| 4. Center, Short. | 19. Shelf, Side, Below Oven Door. |
| 5. Shelf, Back or End. | 20. Side, Right. |
| 6. Top. | 21. Front, Lower. |
| 7. Extreme Back. | 22. Soot Door. |
| 8. Damper. | 23. Soot Rake. |
| 9. Flue Strip, Back. | 24. Grate Basket for Wood. |
| 10. Oven Plate, Back. | 25. Top, Front. |
| 11. Leg, Base. | 26. Front Door for Wood. |
| 12. Oven Plate, Bottom. | 27. Oven Door, Left. |
| 13. Oven Plate, Top. | 28. Side, Left. |
| 14. Hearth Bottom. | 29. Hearth Plate. |
| 15. Flue Strip, Bottom. | 30. Fire Back. |

WHEN ORDERING REPAIR PARTS ALWAYS GIVE THE MODEL NUMBER, THE PART NAME AND THE KEY NO.

MARTIN
INDUSTRIES

King Products Division

P.O. BOX 730 - SHEFFIELD, ALABAMA 35660