



43F

Free Standing Conversion Kit

Instruction Sheet
(For Forester 4300 Room Heaters)



TOOLS REQUIRED:

- 1/4" Electric Drill
- Pencil
- 12" Ruler or Tape Measure
- 3/8" Box, Open End or Small Adjustable Wrench
- Gloves
- Prick Punch

LEG INSTALLATION

1. Make sure the doors, firebrick, air manifold, hearth extension grill and/or other loose objects are removed from the firebox.
2. Rotate the heater backwards onto the back side.
3. Position the leg assembly on the bottom of the heater as shown in Fig. 1. Mark the hole locations using the leg assembly holes as locators. Using an electric drill and the drill bit (7/32" dia.) provided, drill (8) holes in the bottoms of the cabinet in the locations shown in Fig. 1.
4. Mount the four legs (leg covers towards front of heater) using the (8) 1/4-20 self-threading screws provided, with an adjustable or 3/8" wrench. (Fig. 2)
5. Rotate heater upright on legs and place heater in desired location.
6. Install firebrick and air manifold as shown in the manual.

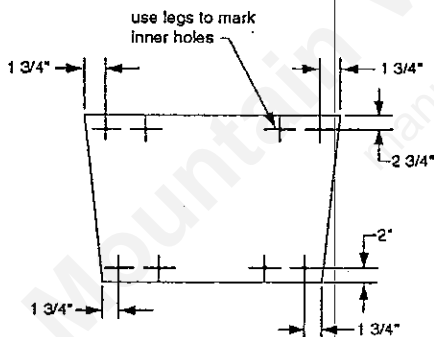


Fig. 1



**UNITED STATES
STOVE COMPANY**

227 INDUSTRIAL PARK ROAD
P.O. BOX 151
SOUTH PITTSBURG, TN 37380
(423) 837-2100

FLUE ADAPTER INSTALLATION

1. Place flue gasket on flue adapter and install assembly into flue as shown in figure 3.
2. Install flue tie down bars so that the ends rest on the inside shoulders of the flue adapter. The bolts welded to the bars should go through the holes provided in the brackets welded to the inside of the flue.
3. Secure assembly with 3/8-16 nuts and lockwashers provided.
4. Hold tie down bars in place and tighten nuts with an adjustable or 9/16" wrench.
5. Install Doors.

DOOR INSTALLATION

1. When facing the front of the heater, the left hand and right hand doors are to be mounted on the hinge pad rods that are located on the front of the heater, by sliding the door hinge pads that are on the door over the rods. The left hand door is mounted to the left hand hinge pad rods and the right hand door is mounted to the right hand hinge pad rods.

NOTE: Both handles are to fit horizontally when both doors are closed on unit.

ITEM	PART NUMBER	QUANTITY
Hex Nut	83238	2
3/8" Lock Washer	83237	2
Flue Gasket	88054	1
Flue Adapter Assembly	67921	1
Flue Adapter Shield	22205	1
Flue Tie Down	67920	2
Leg	67840	4
1/4-20x3/4" Screw	83236	8
7/32" Drill Bit	89185	1

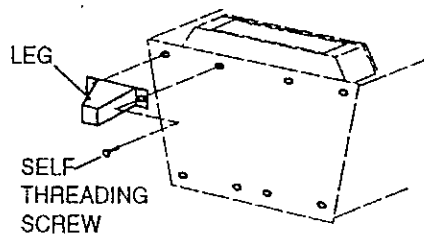


Fig. 2
Bottom view of heater

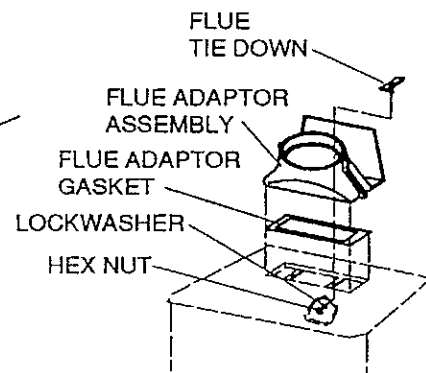


Fig. 3
Top view of heater

85409I