



Intrepid II 1676

Parts List

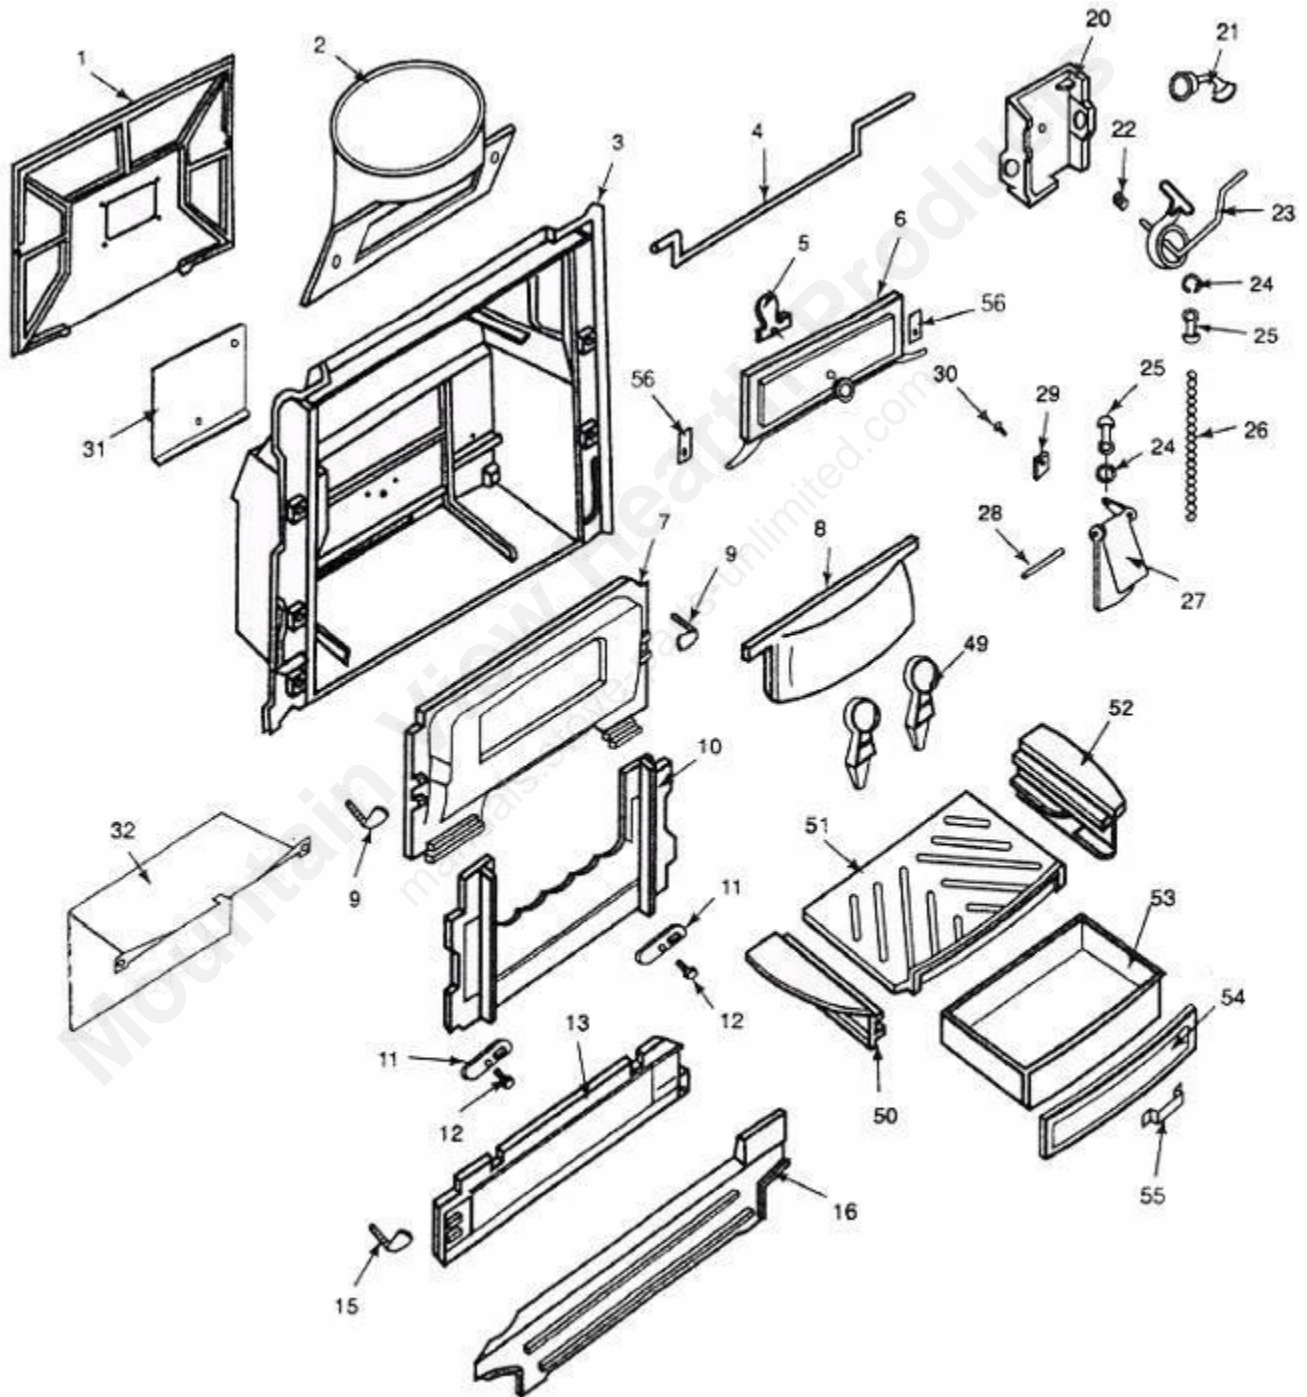

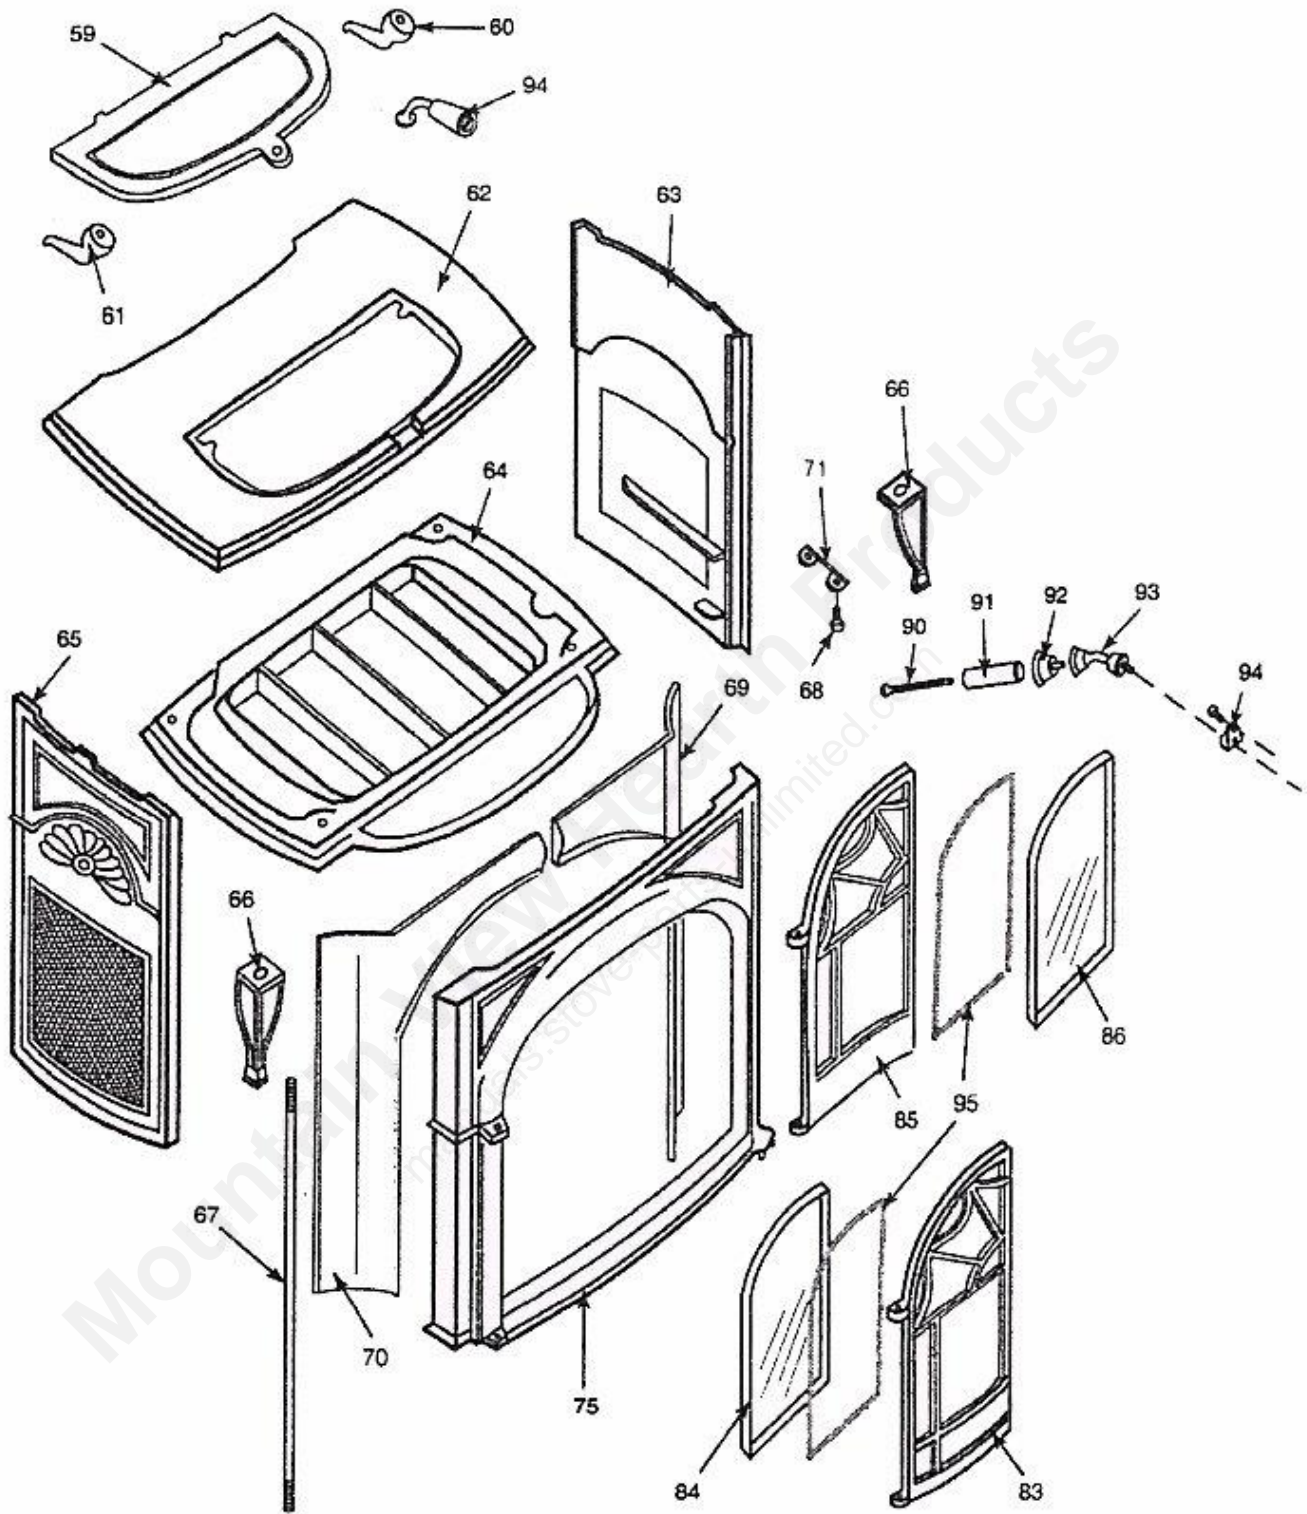

Ref #	Part Number	Description of Parts
1	1306762	Secondary Air Cover
2	1306561	Flue Collar
3	1308662	Back Panel
4	1602523	Damper Rod
5	1306725	Damper D-Plate
6	1306701	Damper
7	1306702	Damper Housing
8	1306763	Throat Hood
9	1201583	Weld Screw
10	1306703	Upper Fireback
11	1306724	Fireback Clamp
12	1201456	3/8" - 16 X 1 1/2" Hex Bolt
13	1306704	Lower Fireback
15	1201583	Weld Screw
16	1306706	Rear Air Tube
20	1306711	Thermostat Cover
21	1600610	Damper Handle Stub
22	1201846	Friction Spring
23	1601420	Primary Thermostat Assembly
24	1601408	Thermostat Clip
25	1201972	Ball Chain Fitting (2)
26	1201960	Ball Chain
27	1306710	Primary Air Flap
28	1601551	Air Flap Pin
29	1601396	Clip
30	1200983	10 – 24 X 3/8" Pan Head Bolt
31	1608955	Cover Plate
32	1401158	Flue Gas Deflector
49	1306717	Andiron
50	1308651	Left Insert
51	1308652	Grate
52	1308650	Right Insert
53	1400951	Ashpan
54	1306522	Ashpan Front

55	30000973	Ashpan Handle
56	1601488	Damper Tab
59	1306356	Griddle
60	1301832	Right Griddle Quadrant
61	1301807	Left Griddle Quadrant
62	1308657	Top
63	1306723	Right Side
64	1306764	Bottom
65	1306709	Left Side
66	1306333	Leg
67	1601640	Tie Rod
68	1201432	Leg Bolt
69	1308653	Right Air Manifold
70	1308654	Left Air Manifold
71	1600660	Handle Holder
75	1308647	Front
83	1308649	Left Door
84	1401157	Left Glass Panel
85	1308648	Right Door
86	1401156	Right Glass Panel
90	1201294	Handle Bolt
91	1600620	Ceramic Handle
92	1600650	Handle Insert
93	1600608	Front Door Handle
94	5004022	Griddle handle Assembly
95	1203556	Gasket Fiberglass 3/16" 4nd Blk