


# Model 1869 Repair Parts

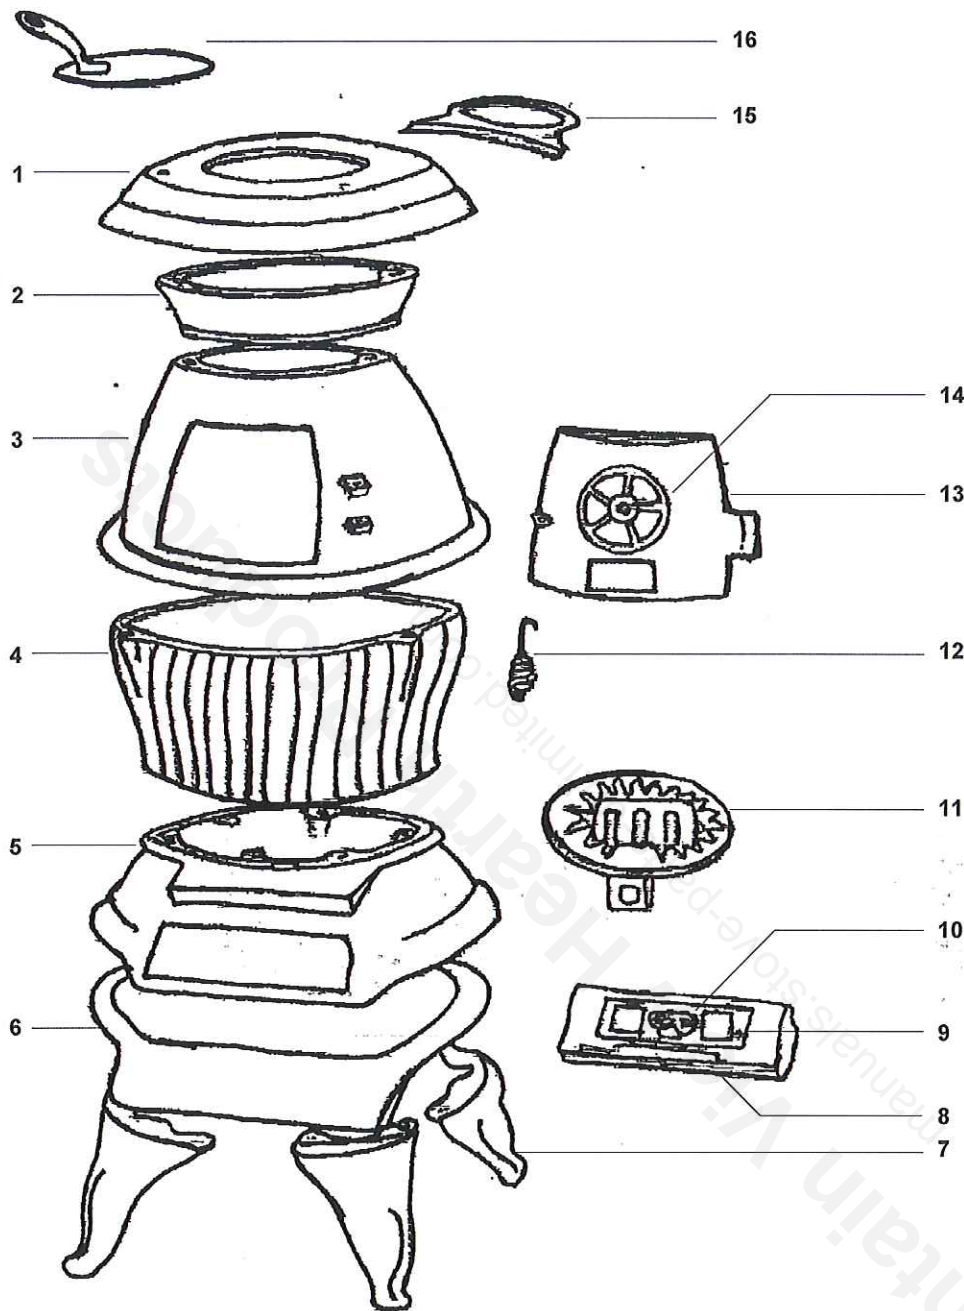

**IN ORDER TO MAINTAIN WARRANTY, COMPONENTS MUST BE REPLACED USING ORIGINAL MANUFACTURERS PARTS PURCHASED THROUGH YOUR DEALER OR DIRECTLY FROM THE APPLIANCE MANUFACTURER. USE OF THIRD PARTY COMPONENTS WILL VOID THE WARRANTY.**

KEY	PART NO.	DESCRIPTION	QTY.
1	89979	Top Plate	1
2	89980	Upper Chamber	1
3	89981	Feed Chamber	1
4	89982	Burn Chamber	1
5	89983	Lower Chamber	1
6	89984	Base	1
7	89985	Legs	4
8	89986	Ash Door	1

9	89987	Slide Draft	1
10	89988	Slide Draft Knob	1
11	89989	Shaker Grate	1
12	89990	Spring Handle	1
13	89991	Feed Door	1
14	89992	Spin Draft	1
15	89993	Collar Top	1
16	89994	Cook Lid	1
* NOT SHOWN			