


Models:
SL-950TR
SL-750TR
SL-750TRS
SL-750TRFL
SL-550TR
SL-550TRS

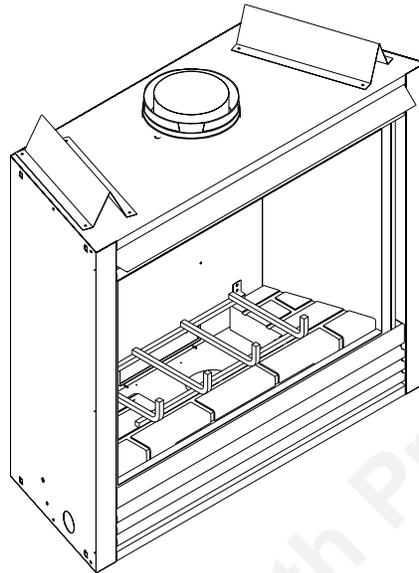

Installers Guide



Underwriters
Laboratories Listed

WARNING: IF THE INFORMATION IN THESE INSTRUCTIONS IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **What to do if you smell gas**
 - Do not try to light any appliance.
 - Do not touch any electrical switch.
 - Do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

READ THIS MANUAL BEFORE INSTALLING OR OPERATING THIS APPLIANCE. THIS *INSTALLERS GUIDE* MUST BE LEFT WITH APPLIANCE FOR FUTURE REFERENCE.

WARNING: IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE INJURY OR PROPERTY DAMAGE. REFER TO THIS MANUAL. FOR ASSISTANCE OR ADDITIONAL INFORMATION CONSULT A QUALIFIED INSTALLER, SERVICE AGENCY, OR THE GAS SUPPLIER.

1. This appliance may be installed in an aftermarket, permanently located, manufactured (mobile) home, where not prohibited by local codes.
2. This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless a certified kit is used.

Printed in U.S.A. Copyright 2000,
Heat-N-Glo, a division of Hearth Technologies Inc.
20802 Kensington Boulevard, Lakeville, MN 55044

Please contact your Heat-N-Glo dealer with any questions or concerns. For the number of your nearest Heat-N-Glo dealer, please call 952-985-6000.

This product is covered by one or more of the following patents: (United States) 4,112,913; 4,408,594; 4,422,426; 4,424,792; 4,520,791; 4,793,322; 4,852,548; 4,875,464; 5,000,162; 5,016,609; 5,076,254 5,191,877; 5,218,953; 5,328,356; 5,429,495; 5,452,708; 5,542,407; 5,613,487; (Australia) 543790; 586383; (Canada) 1,123,296; 1,297,746; 2,195,264; (Mexico) 97-0457; (New Zealand) 200265; or other U.S. and foreign patents pending.

SAFETY AND WARNING INFORMATION

 **READ** and **UNDERSTAND** all instructions carefully before starting the installation. **FAILURE TO FOLLOW** these installation instructions may result in a possible fire hazard and will void the warranty.

 Prior to the first firing of the fireplace, **READ** the Using Your Fireplace section of the *Owners Guide*.

 **DO NOT USE** this appliance if any part has been under water. Immediately **CALL** a qualified service technician to inspect the unit and to replace any part of the control system and any gas control which has been under water.

 **THIS UNIT IS NOT FOR USE WITH SOLID FUEL.**

 Installation and repair should be **PERFORMED** by a qualified service person. The appliance and venting system should be **INSPECTED** before initial use and at least annually by a professional service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. It is **IMPERATIVE** that the unit's control compartment, burners, and circulating air passageways **BE KEPT CLEAN** to provide for adequate combustion and ventilation air.

 Always **KEEP** the appliance clear and free from combustible materials, gasoline, and other flammable vapors and liquids.

 **NEVER OBSTRUCT** the flow of combustion and ventilation air. Keep the front of the appliance **CLEAR** of all obstacles and materials for servicing and proper operations.

 Due to the high temperature, the appliance should be **LOCATED** out of traffic areas and away from furniture and draperies. Clothing or flammable material **SHOULD NOT BE PLACED** on or near the appliance.

 Children and adults should be **ALERTED** to the hazards of high surface temperature and should **STAY AWAY** to avoid burns or clothing ignition. Young children should be **CAREFULLY SUPERVISED** when they are in the same room as the appliance.

 These units **MUST** use one of the vent systems described in the Installing the Fireplace section of the *Installers Guide*. **NO OTHER** vent systems or components **MAY BE USED**.

 This gas fireplace and vent assembly **MUST** be vented directly to the outside and **MUST NEVER** be attached to a chimney serving a separate solid fuel burning appliance. Each gas appliance **MUST USE** a separate vent system. Common vent systems are **PROHIBITED**.

 **INSPECT** the external vent cap on a regular basis to make sure that no debris is interfering with the air flow.

 The glass door assembly **MUST** be in place and sealed, and the trim door assembly **MUST** be in place on the fireplace before the unit can be placed into safe operation.

 **DO NOT OPERATE** this appliance with the glass door removed, cracked, or broken. Replacement of the glass door should be performed by a licensed or qualified service person. **DO NOT** strike or slam the glass door.

 The glass door assembly **SHALL ONLY** be replaced as a complete unit, as supplied by the gas fireplace manufacturer. **NO SUBSTITUTE** material may be used.

 **DO NOT USE** abrasive cleaners on the glass door assembly. **DO NOT ATTEMPT** to clean the glass door when it is hot.

 Turn off the gas before servicing this appliance. It is recommended that a qualified service technician perform an appliance check-up at the beginning of each heating season.


 Any safety screen or guard removed for servicing must be replaced before operating this appliance.

TABLE OF CONTENTS

Safety and Warning Information	2
◆ Service Parts Lists	4
Section 1: Approvals and Codes	16
◆ Approval Listings and Codes	16
Appliance Certification	16
Installation Codes	16
High Altitude Installations	16
Section 2: Getting Started	17
Introducing the Heat-N-Glo Gas Fireplaces	17
Pre-installation Preparation	17
Section 3: Installing the Fireplace	21
◆ Step 1 Locating the Fireplace	21
Step 2 Framing the Fireplace	21
◆ Step 3 Installing the Vent System	24
A. Vent System Approvals	24
B. Installing Vent Components	22
C. Vent Termination	42
Step 4 Positioning, Leveling, and Securing the Fireplace	45
Step 5 The Gas Control Systems	45
Step 6 The Gas Supply Line	46
Step 7 Gas Pressure Requirements	46
Step 8 Wiring the Fireplace	47
Step 9 Finishing	49
Step 10 Installing Trim, Logs, and Ember Material	50
Installing the Trim	50
◆ Removing Grate Shipping Support	50
Positioning the Logs	50
◆ Placing the Ember Material	50
◆ Step 11 Before Lighting the Fireplace	51
Step 12 Lighting the Fireplace	51
After the Installation	51
Section 4: Maintaining and Servicing Your Fireplace	52

◆ = Contains updated information.

SL-550TR and SL-550TR-DSI (NG, LP) Exploded Parts Diagram / Vue éclatée des pièces

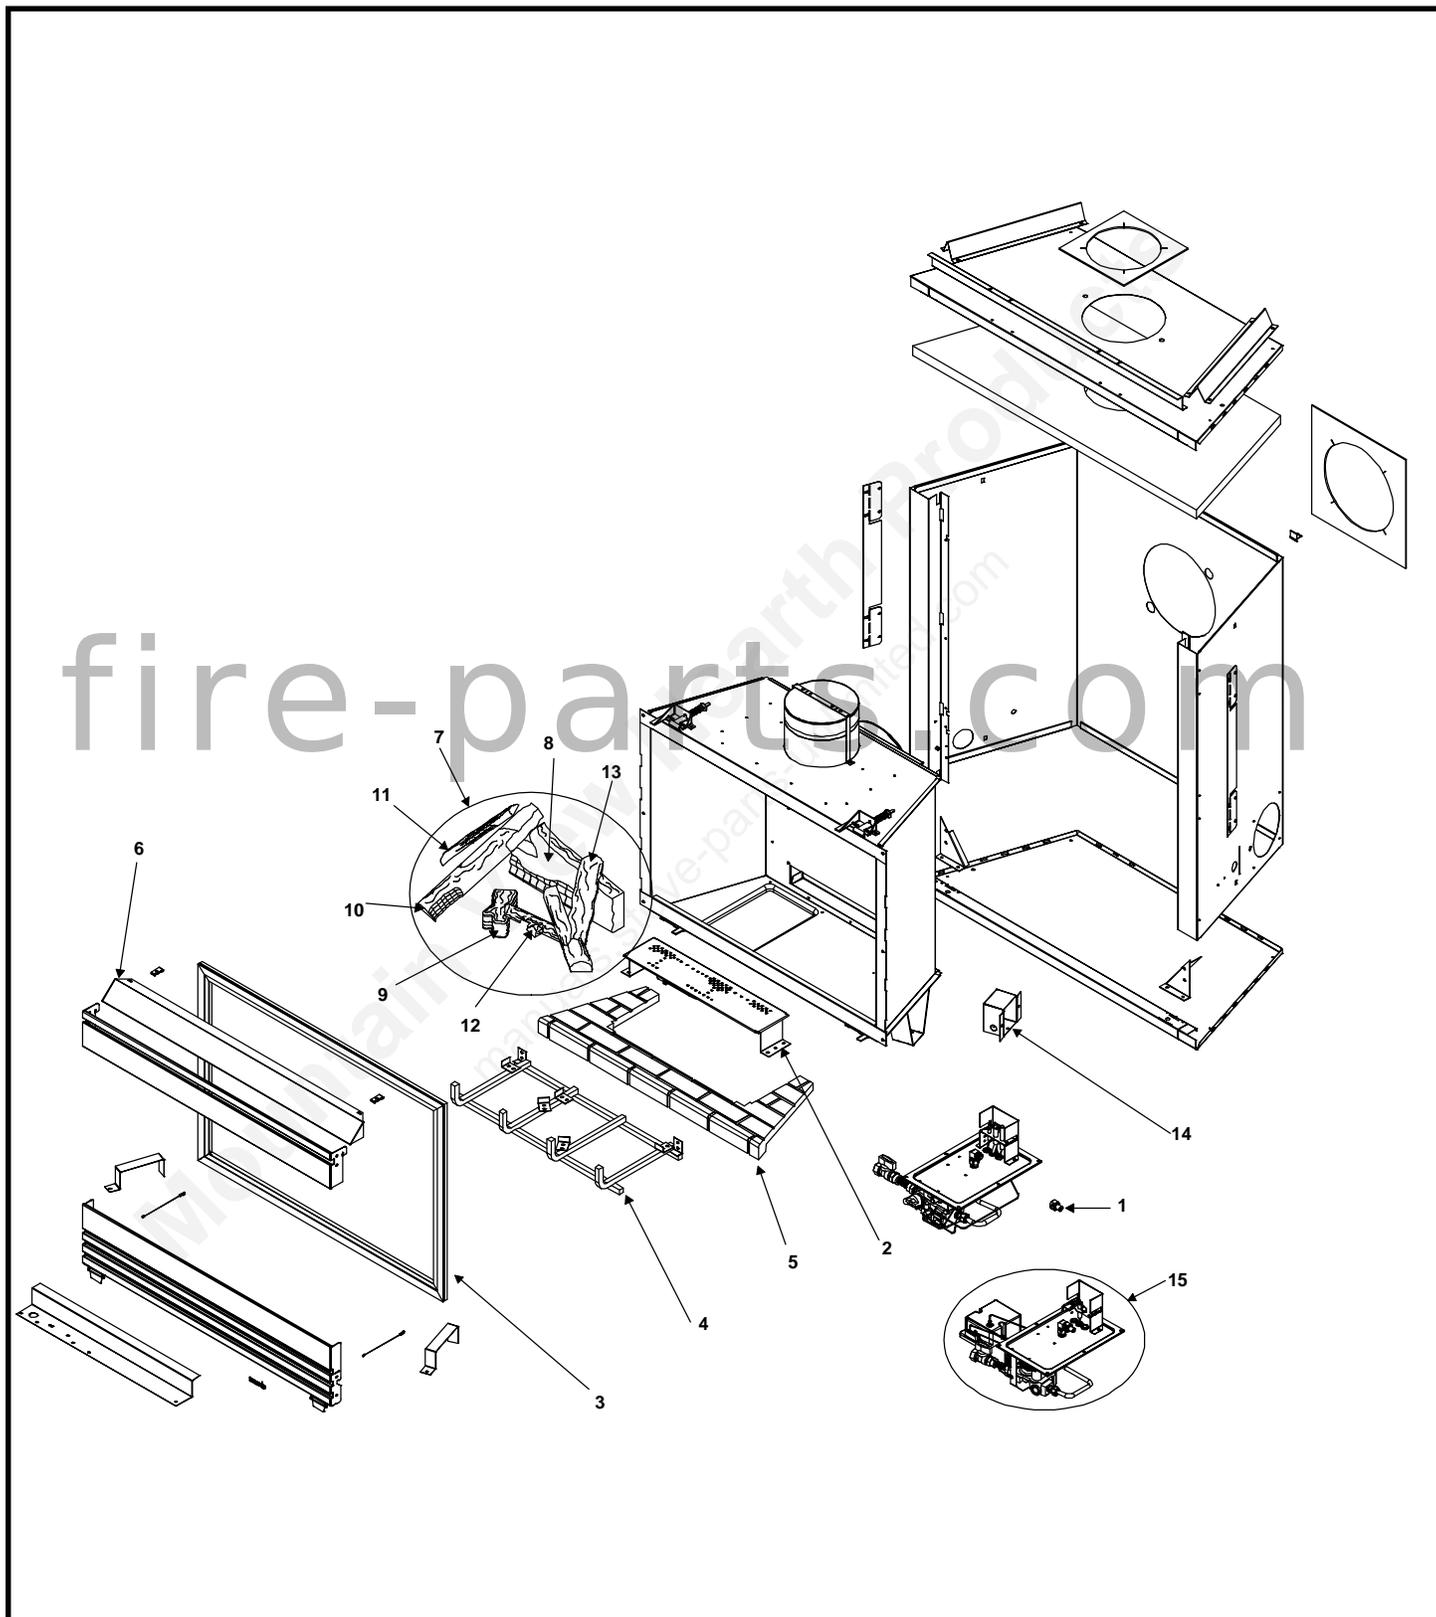

* Part number list on following page.


* La liste des numéros de pièce se trouve à la page suivante.

SL-550TR and SL-550TR-DSI (NG, LP) Service Parts List / Liste des pièces de rechange

IMPORTANT: THIS IS DATED INFORMATION. The most current information is located on your dealers VIP site. When ordering, supply serial and model numbers to ensure correct service parts. / **IMPORTANT :** L'information fournie dans cette brochure n'est valide que pendant une courte période. Les sites VIP des distributeurs disposent des renseignements les plus récents. Lors d'une commande, veuillez fournir les numéros de série et de modèles pour un remplacement adéquat des pièces.

ITEM / PIÈCE	STANDING PILOT AND DSI IGNITION COMMON PARTS / UNE VEILLEUSE ET ALLUMAGE DSI PIÈCES COMMUNES	SERIAL # / N° DE SÉRIE	PART NUMBER / N° DE PIÈCE
	ON/OFF Rocker Switch / Interrupteur à bascule marche/arrêt		060-511
	Burner Tube / Tube de brûleur		477-301A
1	Burner Orifice NG (#44A) / Orifice de brûleur GN (#44A)		041-800
1	Burner Orifice LP (#54A) / Orifice de brûleur PL (#54A)		061-801
2	Burner NG, LP / Brûleur GN, PL		530-131A
3	Glass Door Assembly / Porte en verre		GLA-550
4	Log Grate / Grille de Bûche		550-360A
5	Base Refractory NG / Réfractaire Base GN	PRE 19658 POST 19658	SRV550-337 SRV550-339
5	Base Refractory LP / Réfractaire Base PL	PRE 1432 POST 1432	SRV550-337 SRV550-339
6	Hood / Hotte		SRV550-175
7	Log Set Assembly / Module de Jeu de Bûches		LOGS-550S
8	Log 1 / Bûche 1		SRV530-701
9	Log 2 / Bûche 2		SRV530-704
10	Log 3 / Bûche 3		SRV530-702
11	Log 4 / Bûche 4		SRV530-703
12	Log 5 / Bûche 5		SRV530-705
13	Log 6 / Bûche 6		SRV569-707
STANDING PILOT IGNITION ONLY / D'ALLUMAGE PAR VEILLEUSE SEULEMENT			
14	Junction Box / Boîtier de raccordement		100-250A
	Piezo Ignitor / Allumage Piézo		418-513
	Valve NG / Valve GN		060-522
	Valve LP / Valve PL		060-521
	Pilot Assembly NG / Module de veilleuse GN		485-510A
	Pilot Assembly LP / Module de veilleuse PL		485-511A
DSI IGNITION ONLY / ALLUMAGE DSI SEULEMENT			
14	Junction Box / Boîtier de raccordement		100-254A
15	Valve Assembly -DSI NG / Module de Valve-DSI GN		550-007A
15	Valve Assembly -DSI LP / Module de Valve-DSI PL		550-008A
	DSI Valve NG / DSI Valve GN		492-500
	DSI Valve LP / DSI Valve PL		492-501
	Ignitor / Allumage		501-591
	Module / Module		501-592
ACCESSORIES / ACCESSOIRES			
	Fan Kit / Module de ventilateur		GFK-160A
	Extended Vertical Baffle Kit / Module de verticale étendu le défecteur		BAF-VERT
	Wall Switch Kit, Off-white / Module d'interrupteur mural, Blanc Cassé		WSK-21
	Wall Switch Kit, White / Module d'interrupteur mural, Blanc		WSK-21-W
	Conversion Kit NG (Standing Pilot only) / Module de conversion GN (Allumage une veilleuse seulement)		NGK-55TR
	Conversion Kit LP (Standing Pilot only) / Module de conversion PL (Allumage une veilleuse seulement)		LPK-55TR

SL-550TRS-B (NG, LP) Exploded Parts Diagram / Vue éclatée des pièces

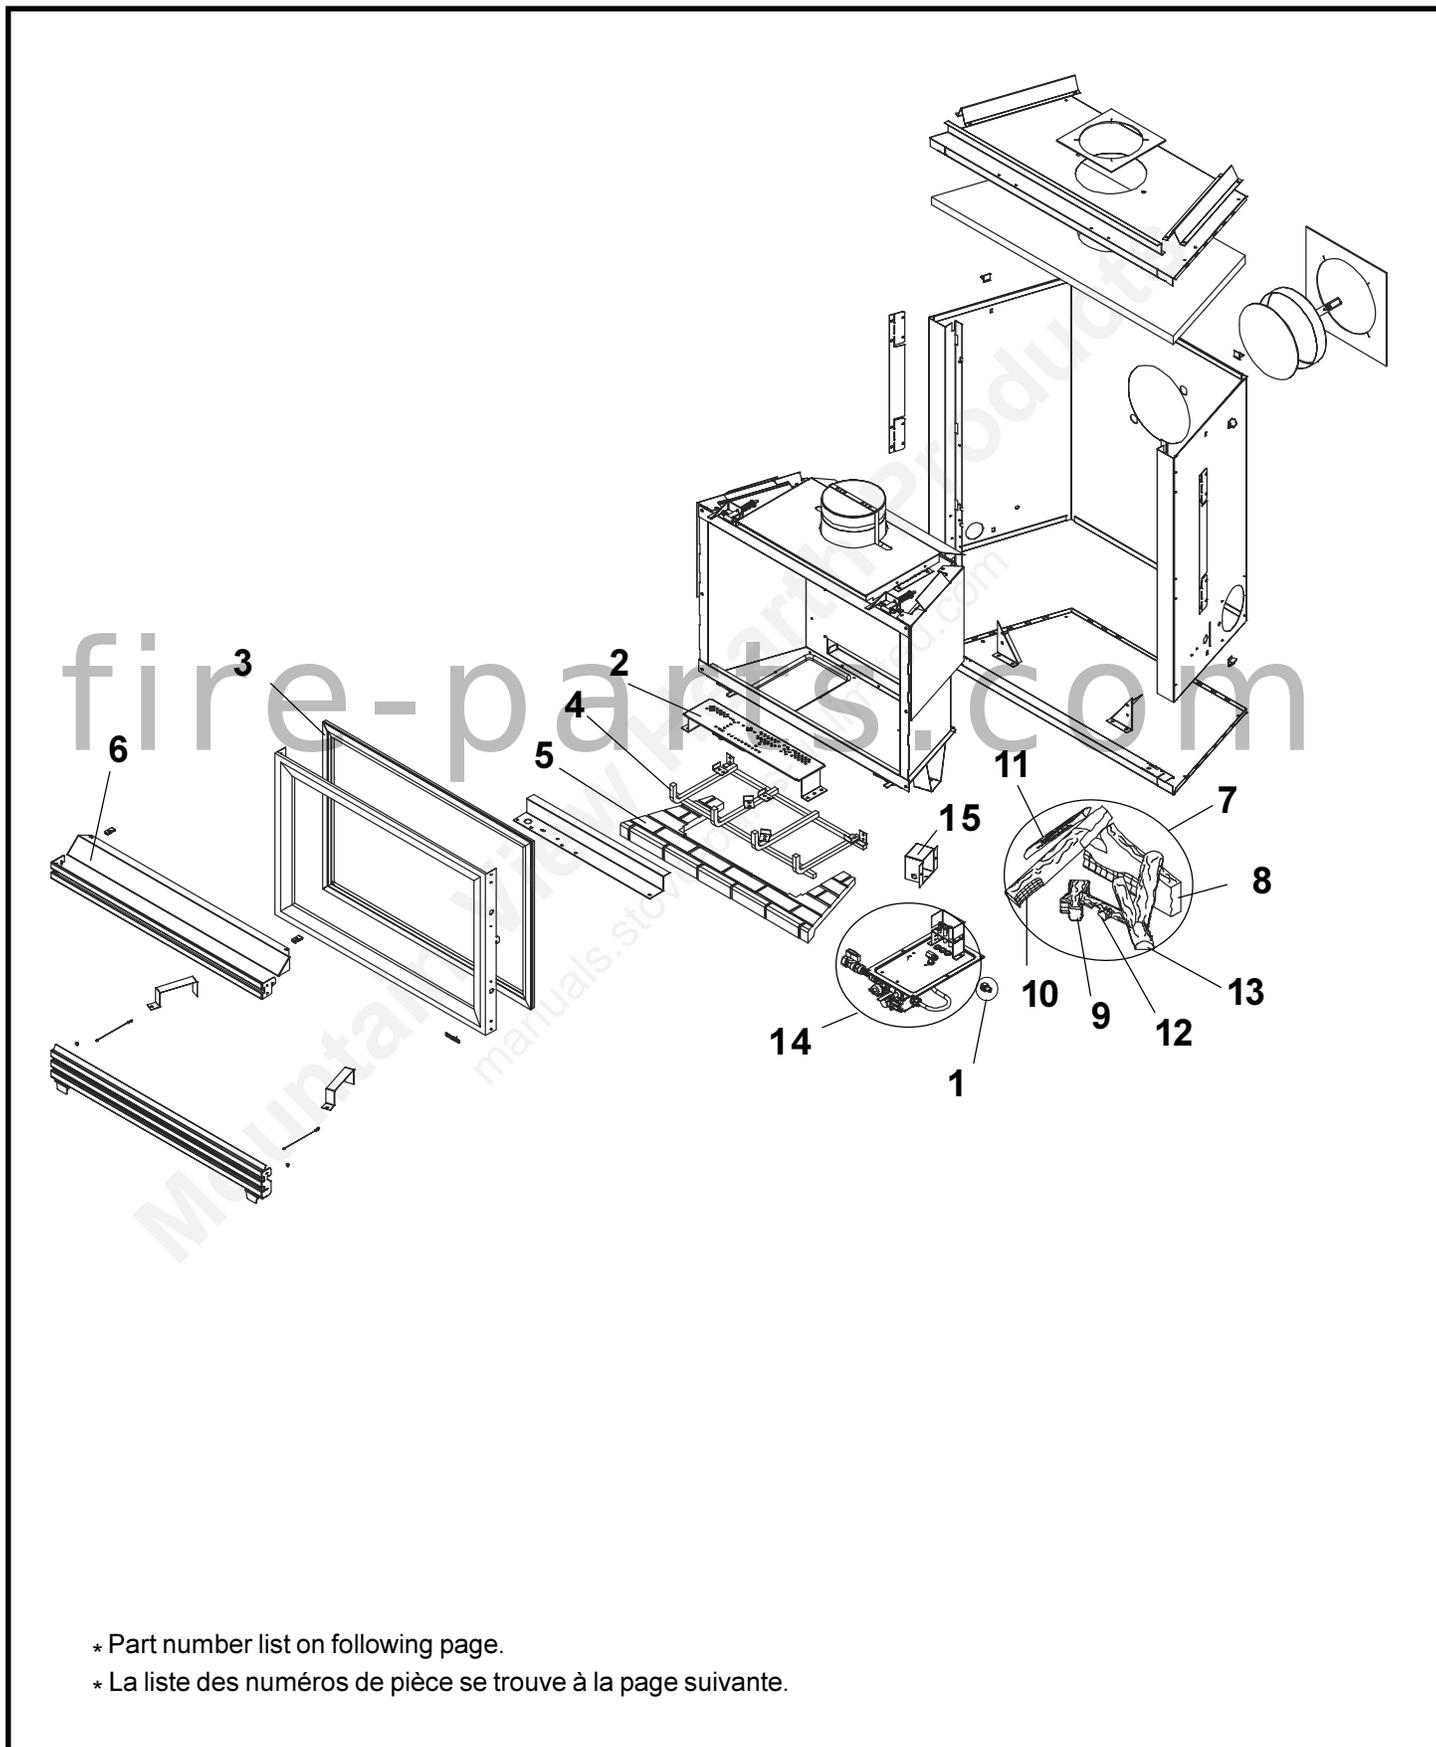

* Part number list on following page.


* La liste des numéros de pièce se trouve à la page suivante.

SL-550TRS-B (NG, LP) Service Parts List / Liste des pièces de rechange

IMPORTANT: THIS IS DATED INFORMATION. The most current information is located on your dealers VIP site. When ordering, supply serial and model numbers to ensure correct service parts. / **IMPORTANT :** L'information fournie dans cette brochure n'est valide que pendant une courte période. Les sites VIP des distributeurs disposent des renseignements les plus récents. Lors d'une commande, veuillez fournir les numéros de série et de modèles pour un remplacement adéquat des pièces.

ITEM / PIÈCE	STANDING PILOT IGNITION / D'ALLUMAGE PAR VEILLEUSE	SERIAL # / N° DE SÉRIE	PART NUMBER / N° DE PIÈCE
	Piezo Ignitor / Allumage Piézo		418-513
	Burner Tube / Tube de brûleur		477-301A
1	Burner Orifice NG (#38A) / Orifice de brûleur GN (#38A)		057-800
1	Burner Orifice LP (#52A) / Orifice de brûleur PL (#52A)		057-801
2	Burner NG / Brûleur GN		547-231A
2	Burner LP / Brûleur PL		547-233A
3	Glass Door Assembly / Porte en verre		GLA-550S
4	Log Grate / Grille de Bûche		550-360A
5	Base Refractory NG / Réfractaire Base NG	PRE 3585 POST 3585	SRV550-337 SRV550-339
5	Base Refractory LP / Réfractaire Base PL	PRE 3235 POST 3235	SRV550-337 SRV550-339
6	Hood / Hotte		SRV550-175
7	Log Set Assembly / Module de Jeu de Bûches		LOGS-550S
8	Log 1 / Bûche 1		SRV530-701
9	Log 2 / Bûche 2		SRV530-704
10	Log 3 / Bûche 3		SRV530-702
11	Log 4 / Bûche 4		SRV530-703
12	Log 5 / Bûche 5		SRV530-705
13	Log 6 / Bûche 6		SRV569-707
14	Valve Assembly NG / Module de valve GN		534-015A
14	Valve Assembly LP / Module de valve PL		534-016A
15	Junction Box / Boîtier de raccordement		100-250A
	Valve NG / Valve GN		060-522
	Valve LP / Valve PL		060-523
	Pilot Assembly NG / Module de veilleuse GN		485-510A
	Pilot Assembly LP / Module de veilleuse PL		485-511A
	Pilot Orifice NG / Orifice de veilleuse GN		446-505
	Pilot Orifice LP / Orifice de veilleuse PL		446-517
	Thermocouple / Thermocouple		446-511
	Thermopile / Thermopile		060-512
ACCESSORIES / ACCESSOIRES			
	Fan Kit / Module de ventilateur		GFK-160A
	Extended Vertical Baffle Kit / Module de verticale étendu le déflecteur		BAF-VERT
	Wall Switch Kit, Off-white / Module d'interrupteur mural, Blanc Cassé		WSK-21
	Wall Switch Kit, White / Module d'interrupteur mural, Blanc		WSK-21-W
	Conversion Kit NG / Module de conversion GN	PRE 2172 POST 2172	NGK-55TR NGK-55TRS
	Conversion Kit LP / Module de conversion PL	PRE 1234 POST 1234	LPK-55TR LPK-55TRS

SL-750TR and SL-750TR-DSI (NG, LP) Exploded Parts Diagram / (GN, PL) Vue éclatée des pièces

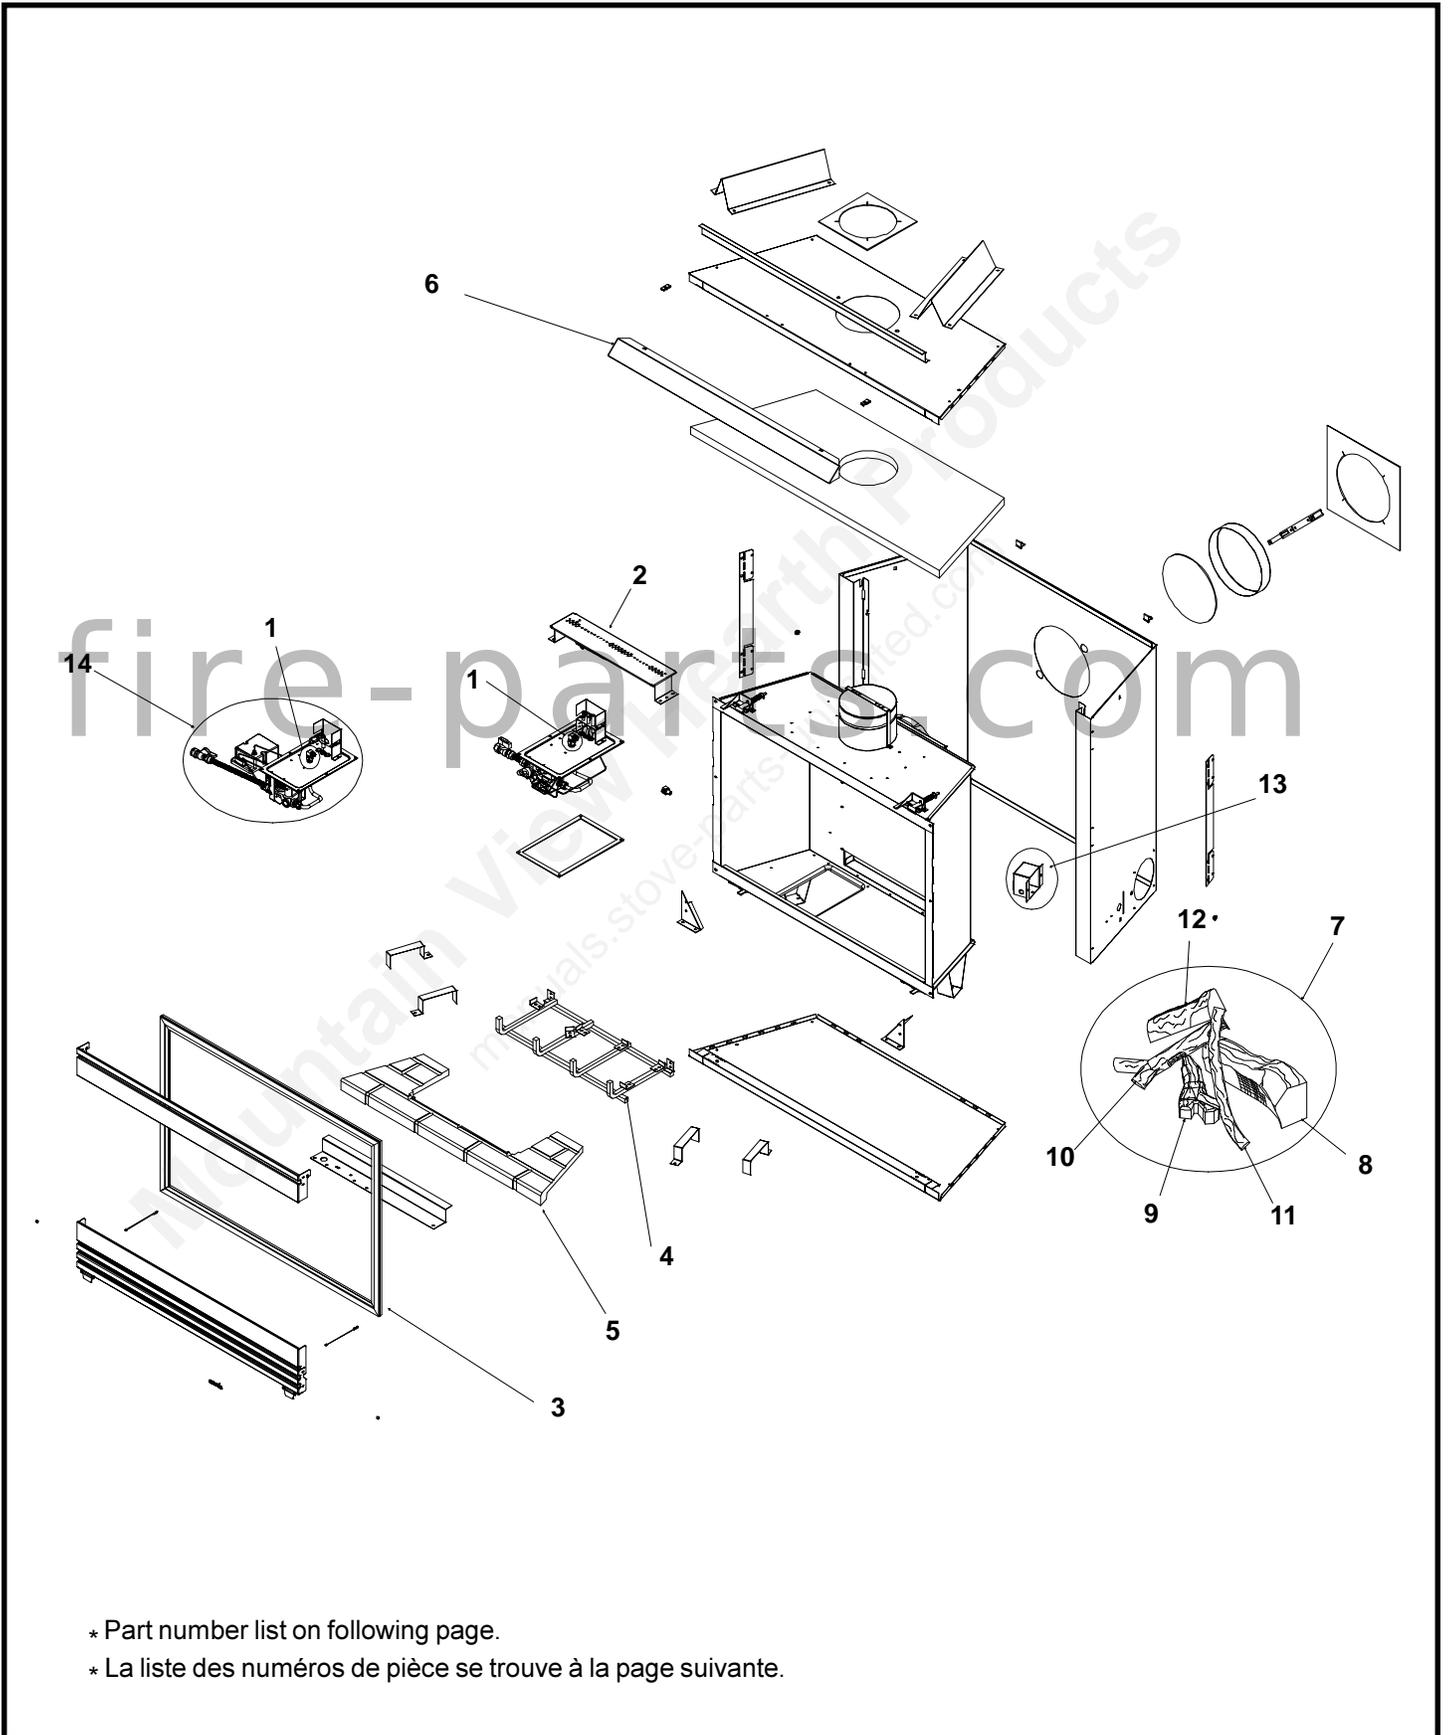


* Part number list on following page.
* La liste des numéros de pièce se trouve à la page suivante.

SL-750TR and SL-750TR-DSI (NG, LP) Service Parts List / Liste des pièces de rechange

IMPORTANT: THIS IS DATED INFORMATION. The most current information is located on your dealers VIP site. When ordering, supply serial and model numbers to ensure correct service parts. / **IMPORTANT :** L'information fournie dans cette brochure n'est valide que pendant une courte période. Les sites VIP des distributeurs disposent des renseignements les plus récents. Lors d'une commande, veuillez fournir les numéros de série et de modèles pour un remplacement adéquat des pièces.

ITEM / PIÈCE	STANDING PILOT AND DSI IGNITION / UNE VEILLEUSE ET ALLUMAGE DSI	SERIAL # / N° DE SÉRIE	PART NUMBER / N° DE PIÈCE
	ON/OFF Rocker Switch / Interrupteur à bascule marche/arrêt		060-511
	Burner Tube / Tube de brûleur		477-301A
1	Burner Orifice NG (#42A) / Orifice de brûleur GN (#42A)		060-800
1	Burner Orifice LP (#53A) / Orifice de brûleur PL (#53A)		060-801
2	Burner NG / Brûleur GN		560-231A
2	Burner LP / Brûleur PL		530-233A
3	Glass Door Assembly / Porte en verre		GLA-750
4	Log Grate / Grille de Bûche		530-360A
5	Base Refractory NG / Réfractaire Base GN	PRE 37686 POST 37686	SRV530-337 SRV530-339
5	Base Refractory LP / Réfractaire Base PL	PRE 2694 POST 2694	SRV530-337 SRV530-339
6	Hood / Hotte		SRV530-175
7	Log Set Assembly / Module de Jeu de Bûches		LOGS-750
8	Log 1 / Bûche 1		SRV530-711
9	Log 2 / Bûche 2		SRV402-701
10	Log 3 / Bûche 3		SRV560-703
11	Log 4 / Bûche 4		SRV560-702
12	Log 5 / Bûche 5		SRV560-704
STANDING PILOT IGNITION ONLY / D'ALLUMAGE PAR VEILLEUSE SEULEMENT			
	Piezo Ignitor / Allumage Piézo		418-513
13	Junction Box / Boîtier de raccordement		100-250A
	Valve NG / Valve GN		060-522
	Valve LP / Valve PL		060-521
	Pilot Assembly NG / Module de veilleuse GN		485-510A
	Pilot Assembly LP / Module de veilleuse PL		485-511A
	Pilot Orifice NG / Orifice de veilleuse GN		446-505
	Pilot Orifice LP / Orifice de veilleuse PL		446-517
	Thermocouple / Thermocouple		446-511
	Thermopile / Thermopile		060-512
	Pilot Tube / Tube de veilleuse		SRV485-301
DSI IGNITION ONLY / ALLUMAGE DSI SEULEMENT			
13	Junction Box / Boîtier de raccordement		100-254A
14	Valve Assembly -DSI NG / Module de Valve-DSI GN		550-007A
14	Valve Assembly -DSI LP / Module de Valve-DSI PL		550-008A
	DSI Valve NG / DSI Valve GN		492-500
	DSI Valve LP / DSI Valve PL		492-501
	Ignitor / Allumage		501-591
	Module / Module		501-592
ACCESSORIES / ACCESSOIRES			
	Fan Kit / Module de ventilateur		GFK-160A
	Extended Vertical Baffle Kit / Module de verticale étendu le déflecteur		BAF-VERT
	Wall Switch Kit, Off-white / Module d'interrupteur mural, Blanc Cassé		WSK-21
	Wall Switch Kit, White / Module d'interrupteur mural, Blanc		WSK-21-W
	Conversion Kit NG (Standing Pilot only) / Module de conversion GN (Allumage une veilleuse seulement)		NGK-75TR
	Conversion Kits LP (Standing Pilot only) / Modules de conversion PL (Allumage une veilleuse seulement)		LPK-75TR

SL-750TRS-B (NG, LP) Exploded Parts Diagram / (GN, PL) Vue éclatée des pièces

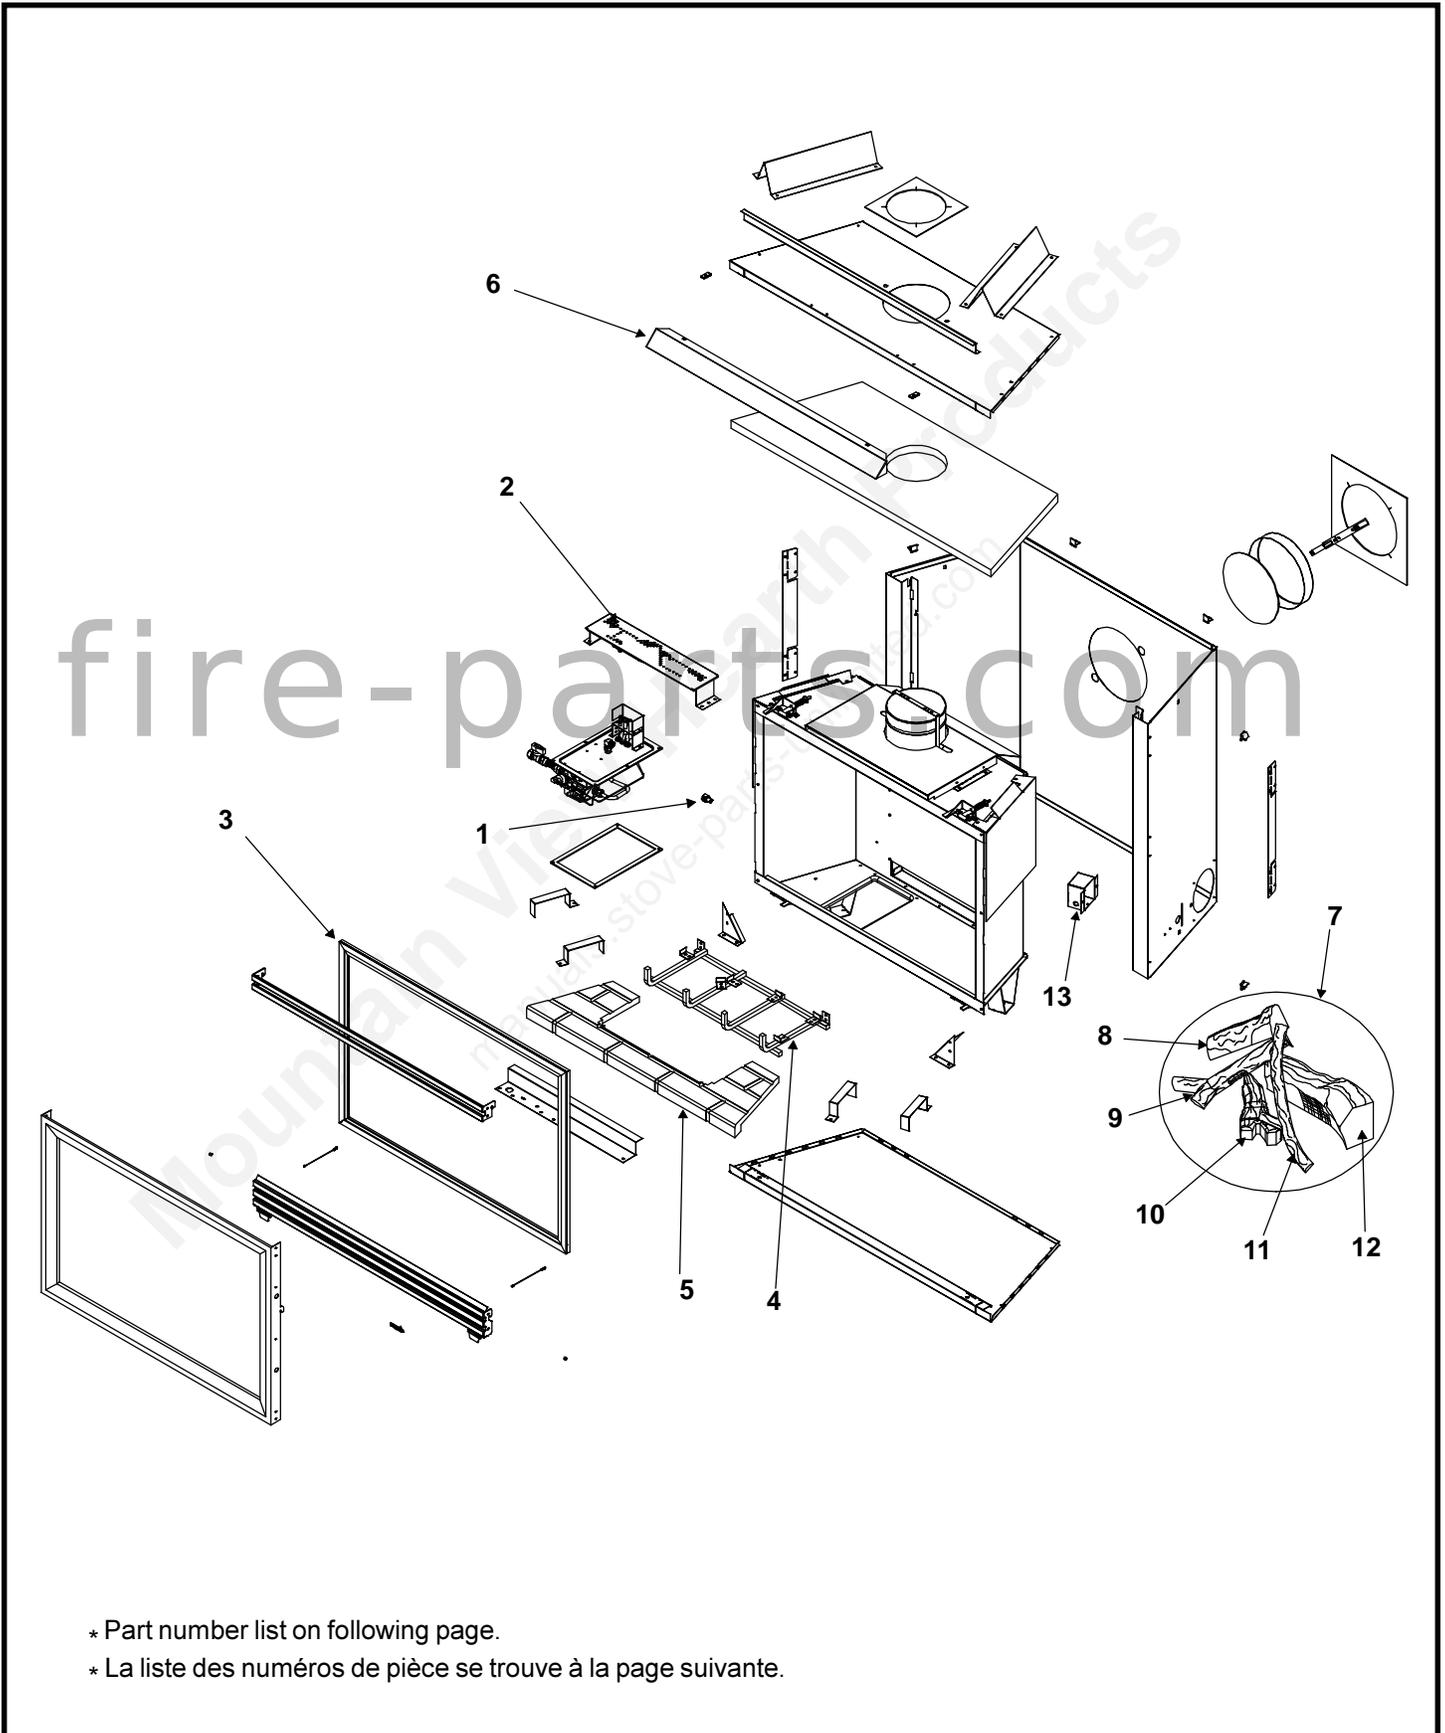


* Part number list on following page.
* La liste des numéros de pièce se trouve à la page suivante.

SL-750TRS-B (NG, LP) Service Parts List / Liste des pièces de rechange

IMPORTANT: THIS IS DATED INFORMATION. The most current information is located on your dealers VIP site. When ordering, supply serial and model numbers to ensure correct service parts. / **IMPORTANT :** L'information fournie dans cette brochure n'est valide que pendant une courte période. Les sites VIP des distributeurs disposent des renseignements les plus récents. Lors d'une commande, veuillez fournir les numéros de série et de modèles pour un remplacement adéquat des pièces.

ITEM / PIÈCE	STANDING PILOT IGNITION / ALLUMAGE UNE VEILLEUSE	SERIAL # / N° DE SÉRIE	PART NUMBER / N° DE PIÈCE
	Piezo Ignitor / Allumage Piézo		418-513
	Burner Tube / Tube de brûleur		477-301A
1	Burner Orifice NG (#36A) / Orifice de brûleur GN (#36A)		079-831
1	Burner Orifice LP (#52A) / Orifice de brûleur PL (#52A)		057-801
2	Burner NG / Brûleur GN		534-231A
2	Burner LP / Brûleur PL		534-233A
3	Glass Door Assembly / Porte en verre		GLA-750S
4	Log Grate / Grille de Bûche		530-360A
5	Base Refractory NG / Réfractaire Base GN	PRE 4241 POST 4241	SRV530-337 SRV530-339
5	Base Refractory LP / Réfractaire Base PL	PRE 1515 POST 1515	SRV530-337 SRV530-339
6	Hood / Hotte		SRV530-175
7	Log Set Assembly / Module de Jeu de Bûches		LOGS-750
8	Log 1 / Bûche 1		SRV530-711
9	Log 2 / Bûche 2		SRV402-701
10	Log 3 / Bûche 3		SRV560-703
11	Log 4 / Bûche 4		SRV560-702
12	Log 5 / Bûche 5		SRV560-704
13	Junction Box / Boîtier de raccordement		100-250A
	Valve NG / Valve GN		060-522
	Valve LP / Valve PL		060-523
	Pilot Assembly NG / Module de veilleuse GN		485-510A
	Pilot Assembly LP / Module de veilleuse PL		485-511A
ACCESSORIES / ACCESSOIRES			
	Fan Kit / Module de ventilateur		GFK-160A
	Extended Vertical Baffle Kit / Module de verticale étendu le déflecteur		BAF-VERT
	Wall Switch Kit, Off-white / Module d'interrupteur mural, Blanc Cassé		WSK-21
	Wall Switch Kit, White / Module d'interrupteur mural, Blanc		WSK-21-W
	Conversion Kit NG / Module de conversion GN	PRE 2344 POST 2344	NGK-75TR NGK-75TRS
	Conversion Kit LP / Module de conversion PL	PRE 1288 POST 1288	LPK-75TR LPK-75TRS

SL-750TRFL (NG, LP) Exploded Parts Diagram / (GN, PL) Vue éclatée des pièces

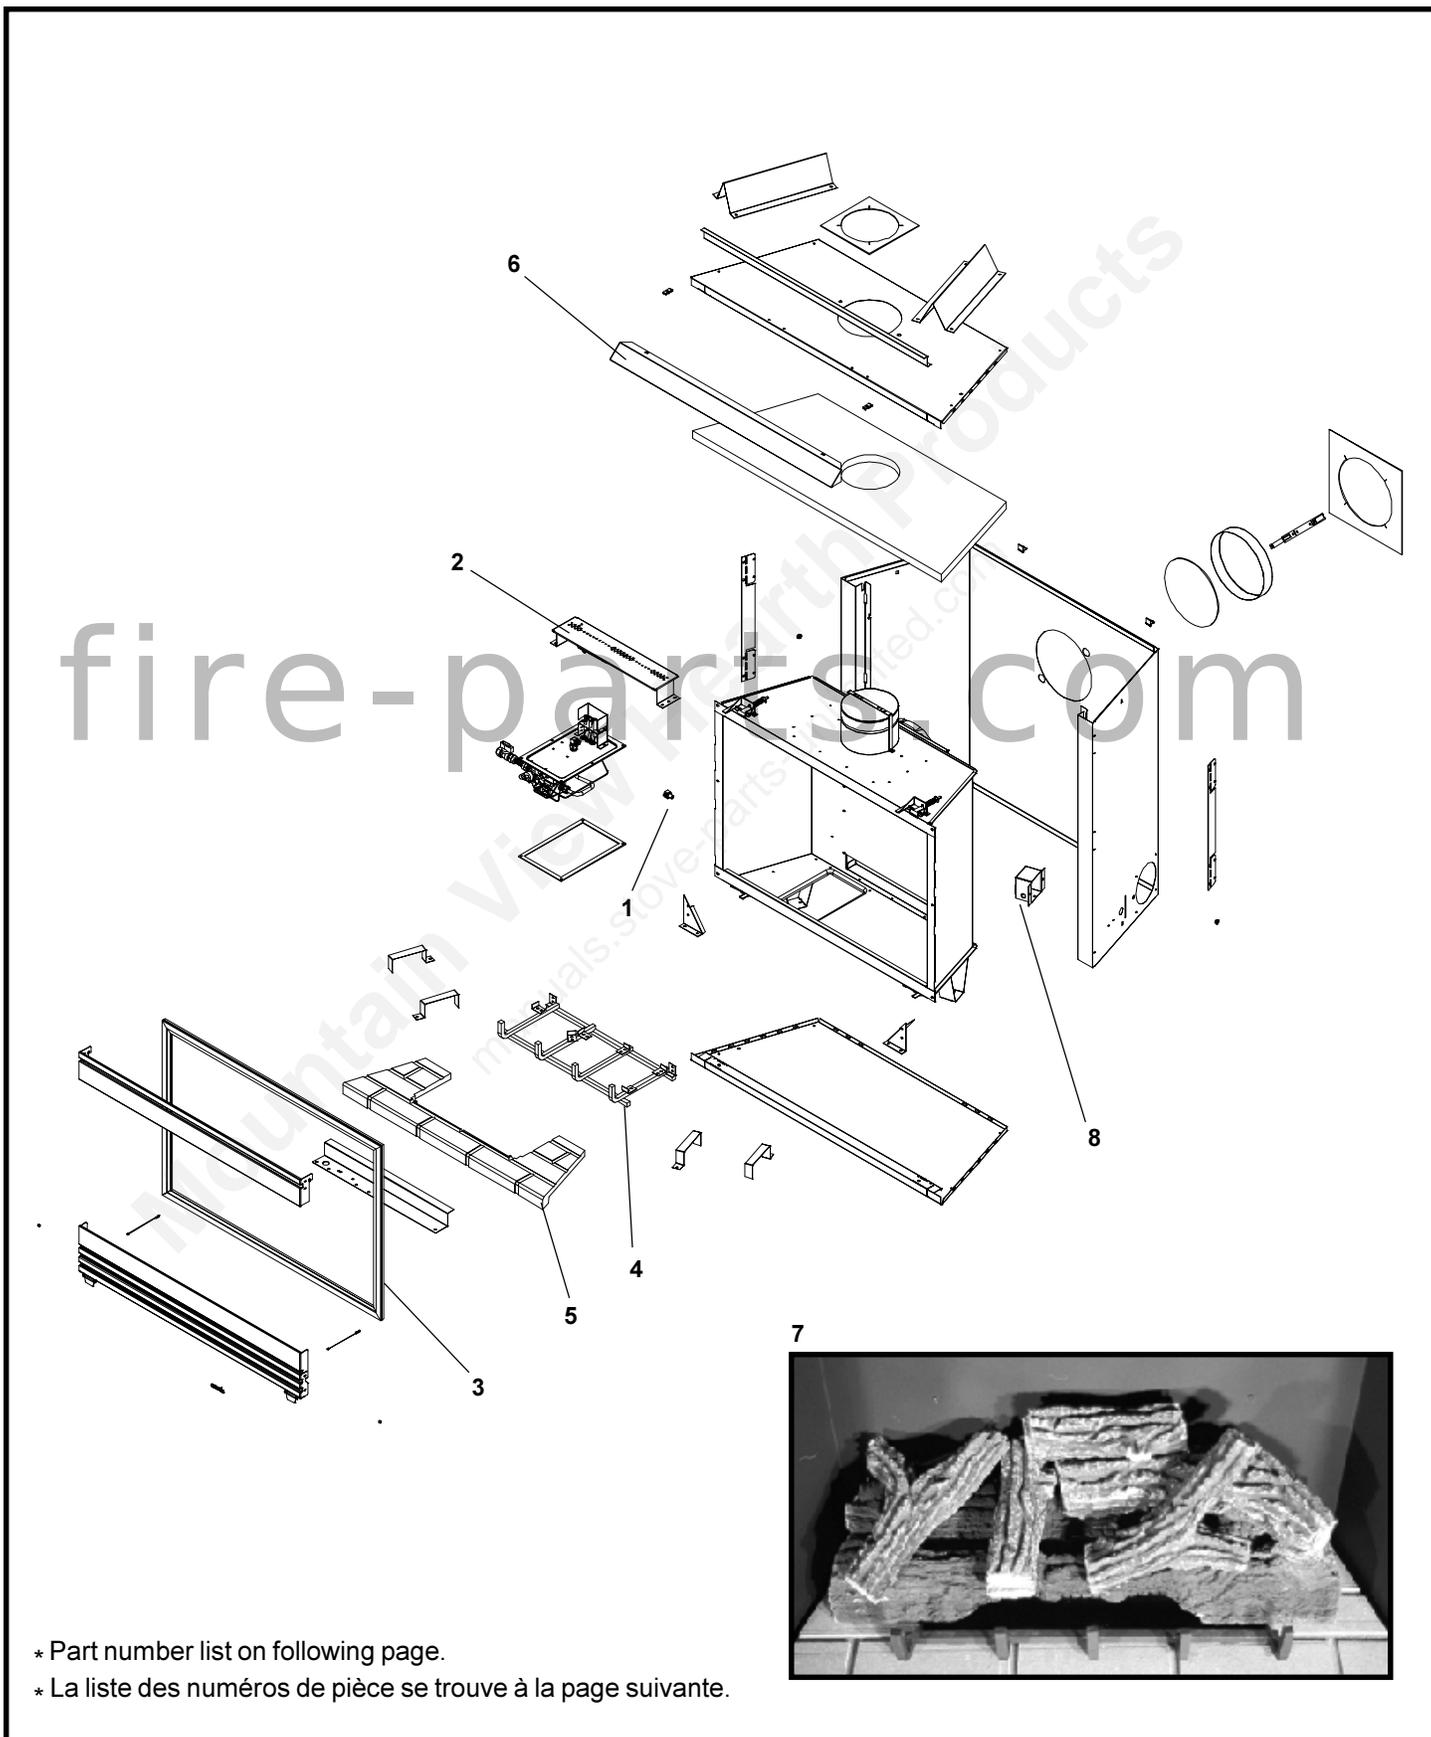

* Part number list on following page.


* La liste des numéros de pièce se trouve à la page suivante.

SL-750TRFL (NG, LP) Service Parts List / Liste des pièces de rechange

IMPORTANT: THIS IS DATED INFORMATION. The most current information is located on your dealers VIP site. When ordering, supply serial and model numbers to ensure correct service parts. / **IMPORTANT :** L'information fournie dans cette brochure n'est valide que pendant une courte période. Les sites VIP des distributeurs disposent des renseignements les plus récents. Lors d'une commande, veuillez fournir les numéros de série et de modèles pour un remplacement adéquat des pièces.

ITEM / PIÈCE	STANDING PILOT IGNITION / ALLUMAGE UNE VEILLEUSE	SERIAL # / N° DE SÉRIE	PART NUMBER / N° DE PIÈCE
	ON/OFF Rocker Switch / Interrupteur à bascule marche/arrêt		060-511
	Piezo Ignitor / Allumage Piézo		418-513
	Burner Tube / Tube de brûleur		477-301A
1	Burner Orifice NG (#42A) / Orifice de brûleur GN (#42A)		060-800
1	Burner Orifice LP (#53A) / Orifice de brûleur PL (#53A)		060-801
2	Burner NG / Brûleur GN		560-231A
2	Burner LP / Brûleur PL		530-233A
3	Glass Door Assembly / Porte en verre		GLA-750
4	Log Grate / Grille de Bûche		538-361A
5	Base Refractory / Réfractaire Base		SRV530-339
6	Hood / Hotte		SRV530-175
7	Log Set Assembly / Module de Jeu de Bûches		LOGS-750ALT
8	Junction Box / Boîtier de raccordement		100-250A
	Valve NG / Valve GN		060-520
	Valve LP / Valve PL		060-521
	Pilot Assembly NG / Module de veilleuse GN		485-510A
	Pilot Assembly LP / Module de veilleuse PL		485-511A
	Pilot Orifice NG / Orifice de veilleuse GN		446-505
	Pilot Orifice LP / Orifice de veilleuse PL		446-517
	Thermocouple / Thermocouple		446-511
	Thermopile / Thermopile		060-512
	Pilot Tube / Tube de veilleuse		SRV485-301
ACCESSORIES / ACCESSOIRES			
	Fan Kit / Module de ventilateur		GFK-160A
	Extended Vertical Baffle Kit / Module de verticale étendu le déflecteur		BAF-VERT
	Wall Switch Kit, Off-white / Module d'interrupteur mural, Blanc Cassé		WSK-21
	Wall Switch Kit, White / Module d'interrupteur mural, Blanc		WSK-21-W
	Conversion Kit NG / Module de conversion GN		NGK-75TR
	Conversion Kit LP / Module de conversion PL		LPK-75TR

SL-950TR and SL-950TR-DSI (NG, LP) Exploded Parts Diagram / (GN, PL) Vue éclatée des pièces

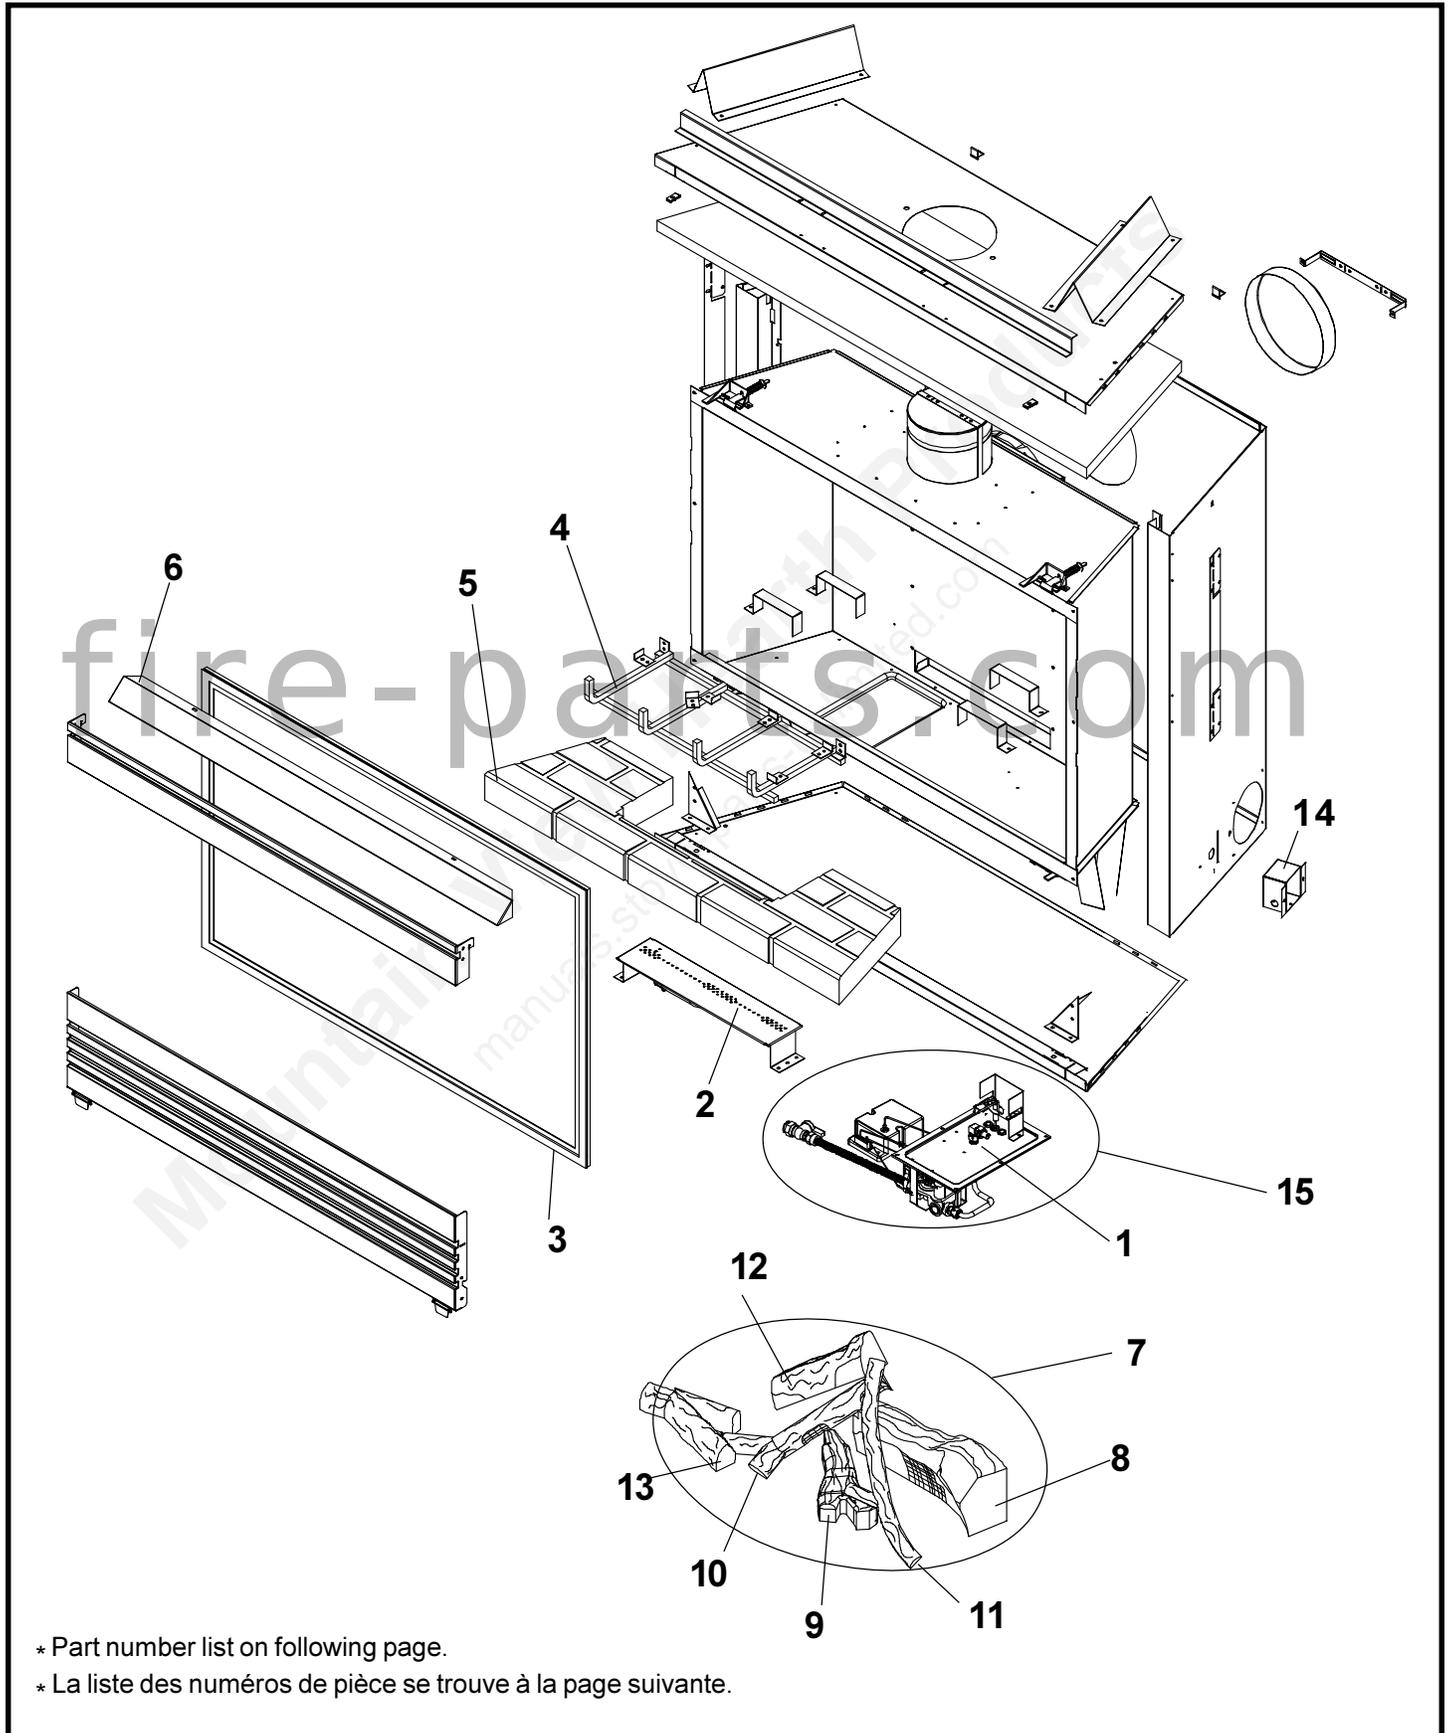

* Part number list on following page.

* La liste des numéros de pièce se trouve à la page suivante.

SL-950TR and SL-950TR-DSI (NG, LP) Service Parts List / Liste des pièces de rechange

IMPORTANT: THIS IS DATED INFORMATION. The most current information is located on your dealers VIP site. When ordering, supply serial and model numbers to ensure correct service parts. / **IMPORTANT :** L'information fournie dans cette brochure n'est valide que pendant une courte période. Les sites VIP des distributeurs disposent des renseignements les plus récents. Lors d'une commande, veuillez fournir les numéros de série et de modèles pour un remplacement adéquat des pièces.

ITEM / PIÈCE	STANDING PILOT AND DSI IGNITION/ UNE VEILLEUSE ET ALLUMAGE DSI	SERIAL # / N° DE SÉRIE	PART NUMBER / N° DE PIÈCE
	ON/OFF Rocker Switch / Interrupteur à bascule marche/arrêt		060-511
	Burner Tube / Tube de brûleur		477-301A
1	Burner Orifice NG (#36A) / Orifice de brûleur GN (#36A)		079-831
1	Burner Orifice LP (#51A) / Orifice de brûleur PL (#51A)		079-803
2	Burner NG / Brûleur GN		560-231A
2	Burner LP / Brûleur PL		560-233A
3	Glass Door Assembly / Porte en verre		GLA-950
4	Log Grate / Grille de Bûche		560-360A
5	Base Refractory NG / Réfractaire Base GN	PRE 4196 POST 4196	SRV560-337 SRV560-339
5	Base Refractory LP / Réfractaire Base PL	PRE 1119 POST 1119	SRV560-337 SRV560-339
6	Hood / Hotte		SRV560-175
7	Log Set Assembly / Module de Jeu de Bûches		LOGS-950
8	Log 1 / Bûche 1		SRV530-711
9	Log 2 / Bûche 2		SRV402-701
10	Log 3 / Bûche 3		SRV560-703
11	Log 4 / Bûche 4		SRV560-702
12	Log 5 / Bûche 5		SRV560-704
13	Log 6 / Bûche 6		SRV569-707
STANDING PILOT IGNITION ONLY / D'ALLUMAGE PAR VEILLEUSE SEULEMENT			
	Piezo Ignitor / Allumage Piézo		418-513
14	Junction Box / Boîtier de raccordement		100-250A
	Valve NG / Valve GN		060-520
	Valve LP / Valve PL		060-521
	Pilot Assembly NG / Module de veilleuse GN		485-510A
	Pilot Assembly LP / Module de veilleuse PL		485-511A
	Pilot Orifice NG / Orifice de veilleuse GN		446-505
	Pilot Orifice LP / Orifice de veilleuse PL		446-517
	Thermocouple / Thermocouple		446-511
	Thermopile / Thermopile		060-512
	Pilot Tube / Tube de veilleuse		485-301
DSI IGNITION ONLY / ALLUMAGE DSI SEULEMENT			
14	Junction Box / Boîtier de raccordement		100-254A
15	Valve Assembly -DSI NG / Module de Valve-DSI GN		550-007A
15	Valve Assembly -DSI LP / Module de Valve-DSI PL		550-008A
	DSI Valve NG / DSI Valve GN		492-500
	DSI Valve LP / DSI Valve PL		492-501
	Ignitor / Allumage		501-591
	Module / Module		501-592
ACCESSORIES / ACCESSOIRES			
	Fan Kit / Module de ventilateur		GFK-160A
	Extended Vertical Baffle Kit / Module de verticale étendu le déflecteur		BAF-VERT
	Wall Switch Kit, Off-white / Module d'interrupteur mural, Blanc Cassé		WSK-21
	Wall Switch Kit, White / Module d'interrupteur mural, Blanc		WSK-21-W
	Conversion Kit NG (Standing Pilot Only) / Modules de conversion GN (allumage une veilleuse seulement)		NGK-95TR
	Conversion Kit LP (Standing Pilot Only) / Modules de conversion PL (allumage une veilleuse seulement)		LPK-95TR

1

Approvals and Codes

Appliance Certification

The Heat-N-Glo fireplace models discussed in this *Installers Guide* have been tested to certification standards and listed by the applicable laboratories.

Certification

MODELS: SL-950TR, SL-750TR, SL-750TRFL, SL-750TRS, SL-550TR, SL-550TRS
LABORATORY: Underwriters Laboratories
TYPE: Direct Vent Gas Fireplace Heater
STANDARD: ANSI Z21.88•CSA2.33

NOTE: THESE MODELS ARE UL LISTED TO UL307B, THE STANDARD FOR GAS-BURNING HEATING APPLIANCES FOR MANUFACTURED HOMES AND RECREATIONAL VEHICLES.

Installation Codes

The fireplace installation must conform to local codes. Before installing the fireplace, consult the local building code agency to ensure that you are in compliance with all applicable codes, including permits and inspections.

In the absence of local codes, the fireplace installation must conform to the National Fuel Gas Code ANSI Z223.1 (in the United States) or the CAN/CGA-B149 Installation Codes (in Canada). The appliance must be electrically grounded in accordance with local codes or, in the absence of local codes with the National Electric Code ANSI/NFPA No. 70 (in the United States), or to the CSA C22.1 Canadian Electric Code (in Canada).

These models may be installed in a bedroom or bed-sitting room in the U.S.A. and Canada.

High Altitude Installations

U.L. Listed gas fireplaces are tested and approved for elevations from 0 to 2,000 feet in the U.S.A. and from 0 to 4,500 feet in Canada.

When installing this fireplace at an elevation above 2,000 feet (in the United States), it may be necessary to decrease the input rating by changing the existing burner orifice to a smaller size. Input should be reduced four percent (4%) for each 1,000 feet above sea level, unless the heating value of the gas has been reduced, in which case this general rule will not apply. To identify the proper orifice size, check with the local gas utility.

When installing this fireplace at an elevation between 2,000 and 4,500 feet (in Canada), the input rating must be reduced by ten percent (10%).

When installing this fireplace at an elevation above 4,500 feet (in Canada), check with local authorities.

Consult your local gas utility for assistance in determining the proper orifice for your location.



Heat-N-Glo Quality
Systems registered
by SGS ICS

2

Getting Started

Introducing the Heat-N-Glo Gas Fireplaces

Heat-N-Glo direct vent gas fireplaces are designed to operate with all combustion air siphoned from outside of the building and all exhaust gases expelled to the outside.

The information contained in this *Installers Guide*, unless noted otherwise, applies to all models and gas control systems. Gas fireplace diagrams, including the dimensions, are shown in this section.

Pre-install Preparation

This gas fireplace and its components are tested and safe when installed in accordance with this *Installers Guide*. Report to your dealer any parts damaged in shipment, particularly the condition of the glass. **Do not install any unit with damaged, incomplete, or substitute parts.**

The vent system components and trim doors are shipped in separate packages. The gas logs are packaged separately and must be field installed.

Read all of the instructions before starting the installation. Follow these instructions carefully during the installation to ensure maximum safety and benefit. Failure to follow these instructions will void the owner's warranty and may present a fire hazard.

The Heat-N-Glo Warranty will be voided by, and Heat-N-Glo disclaims any responsibility for, the following actions:

- Installation of any damaged fireplace or vent system component.
- Modification of the fireplace or direct vent system.
- Installation other than as instructed by Heat-N-Glo.
- Improper positioning of the gas logs or the glass door.
- Installation and/or use of any component part not manufactured and approved by Heat-N-Glo, notwithstanding any independent testing laboratory or other party approval of such component part or accessory.

ANY SUCH ACTION MAY POSSIBLY CAUSE A FIRE HAZARD.

When planning a fireplace installation, it's necessary to determine:

- Where the unit is to be installed.
- The vent system configuration to be used.
- Gas supply piping.
- Electrical wiring.
- Framing and finishing details.
- Whether optional accessories—devices such as a fan, wall switch, or remote control—are desired.

If the fireplace is to be installed on carpeting or tile, or on any combustible material other than wood flooring, the fireplace should be installed on a metal or wood panel that extends the full width and depth of the fireplace.

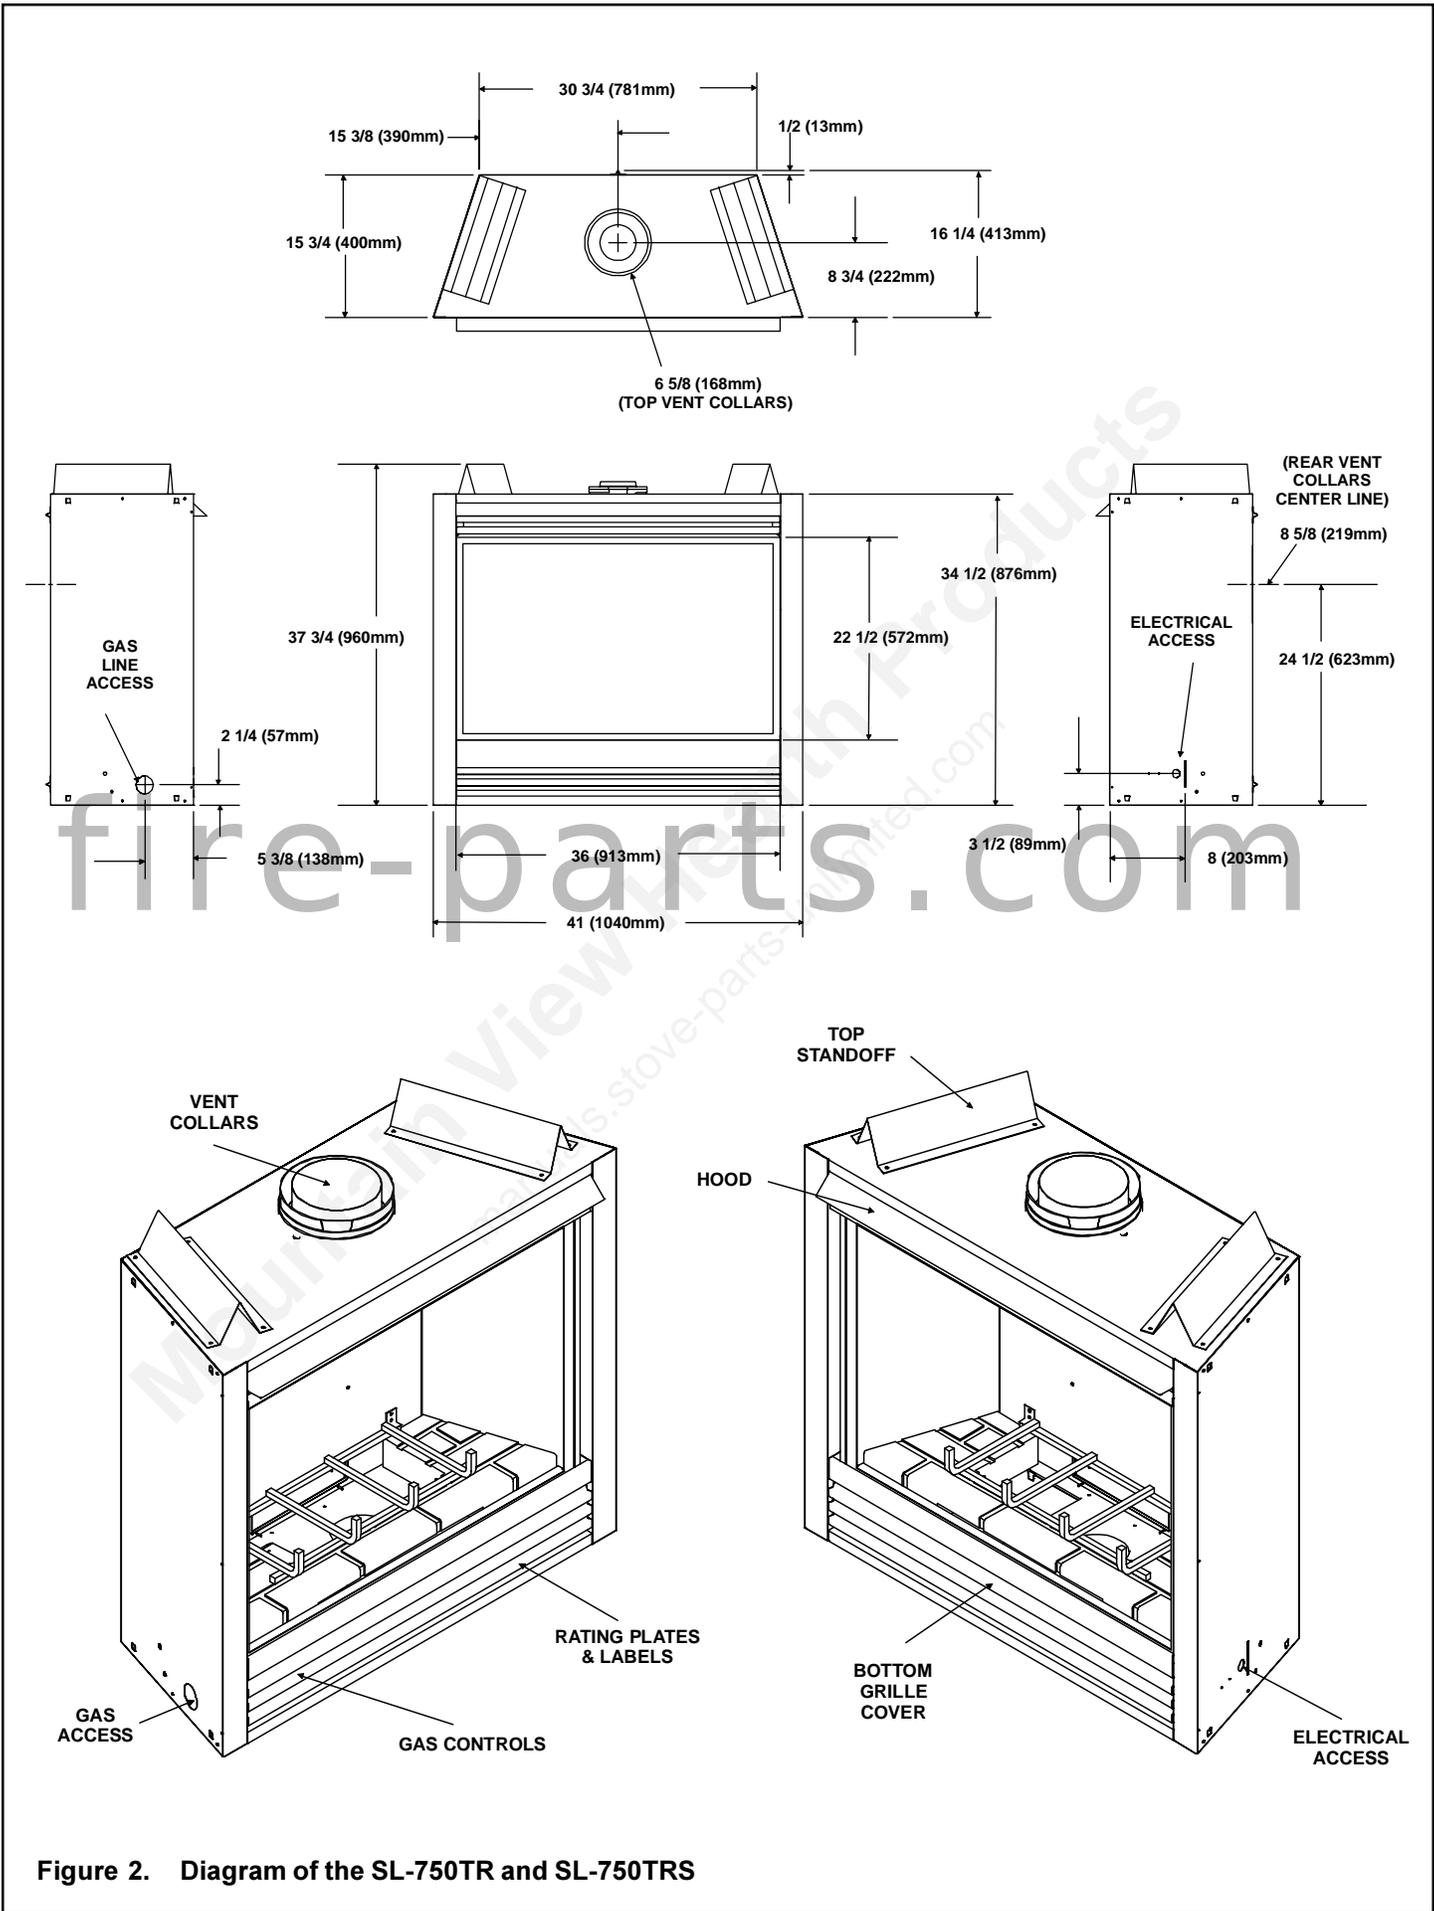


Figure 2. Diagram of the SL-750TR and SL-750TRS

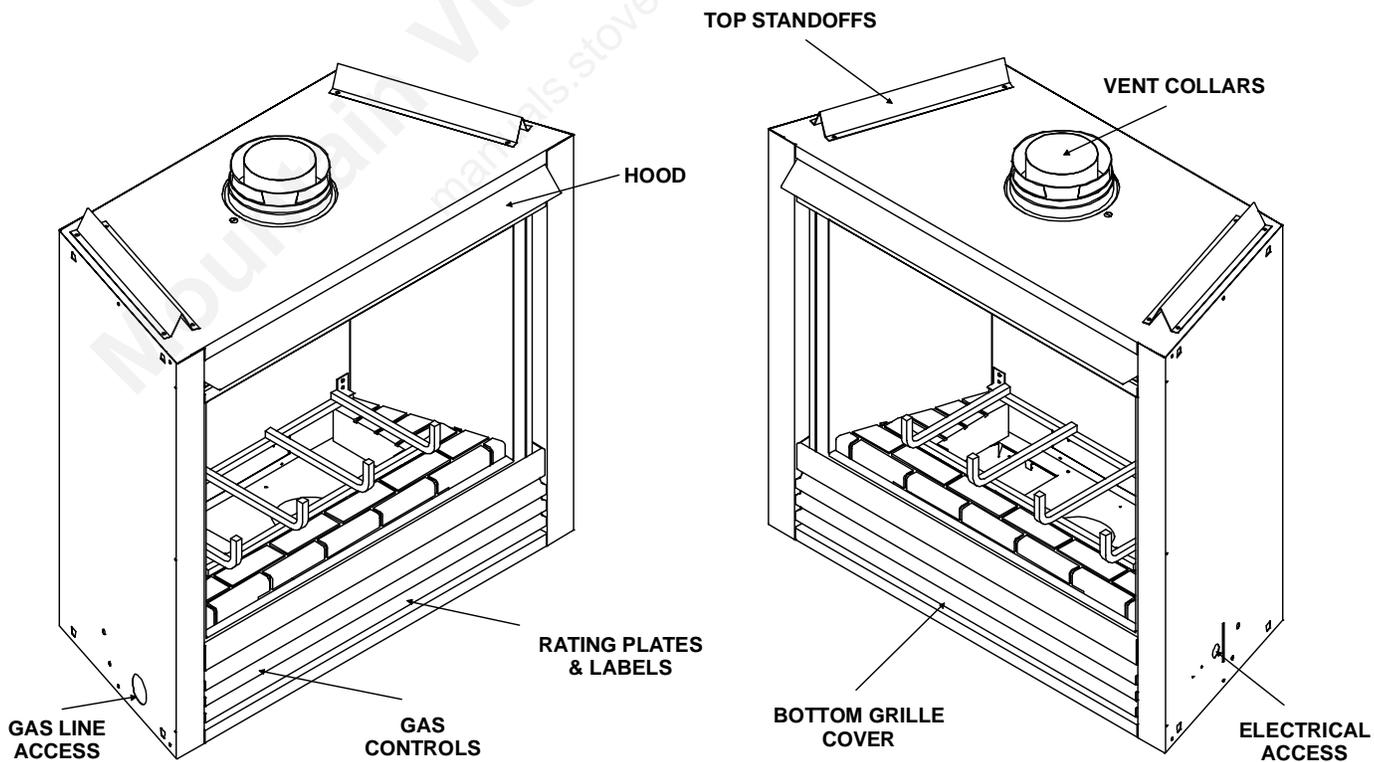
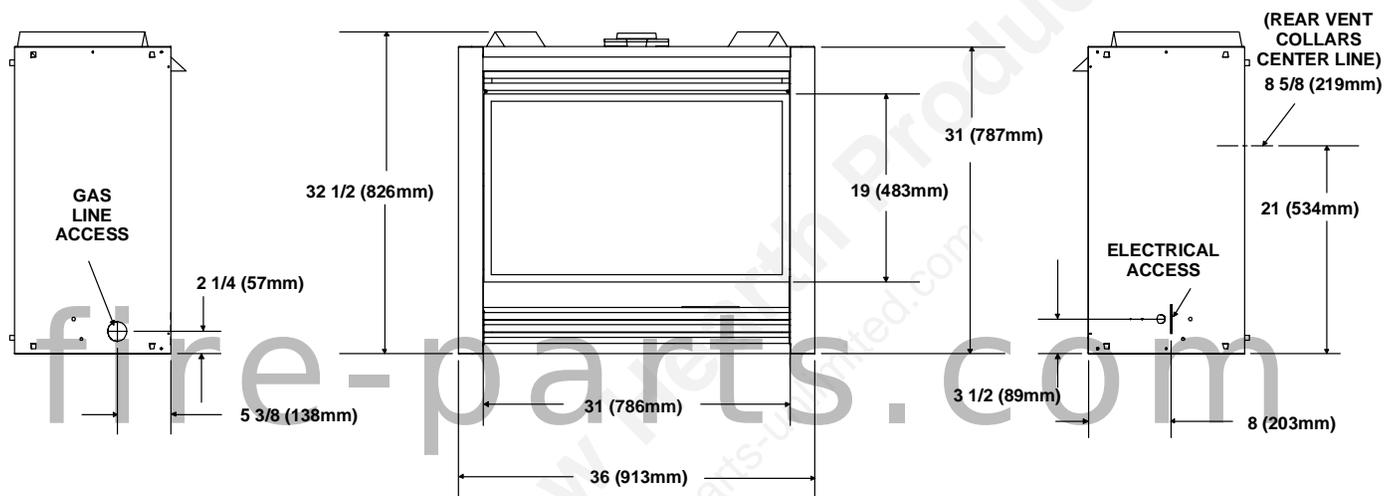
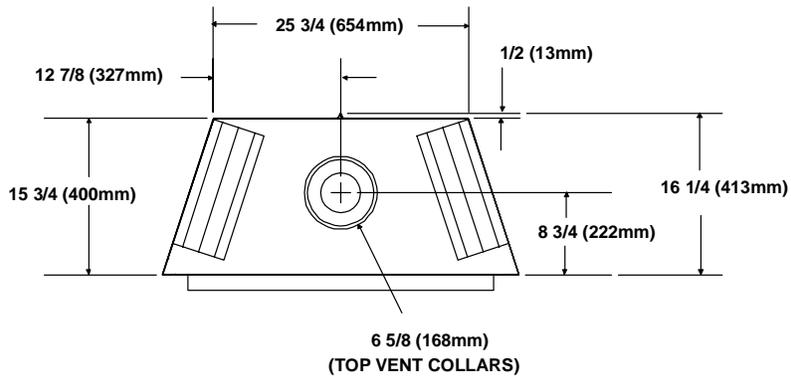



Figure 3. Diagram of the SL-550TR and SL-550TRS

3

Installing the Fireplace

Step 1. Locating the Fireplace

The diagram below shows space and clearance requirements for locating a fireplace within a room.

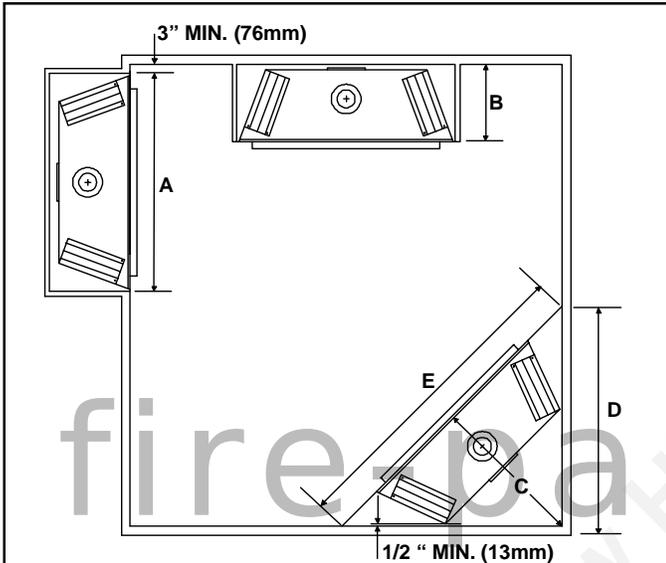

	A	B	C	D	E
SL-950TR	49"	16 1/4"	35 3/8"	50"	70 3/4"
SL-750TR & TRS	42"	16 1/4"	31 7/8"	45"	63 3/4"
SL-550TR & TRS	37"	16 1/4"	29 3/8"	41 1/2"	58 3/4"

Figure 4. Fireplace Dimensions, Locations, and Space Requirements

Clearance Requirements

The top and back of the fireplace are defined by stand-offs. The minimum clearance to a perpendicular wall extending past the face of the fireplace is 3 inches (76mm). The back of the fireplace may be recessed 16 1/4 inches (413mm) into combustible construction.

Minimum Clearances from the Fireplace to Combustible Materials		
	Inches	mm
Glass Front	36	914
Floor	0	0
Rear	1/2	13
Sides	1/2	13
Top (SL-550TRS)	1 1/2	38
(SL-750TRS & SL-950TRS)	3 1/4	83
Ceiling*	31	787

* The clearance to the ceiling is measured from the top of the unit, excluding the standoffs (see Figure 43).

The distance from the unit to combustible construction is to be measured from the unit outer wrap surface to the combustible construction, **NOT** from the screw heads that secure the unit together.

Minimum Clearances from the Vent Pipe to Combustible Materials


	Inches	mm
Vertical Sections	1	25
Horizontal Sections		
Top	3	75
Bottom	1	25
Sides	1	25
At Wall Firestops		
Top	2 1/2	63.7
Bottom	1/2	13
Sides	1	25

For minimum clearances, see the direct vent termination clearance diagrams on pages 43 and 44 in this manual.

Step 2. Framing the Fireplace

Fireplace framing can be built before or after the fireplace is set in place. Framing should be positioned to accommodate wall coverings and fireplace facing material. The diagram below shows framing reference dimensions.

CAUTION: MEASURE FIREPLACE DIMENSIONS AND VERIFY FRAMING METHODS AND WALL COVERING DETAILS BEFORE FRAMING.

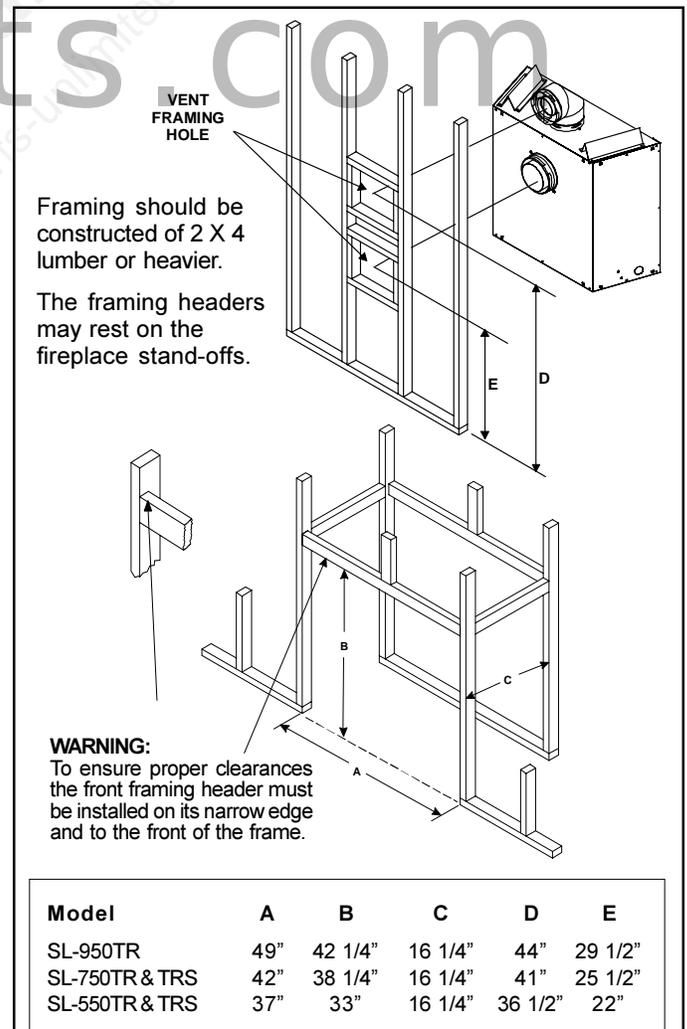

Framing should be constructed of 2 X 4 lumber or heavier.


The framing headers may rest on the fireplace stand-offs.

WARNING:


To ensure proper clearances the front framing header must be installed on its narrow edge and to the front of the frame.

Model	A	B	C	D	E
SL-950TR	49"	42 1/4"	16 1/4"	44"	29 1/2"
SL-750TR & TRS	42"	38 1/4"	16 1/4"	41"	25 1/2"
SL-550TR & TRS	37"	33"	16 1/4"	36 1/2"	22"


Figure 5. Framing Dimensions

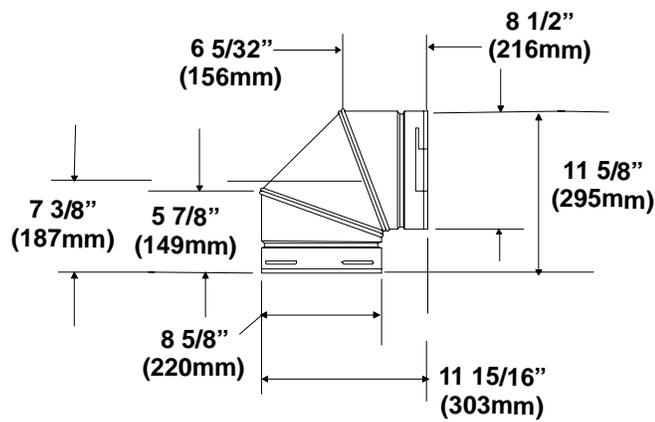


DV-90D

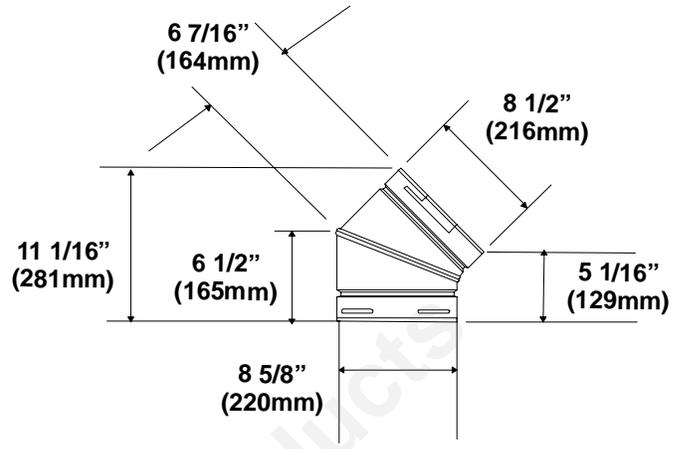


DV-45D

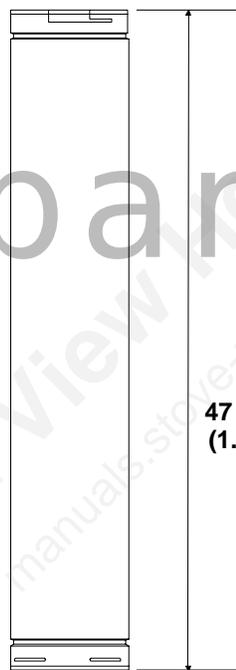


DV-48D

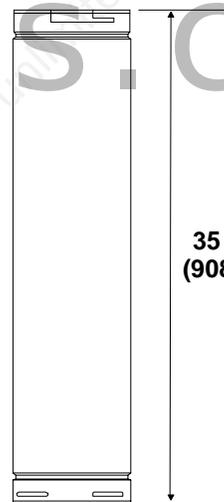


DV-36D

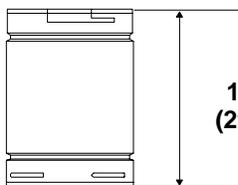

DV-12D

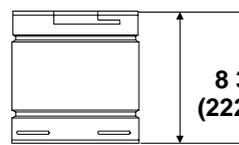


DV-09D



DV-06D

NOTE: PIPES OVERLAP 1-3/8 INCHES (34.93mm) AT EACH JOINT.

Figure 6. D-Series Direct Vent Component Specifications (5-inch inner pipe / 8 5/8-inch outer pipe)

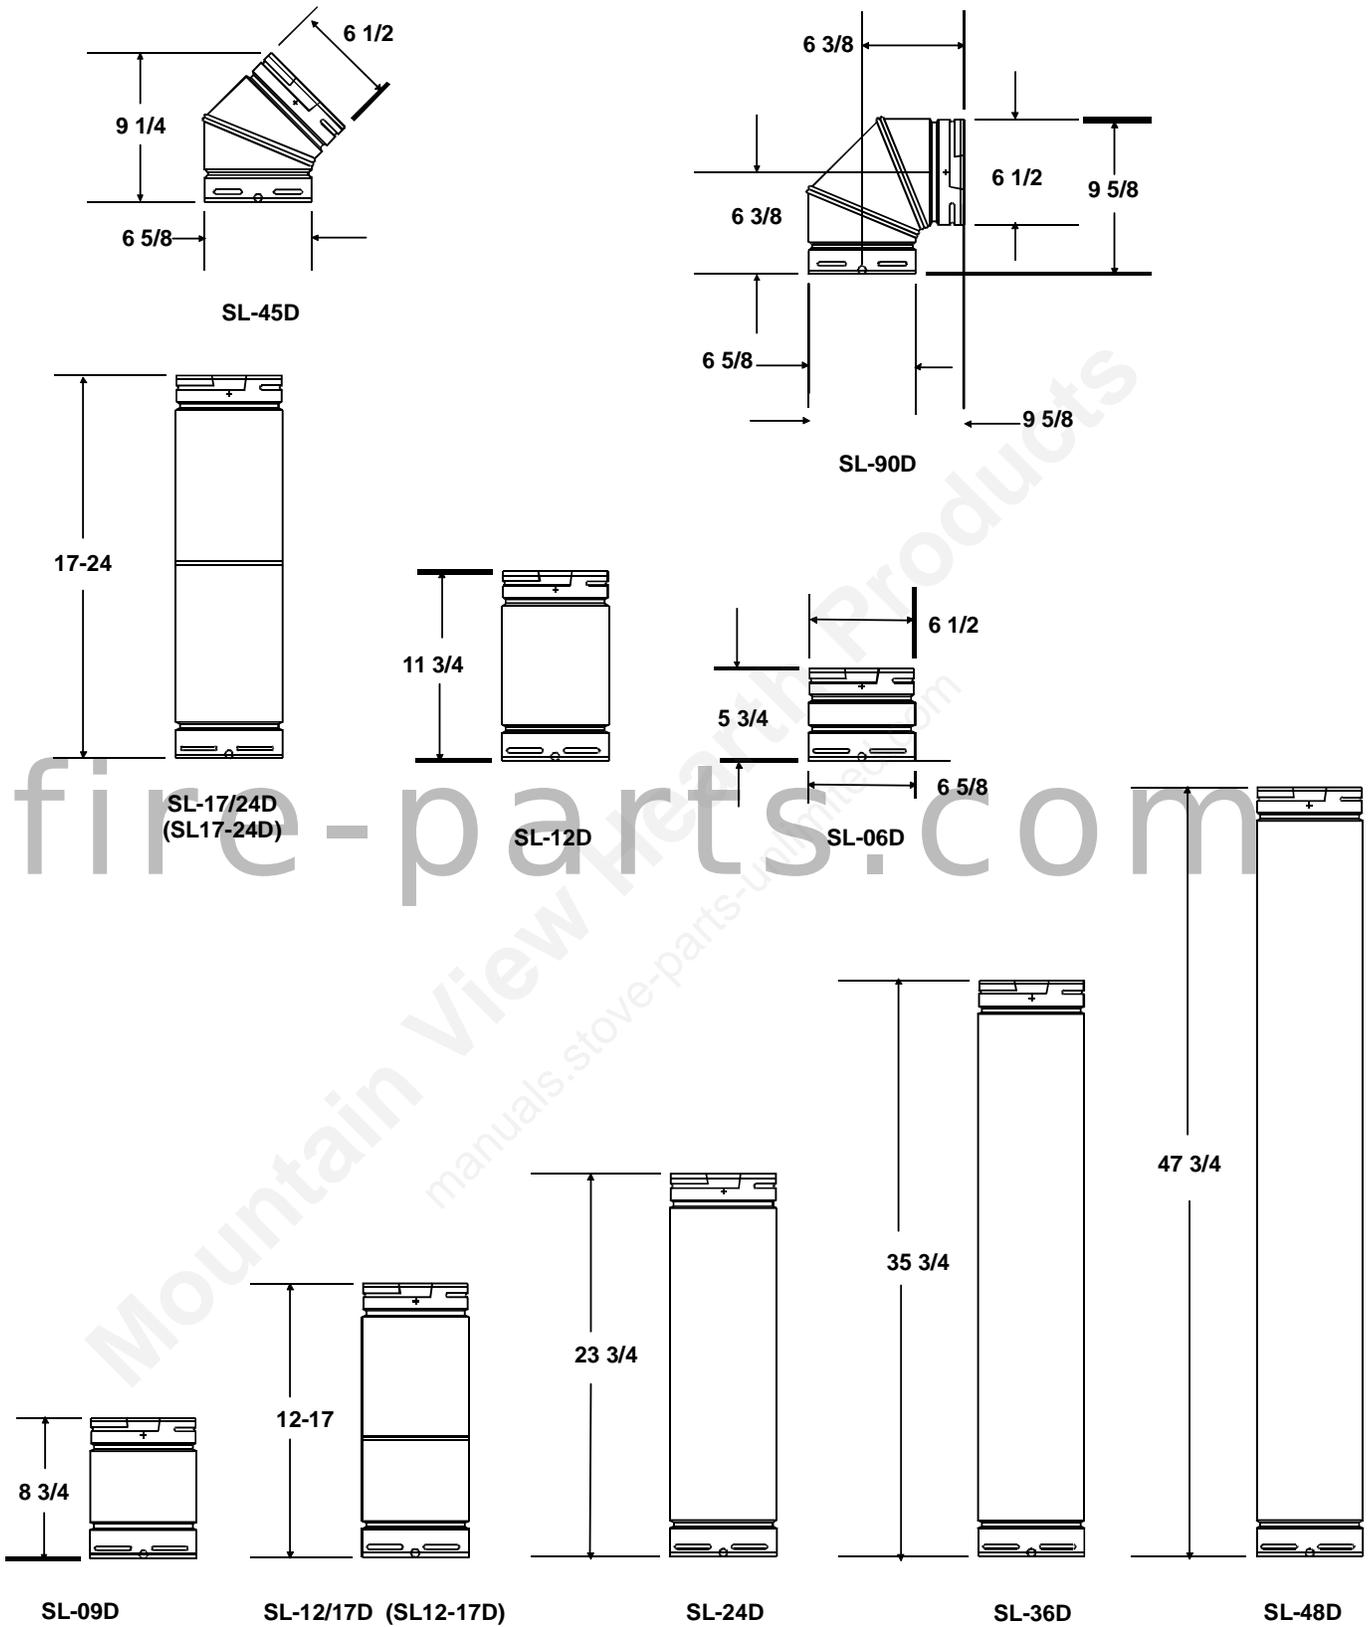

NOTE: PIPES OVERLAP 1-3/8 INCHES (34.93mm) AT EACH JOINT.

Figure 7. SL D-Series Direct Vent Component Specifications (4-inch inner pipe / 6 5/8-inch outer pipe)

Step 3. Installing the Vent System

A. Vent System Approvals

These models have vent starting collars on both the top and the back of the unit. Depending upon the installation, decide which ONE set of starting collars will be used to attach the vent system. The starting collar sealing cap must remain on the starting collar NOT used.

These models use SL-D-series, direct vent components when using the **TOP** vent collars and D-series direct vent components when using the **REAR** vent collars.

The flame and ember appearance may vary based on the type of fuel burned and the venting configuration used.

WARNING: YOU MUST NOT MIX D-SERIES AND SL D-SERIES COMPONENTS IN ANY VENT SYSTEM CONFIGURATION.

Identifying Vent Components

Approved vent system components are labeled for identification. **NO OTHER VENTING SYSTEMS OR COMPONENTS MAY BE USED.** Detailed installation instructions are included with each vent termination kit and should be used in conjunction with this *Installers Guide*. Figure 8 shows vent system components and terminations.

The vent systems installed on this gas fireplace may include one, two, or three 90° elbow assemblies. The relationships of vertical rise to horizontal run in vent configurations using 90° elbows **MUST BE** strictly adhered to. The rise to run relationships are shown in the venting drawings and tables. Refer to the diagrams on the next several pages.

NOTE: Two 45° elbows may be used in place of one 90° elbow. Maximum and minimum rise to run ratios must always be maintained in the vent system when using 45° elbows.

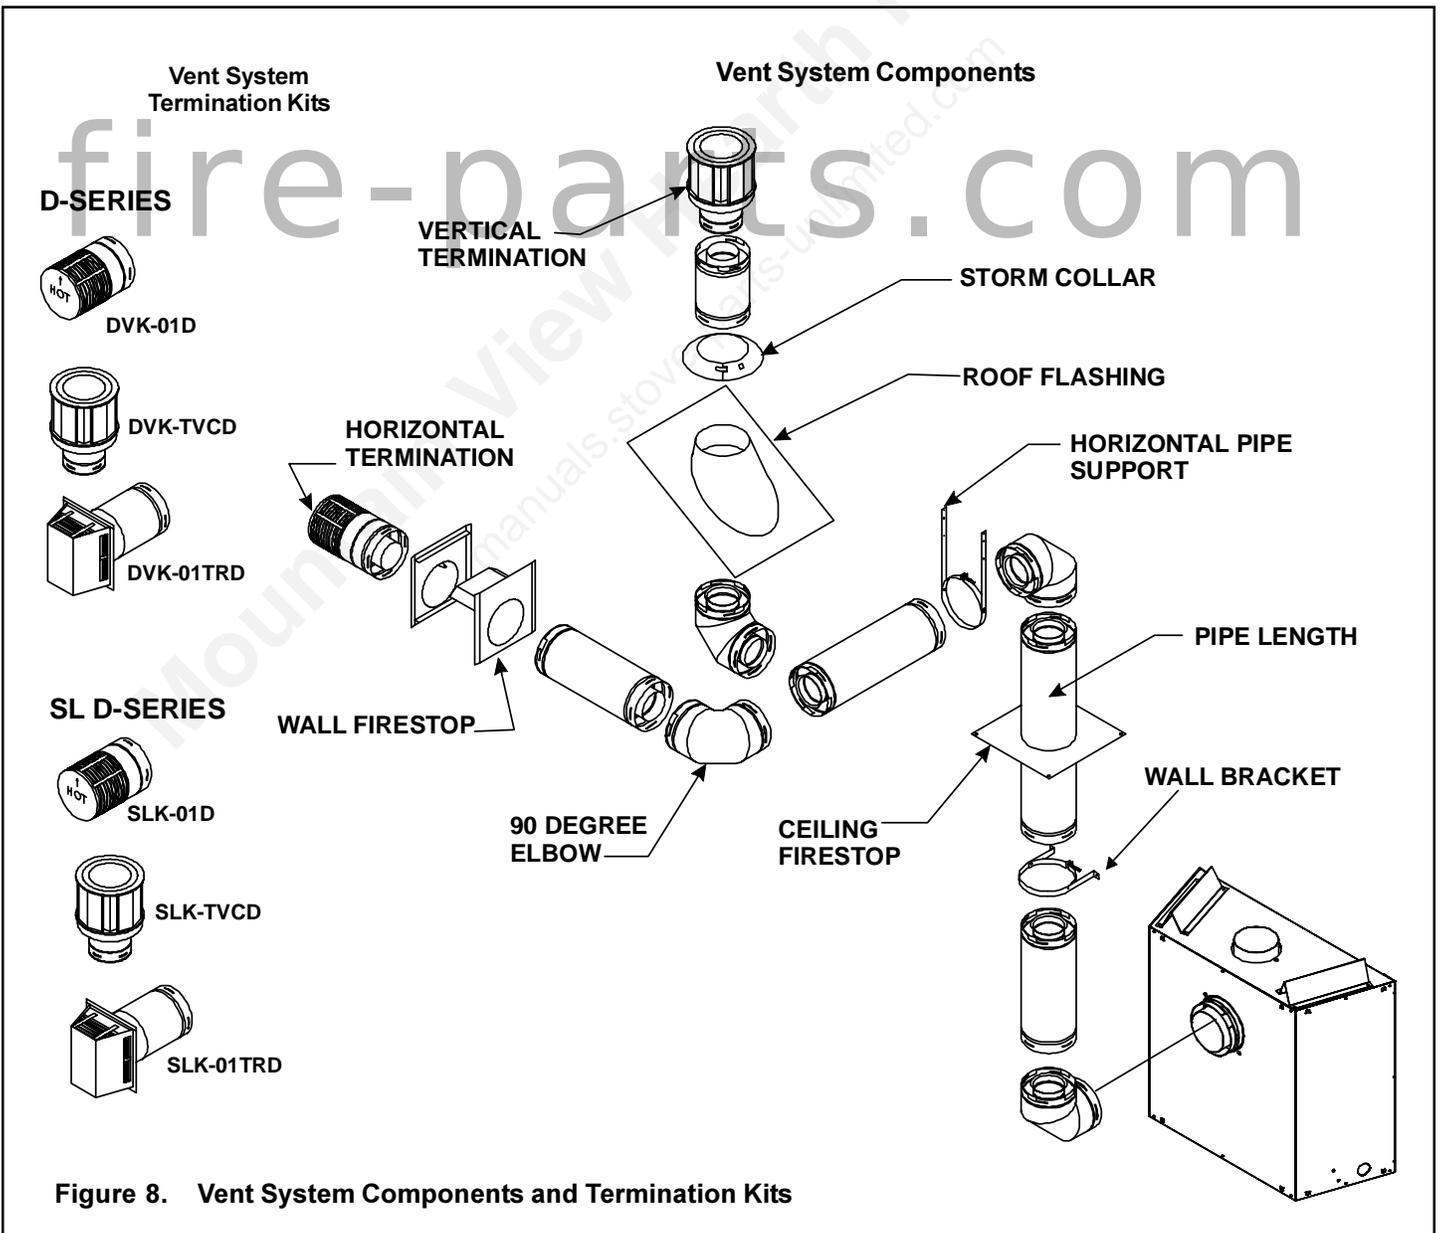


Figure 8. Vent System Components and Termination Kits

STRAIGHT UP VERTICAL VENTING

V (FT.)
40' MAX.

NOTE: For vertical venting over 20 feet a restrictor plate is recommended for improved flame appearance.

Use SL D-Series components only.

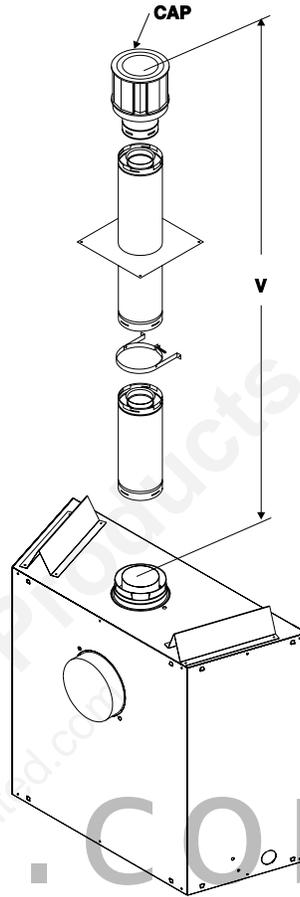


Figure 9. Straight up Vertical Venting

STRAIGHT OUT HORIZONTAL VENTING

H
Max. Run
24" (610 mm)

Note: You may use a 45° elbow in corner installations for models SL-550TR and SL-750TR ONLY. Use two 90° elbows for corner installations on SL-550TRS, SL-750TRS and SL-950TR.

Use D-Series components only.

For corner installation of models SL-550TR and SL-750TR ONLY.

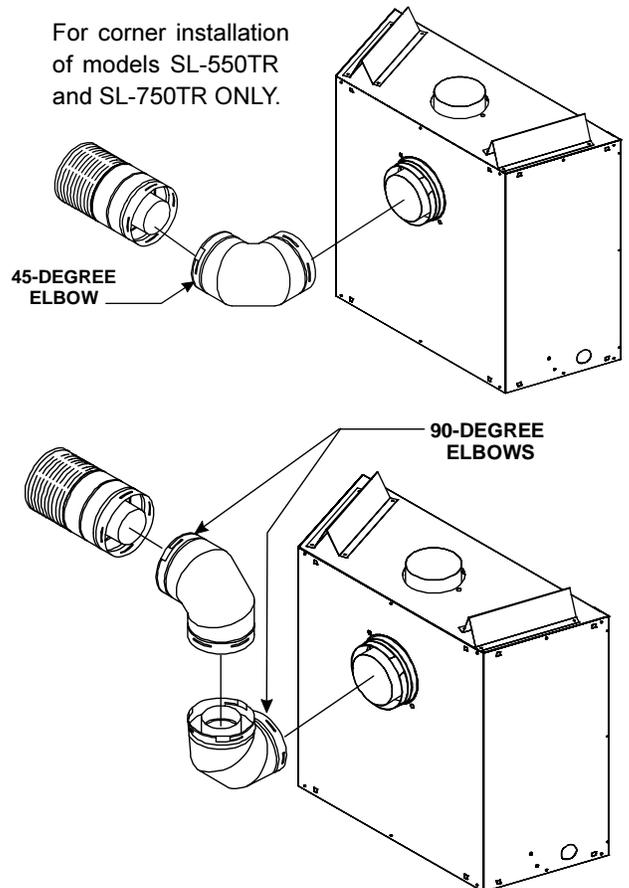
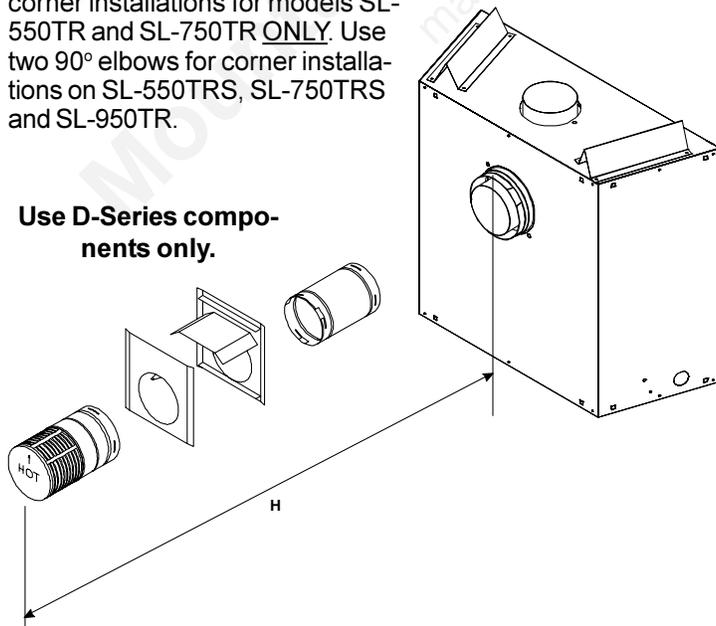


Figure 10. Straight Out Horizontal Venting

V	H
1' MIN. (305mm)	2' MAX. (610mm)
2' MIN. (610mm)	4' MAX. (1.22m)
3' MIN. (914mm)	6' MAX. (1.86m)
4' MIN. (1.22m)	8' MAX. (2.4m)
V+H=40' MAX. (12.4m)	
H = 8' MAX. (2.4m)	

Use D-Series components only.


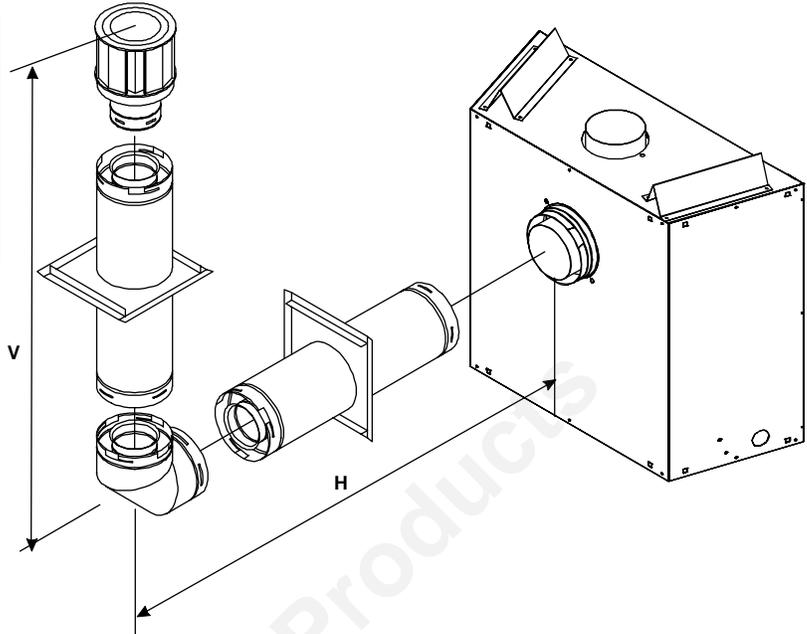


Figure 11. Venting with One 90° Elbow

fire-parts.com

Use SL D-Series components only.

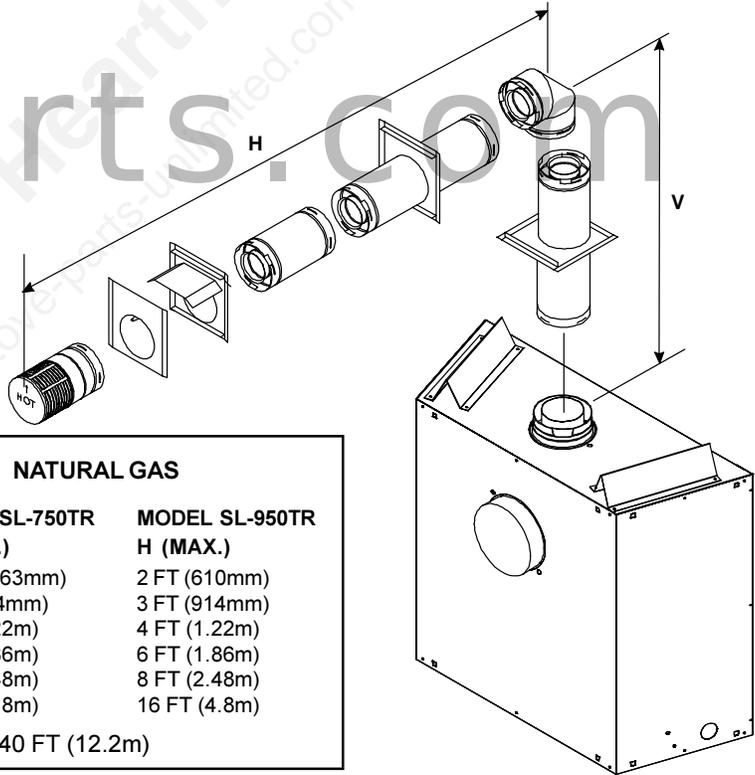

VENTING WITH ONE (1) 90° ELBOW NATURAL GAS

V (MIN.)	MODEL SL-550TR H (MAX.)	MODEL SL-750TR H (MAX.)	MODEL SL-950TR H (MAX.)
90° Elbow on Top	2.5 FT (863mm)	2.5 FT (863mm)	2 FT (610mm)
1 FT (305mm)	3 FT (914mm)	3 FT (914mm)	3 FT (914mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)
H MAX. = 16 FT (4.8m)		V + H MAX. = 40 FT (12.2m)	


VENTING WITH ONE (1) 90° ELBOW PROPANE

V (MIN.)	MODEL SL-550TR H (MAX.)	MODEL SL-750TR H (MAX.)	MODEL SL-950TR H (MAX.)
90° Elbow on Top	2.5 FT (863mm)	NOT ALLOWED	NOT ALLOWED
1 FT (305mm)	2.5 FT (863mm)	2 FT (610mm)	2 FT (610mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)
H MAX. = 16 FT (4.8m)		V + H MAX. = 40 FT (12.2m)	

Figure 12. Venting with One 90° Elbow - TR Models

VENTING WITH ONE (1) 90° ELBOW		NATURAL GAS
V (MIN.)	MODEL SL-550TRS	MODEL SL-750TRS
90° Elbow on Top	H (MAX.)	H (MAX.)
1 FT (305mm)	2 FT (610mm)	2 FT (610mm)
2 FT (610mm)	3 FT (914mm)	3 FT (914mm)
3 FT (914mm)	4 FT (1.22m)	4 FT (1.22m)
4 FT (1.22m)	6 FT (1.86m)	6 FT (1.86m)
5 FT (1.52m)	8 FT (2.48m)	8 FT (2.48m)
	16 FT (4.8m)	16 FT (4.8m)
H MAX. = 16 FT (4.8m)	V + H MAX. = 40 FT (12.2m)	


VENTING WITH ONE (1) 90° ELBOW		PROPANE
V (MIN.)	MODEL SL-550TRS	MODEL SL-750TRS
90° Elbow on Top	H (MAX.)	H (MAX.)
1 FT (305mm)	NOT ALLOWED	NOT ALLOWED
2 FT (610mm)	2 FT (610mm)	2 FT (610mm)
3 FT (914mm)	4 FT (1.22m)	4 FT (1.22m)
4 FT (1.22m)	6 FT (1.86m)	6 FT (1.86m)
5 FT (1.52m)	8 FT (2.48m)	8 FT (2.48m)
	16 FT (4.8m)	16 FT (4.8m)
H MAX. = 16 FT (4.8m)	V + H MAX. = 40 FT (12.2m)	

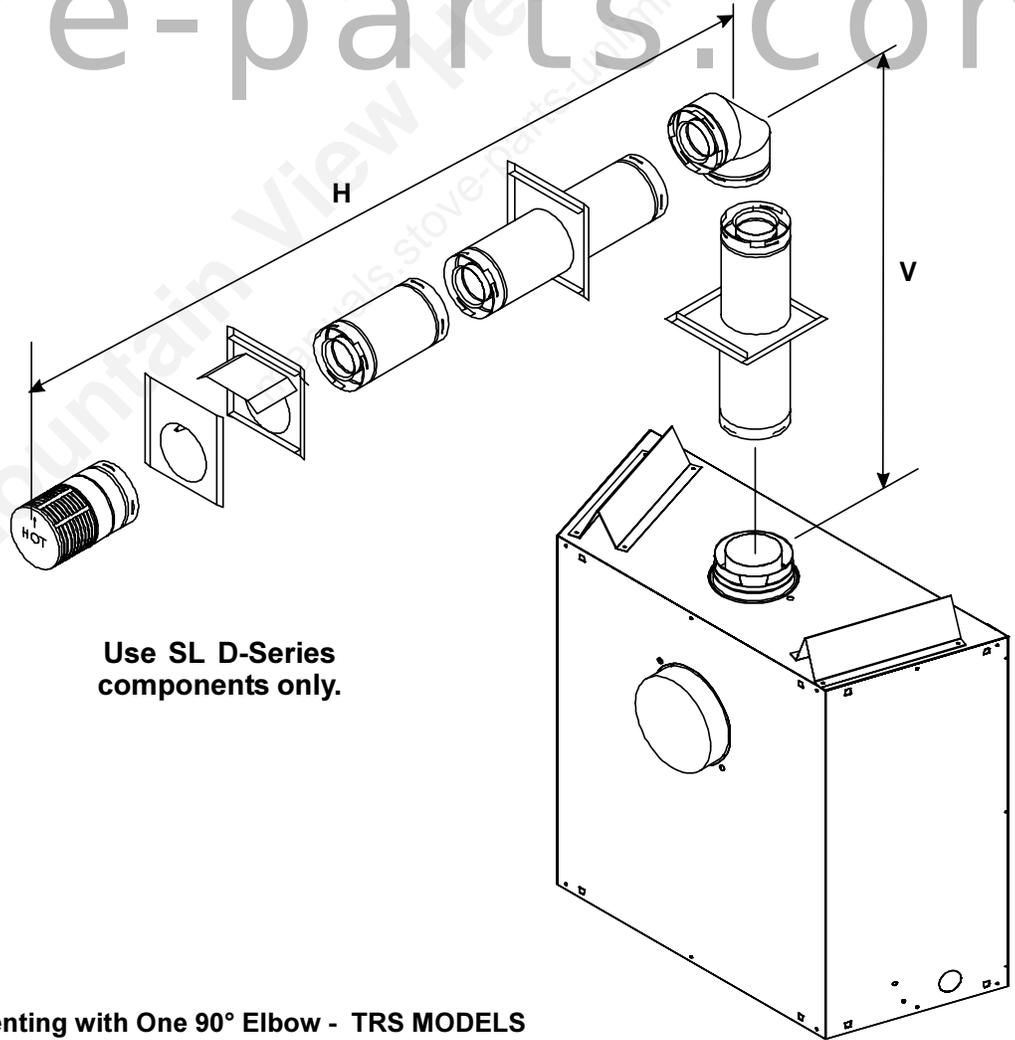


Use SL D-Series components only.

Figure 13. Venting with One 90° Elbow - TRS MODELS

V	H	H + H₁
1' MIN. (305 mm)	2' MAX. (610 mm)	4' MAX. (1.22m)
2' MIN. (610 mm)	4' MAX. (1.22 m)	8' MAX. (2.4m)
3' MIN. (914 mm)	6' MAX. (1.86 m)	12' MAX. (3.6m)
4' MIN. (1.22 m)	8' MAX. (2.48 m)	16' MAX. (4.8m)
V+H+H ₁ = 40' MAX. (12.4 m)	H = 8' MAX. (2.48 m)	H+H ₁ = 16' MAX. (4.8m)

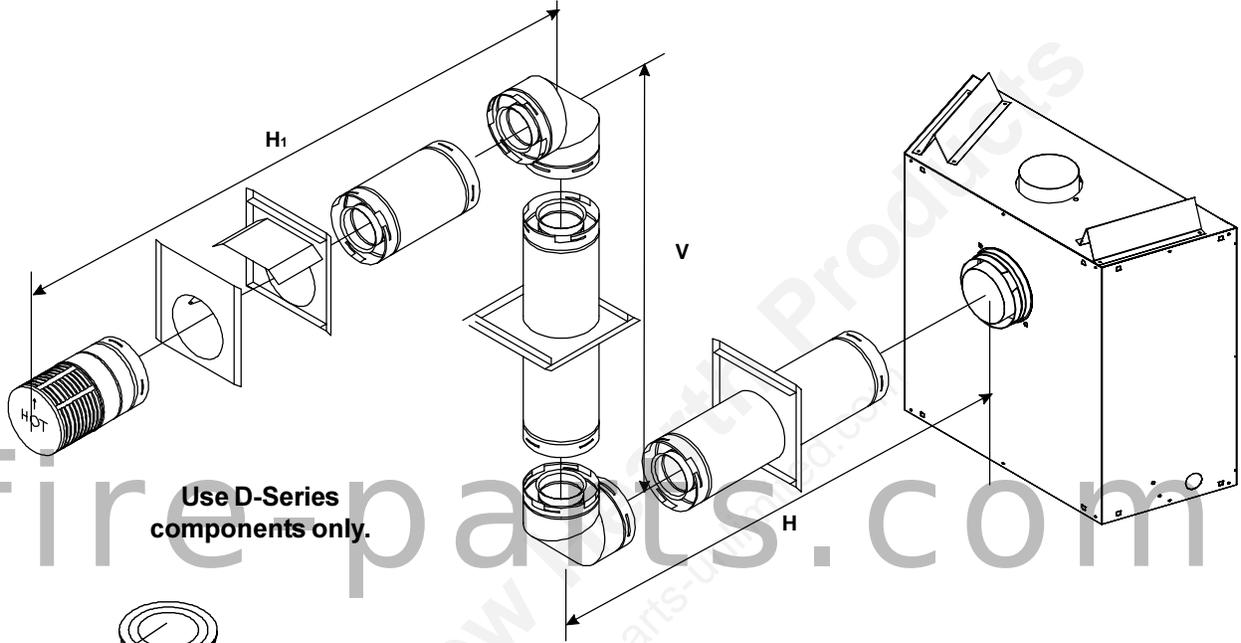

Use D-Series components only.

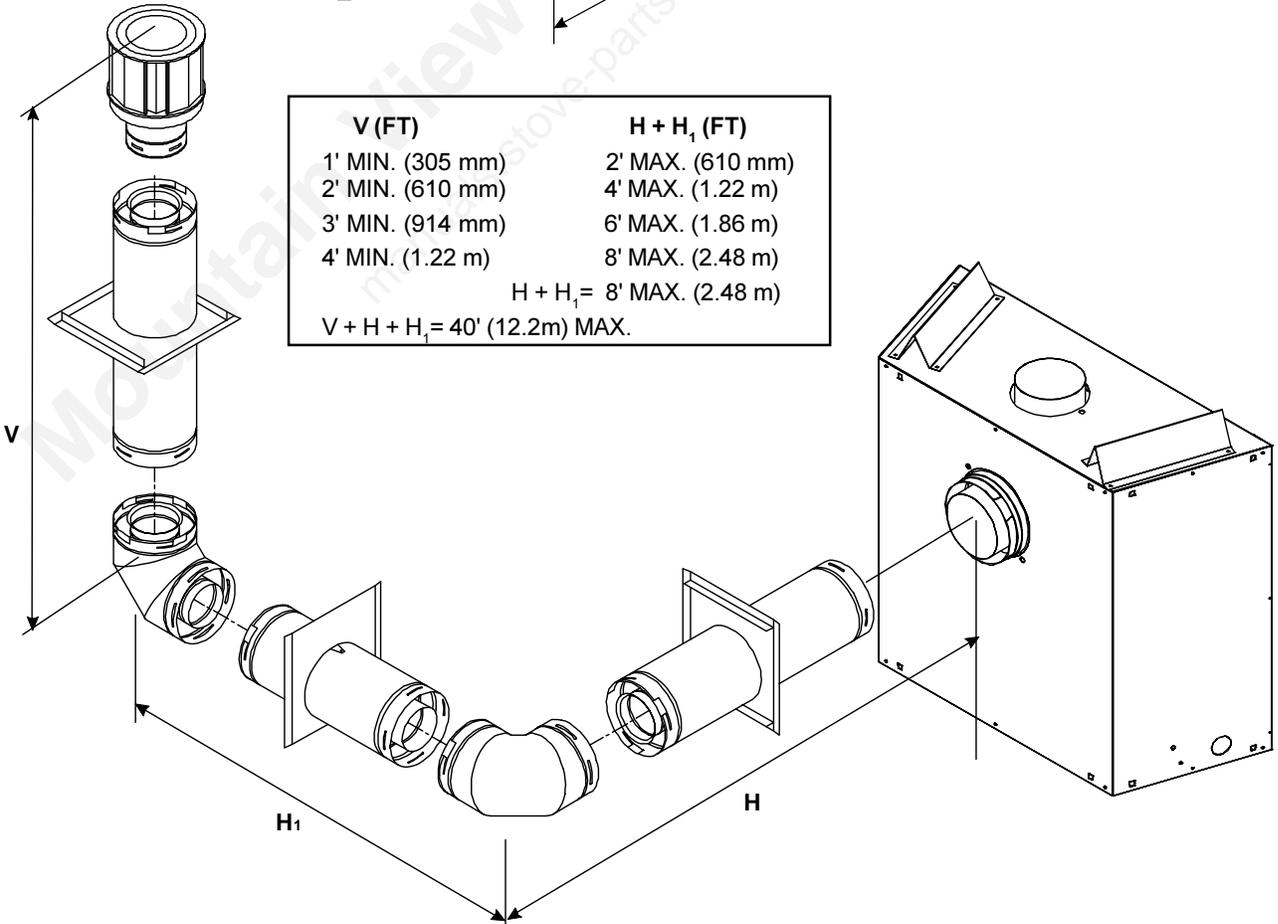

V (FT)	H + H₁ (FT)
1' MIN. (305 mm)	2' MAX. (610 mm)
2' MIN. (610 mm)	4' MAX. (1.22 m)
3' MIN. (914 mm)	6' MAX. (1.86 m)
4' MIN. (1.22 m)	8' MAX. (2.48 m)
	H + H ₁ = 8' MAX. (2.48 m)
V + H + H ₁ = 40' (12.2m) MAX.	

Figure 14. Venting with Two 90° Elbows

VENTING WITH TWO (2) 90° ELBOWS		NATURAL GAS	
V (MIN.)	MODEL SL-550TR H + H ₁ (MAX.)	MODEL SL-750TR H + H ₁ (MAX.)	MODEL SL-950TR H + H ₁ (MAX.)
90° Elbow on Top	2.5 FT (863mm)	2.5 FT (863mm)	2 FT (610mm)
1 FT (305mm)	3 FT (914mm)	3 FT (914mm)	3 FT (914mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)
H + H ₁ MAX. = 16 FT (4.8m)		V + H + H ₁ MAX. = 40 FT (12.2m)	

VENTING WITH TWO (2) 90° ELBOWS		PROPANE	
V (MIN.)	MODEL SL-550TR H + H ₁ (MAX.)	MODEL SL-750TR H + H ₁ (MAX.)	MODEL SL-950TR H + H ₁ (MAX.)
90° Elbow on Top	2.5 FT (863mm)	NOT ALLOWED	NOT ALLOWED
1 FT (305mm)	2.5 FT (863mm)	2 FT (610mm)	2 FT (610mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)
H + H ₁ MAX. = 16 FT (4.8m)		V + H + H ₁ MAX. = 40 FT (12.2m)	


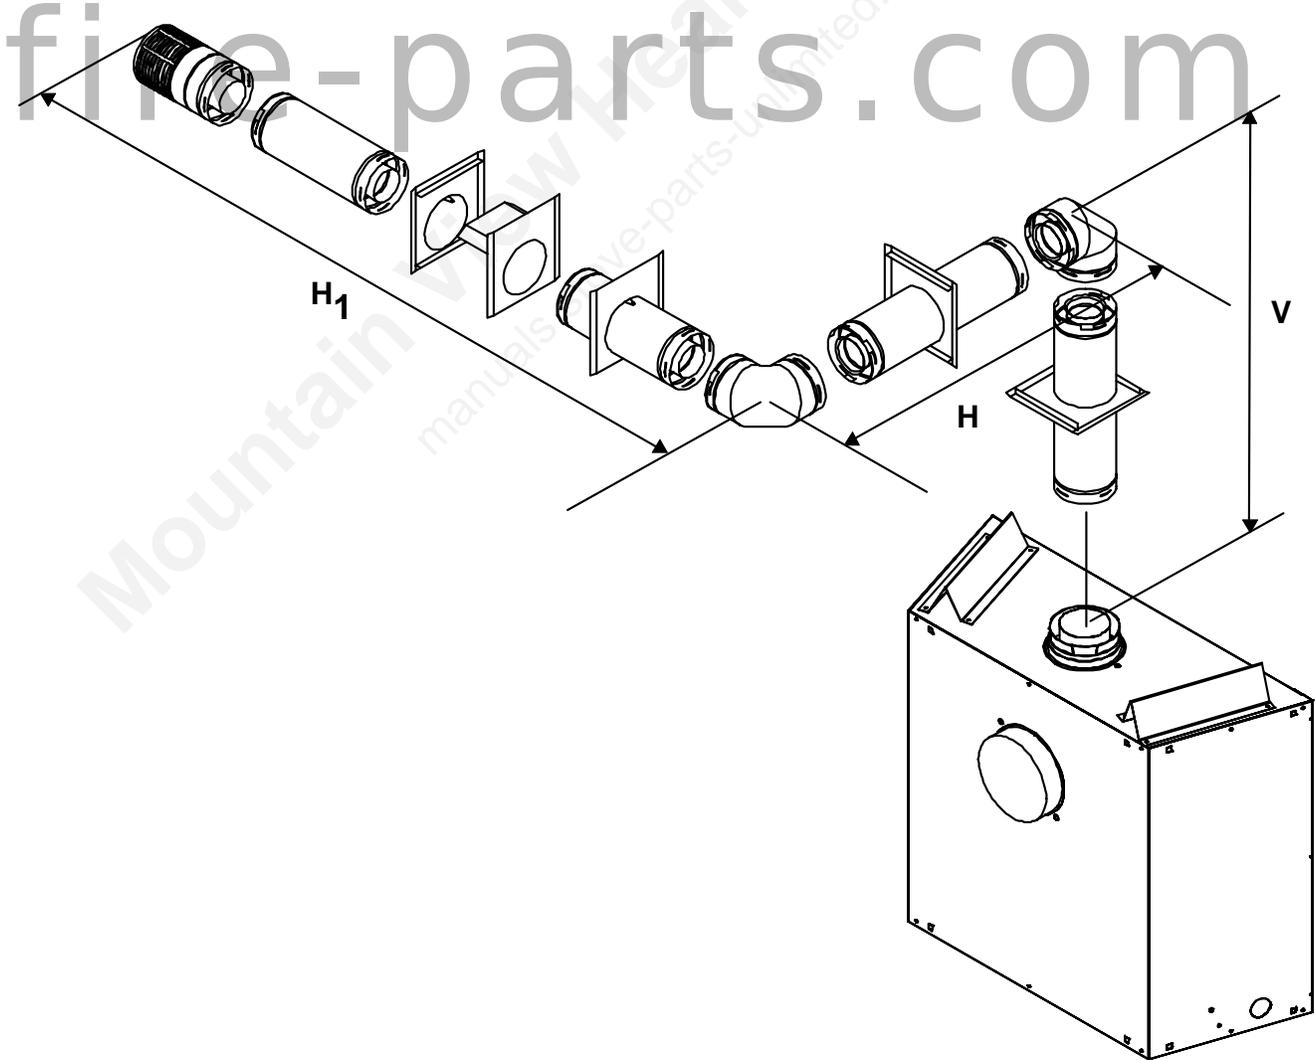


Figure 15. Venting with Two 90° Elbows - TR Models

VENTING WITH TWO (2) 90° ELBOWS		NATURAL GAS
V (MIN.)	MODEL SL-550TRS	MODEL SL-750TRS
90° Elbow on Top	H + H₁ (MAX.)	H + H₁ (MAX.)
1 FT (305mm)	2 FT (610mm)	2 FT (610mm)
2 FT (610mm)	3 FT (914mm)	3 FT (914mm)
3 FT (914mm)	4 FT (1.22m)	4 FT (1.22m)
4 FT (1.22m)	6 FT (1.86m)	6 FT (1.86m)
5 FT (1.52m)	8 FT (2.48m)	8 FT (2.48m)
	16 FT (4.8m)	16 FT (4.8m)
H + H₁ MAX. = 16 FT (4.8m)		V + H + H₁ MAX. = 40 FT (12.2m)

VENTING WITH TWO (2) 90° ELBOWS		PROPANE
V (MIN.)	MODEL SL-550TRS	MODEL SL-750TRS
90° Elbow on Top	H + H₁ (MAX.)	H + H₁ (MAX.)
1 FT (305mm)	NOT ALLOWED	NOT ALLOWED
2 FT (610mm)	2 FT (610mm)	2 FT (610mm)
3 FT (914mm)	4 FT (1.22m)	4 FT (1.22m)
4 FT (1.22m)	6 FT (1.86m)	6 FT (1.86m)
5 FT (1.52m)	8 FT (2.48m)	8 FT (2.48m)
	16 FT (4.8m)	16 FT (4.8m)
H + H₁ MAX. = 16 FT (4.8m)		V + H + H₁ MAX. = 40 FT (12.2m)

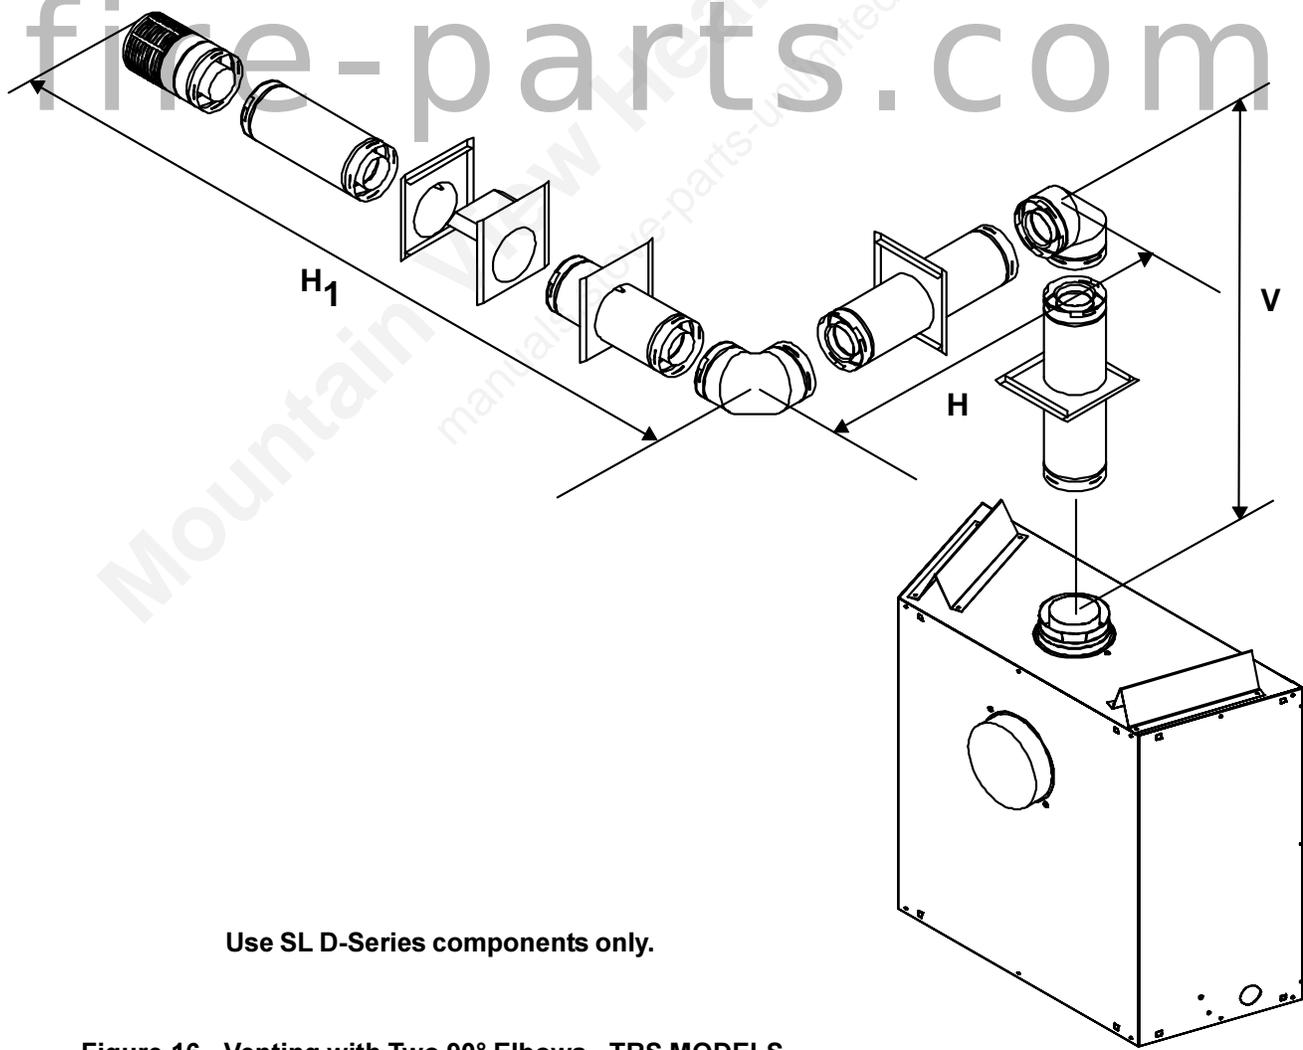

Use SL D-Series components only.

Figure 16. Venting with Two 90° Elbows - TRS MODELS


VENTING WITH TWO (2) 90° ELBOWS NATURAL GAS

V (MIN.)	MODEL SL-550TR H (MAX.)	MODEL SL-750TR H (MAX.)	MODEL SL-950TR H (MAX.)
90° Elbow on Top	2.5 FT (863mm)	2.5 FT (863mm)	2 FT (610mm)
1 FT (305mm)	3 FT (914mm)	3 FT (914mm)	3 FT (914mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)
H MAX. = 16 FT (4.8m)		V + V ₁ + HMAX. = 40 FT (12.2m)	

VENTING WITH TWO (2) 90° ELBOWS PROPANE

V (MIN.)	MODEL SL-550TR H (MAX.)	MODEL SL-750TR H (MAX.)	MODEL SL-950TR H (MAX.)
90° Elbow on Top	2.5 FT (863mm)	NOTALLOWED	NOTALLOWED
1 FT (305mm)	2.5 FT (863mm)	2 FT (610mm)	2 FT (610mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)
H MAX. = 16 FT (4.8m)		V + V ₁ + HMAX. = 40 FT (12.2m)	

fire-parts.com

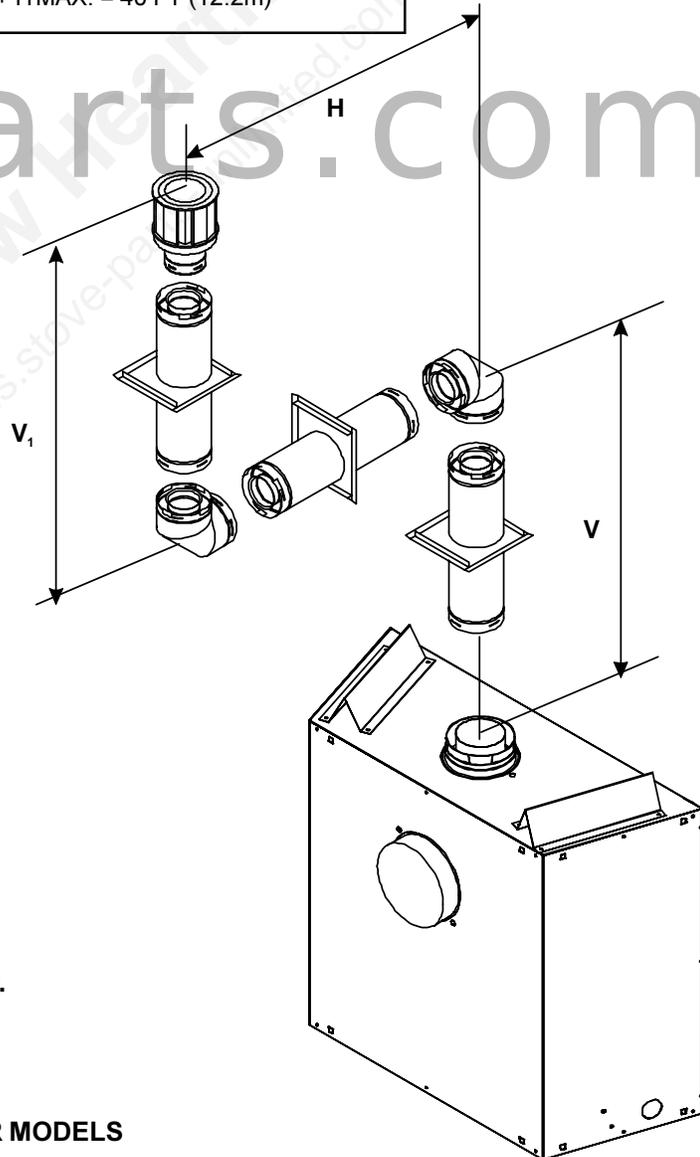

Use SL D-Series components only.

Figure 17. Venting with Two 90° Elbows - TR MODELS

VENTING WITH TWO (2) 90° ELBOWS

NATURAL GAS

V (MIN.)	MODEL SL-550TRS H (MAX.)	MODEL SL-750TRS H (MAX.)
90° Elbow on Top	2 FT (610mm)	2 FT (610mm)
1 FT (305mm)	3 FT (914mm)	3 FT (914mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)


H MAX. = 16 FT (4.8m) V + V₁ + H MAX. = 40 FT (12.2m)

VENTING WITH TWO (2) 90° ELBOWS

PROPANE


V (MIN.)	MODEL SL-550TRS H (MAX.)	MODEL SL-750TRS H (MAX.)
90° Elbow on Top	NOTALLOWED	NOTALLOWED
1 FT (305mm)	2 FT (610mm)	2 FT (610mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)

H MAX. = 16 FT (4.8m) V + V₁ + H MAX. = 40 FT (12.2m)

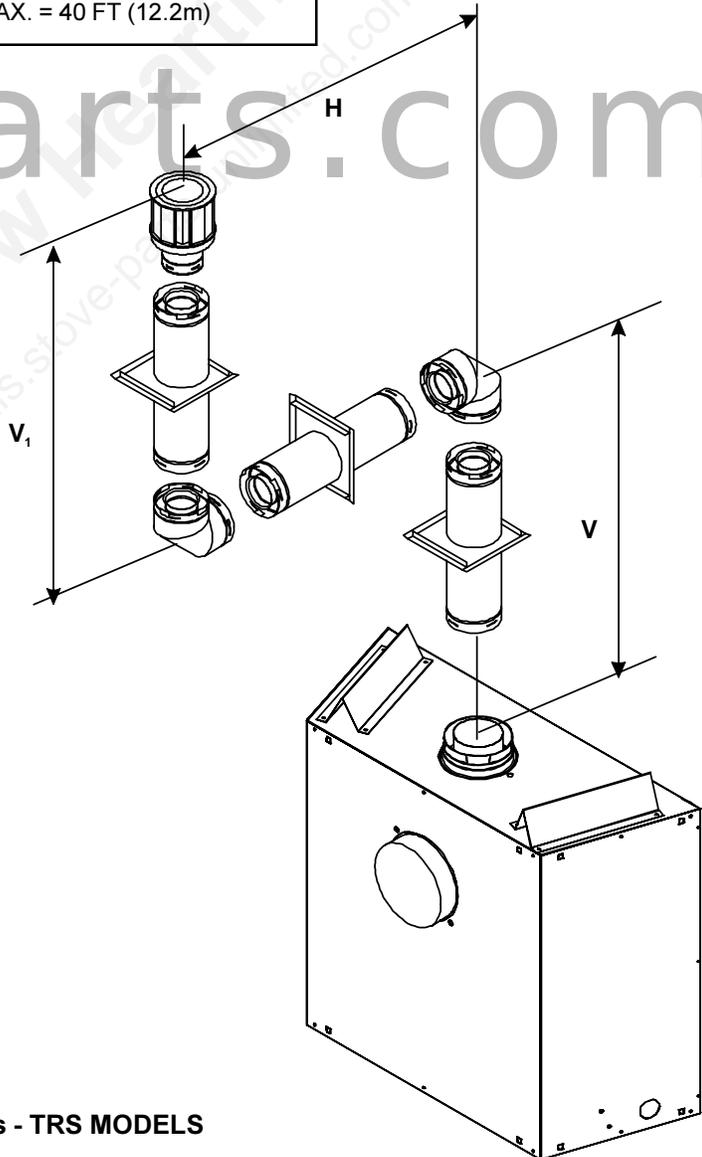

**Use SL D-Series
components only.**

Figure 18. Venting with Two 90° Elbows - TRS MODELS

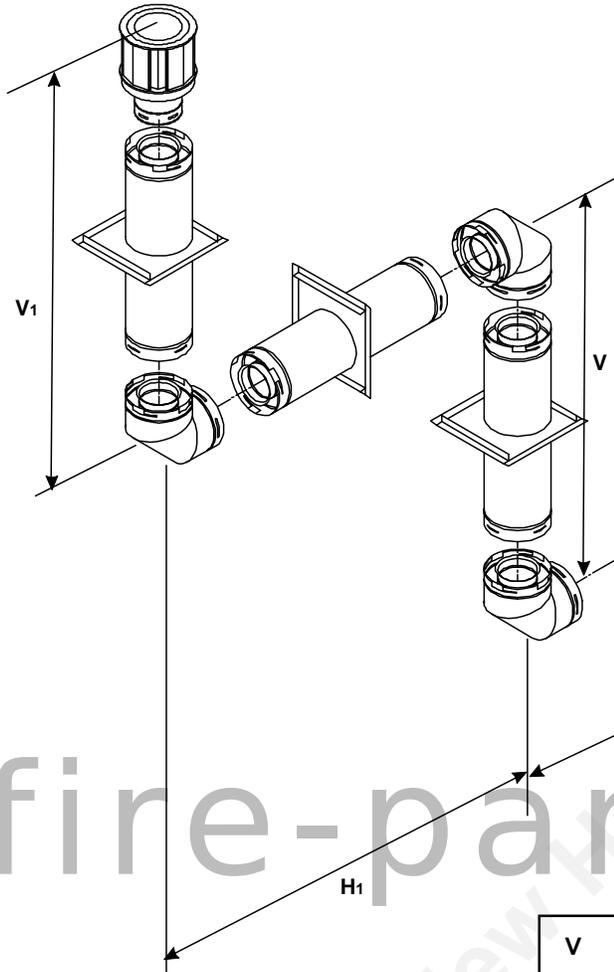

V	H	H + H ₁
1' MIN. (305 mm)	2' MAX. (610 mm)	4' MAX. (1.22 m)
2' MIN. (610 mm)	4' MAX. (1.22 m)	8' MAX. (2.48 m)
3' MIN. (914 mm)	6' MAX. (1.86 m)	12' MAX. (3.72 m)
4' MIN. (1.22 m)	8' MAX. (2.48 m)	16' MAX. (4.8 m)

$V_1 + V + H + H_1 = 40'$ MAX. (12.4 m)
 $H = 8'$ MAX. (2.48 m) $H + H_1 = 16'$ MAX. (4.8 m)

fire-parts.com

V	H	H + H ₁ + H ₂
1' MIN. (305 mm)	2' MAX. (610 mm)	4' MAX. (1.22 m)
2' MIN. (610 mm)	4' MAX. (1.22 m)	8' MAX. (2.48 m)
3' MIN. (914 mm)	6' MAX. (1.86 m)	12' MAX. (3.72 m)
4' MIN. (1.22 m)	8' MAX. (2.48 m)	16' MAX. (4.8 m)

$V + H + H_1 + H_2 = 40'$ MAX. (12.4 m)
 $H = 8'$ MAX. (2.48 m) $H + H_1 + H_2 = 16'$ MAX. (4.8 m)

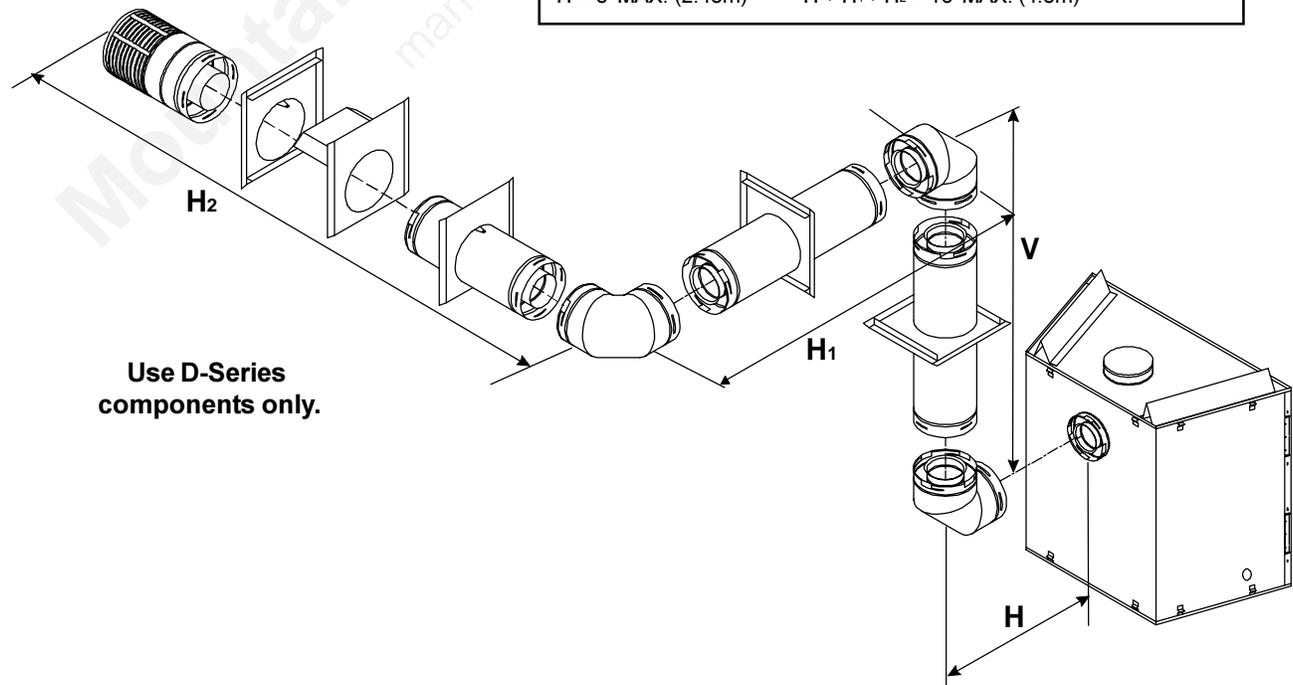


Figure 19. Venting with Three 90° elbows

VENTING WITH THREE (3) 90° ELBOWS NATURAL GAS

V (MIN.)	MODEL SL-550TR		MODEL SL-750TR		MODEL SL-950TR	
	H (MAX.)	H + H ₁ (MAX.)	H (MAX.)	H + H ₁ (MAX.)	H (MAX.)	H + H ₁ (MAX.)
90° Elbow on Top	2.5 FT (863mm)	4 FT (1.22m)	2.5 FT (863mm)	4 FT (1.22m)	2 FT (610mm)	4 FT (1.22m)
1 FT (305mm)	3 FT (914mm)	6 FT (1.86m)	3 FT (914mm)	6 FT (1.86m)	3 FT (914mm)	6 FT (1.86m)
2 FT (610mm)	4 FT (1.22m)	8 FT (2.48m)	4 FT (1.22m)	8 FT (2.48m)	4 FT (1.22m)	8 FT (2.48m)
3 FT (914mm)	6 FT (1.86m)	12 FT (3.72m)	6 FT (1.86m)	12 FT (3.72m)	6 FT (1.86m)	12 FT (3.72m)
4 FT (1.22m)	8 FT (2.48m)	16 FT (4.8m)	8 FT (2.48m)	16 FT (4.8m)	8 FT (2.48m)	16 FT (4.8m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)

$$V + H + V_1 + H_1 \text{ MAX.} = 40 \text{ FT (12.2m)}$$

VENTING WITH THREE (3) 90° ELBOWS PROPANE

V (MIN.)	MODEL SL-550TR		MODEL SL-750TR		MODEL SL-950TR	
	H (MAX.)	H + H ₁ (MAX.)	H (MAX.)	H + H ₁ (MAX.)	H (MAX.)	H + H ₁ (MAX.)
90° Elbow on Top	2.5 FT (863mm)	5 FT (1.53m)	NOT ALLOWED	NOT ALLOWED	NOT ALLOWED	NOT ALLOWED
1 FT (305mm)	2.5 FT (863mm)	5 FT (1.53m)	2 FT (610mm)	4 FT (1.22m)	2 FT (610mm)	4 FT (1.22m)
2 FT (610mm)	4 FT (1.22m)	8 FT (2.48m)	4 FT (1.22m)	8 FT (2.48m)	4 FT (1.22m)	8 FT (2.48m)
3 FT (914mm)	6 FT (1.86m)	12 FT (3.72m)	6 FT (1.86m)	12 FT (3.72m)	6 FT (1.86m)	12 FT (3.72m)
4 FT (1.22m)	8 FT (2.48m)	16 FT (4.8m)	8 FT (2.48m)	16 FT (4.8m)	8 FT (2.48m)	16 FT (4.8m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)

$$V + V_1 + H + H_1 \text{ MAX.} = 40 \text{ FT (12.2m)}$$

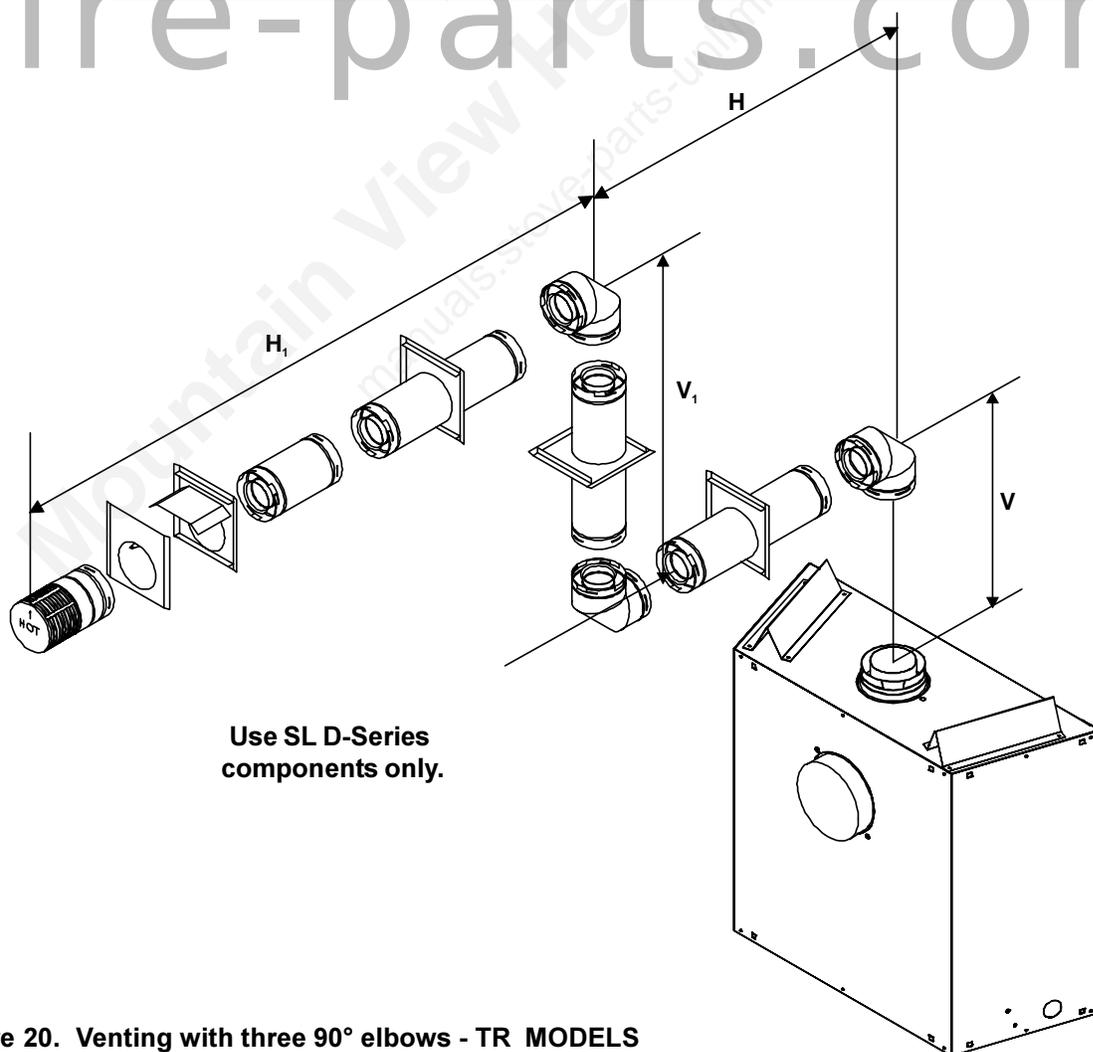


Figure 20. Venting with three 90° elbows - TR MODELS

VENTING WITH THREE (3) 90° ELBOWS

NATURAL GAS

V (MIN.)	MODEL SL-550TRS		MODEL SL-750TRS	
	H (MAX.)	H + H ₁ (MAX.)	H (MAX.)	H + H ₁ (MAX.)
90° Elbow on Top	2 FT (610mm)	4 FT (1.22m)	2 FT (610mm)	4 FT (1.22m)
1 FT (305mm)	3 FT (914mm)	6 FT (1.86m)	3 FT (914mm)	6 FT (1.86m)
2 FT (610mm)	4 FT (1.22m)	8 FT (2.48m)	4 FT (1.22m)	8 FT (2.48m)
3 FT (914mm)	6 FT (1.86m)	12 FT (3.72m)	6 FT (1.86m)	12 FT (3.72m)
4 FT (1.22m)	8 FT (2.48m)	16 FT (4.8m)	8 FT (2.48m)	16 FT (4.8m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)

$V + H + V_1 + H_1 \text{ MAX.} = 40 \text{ FT (12.2m)}$

VENTING WITH THREE (3) 90° ELBOWS

PROPANE

V (MIN.)	MODEL SL-550TRS		MODEL SL-750TRS	
	H (MAX.)	H + H ₁ (MAX.)	H (MAX.)	H + H ₁ (MAX.)
90° Elbow on Top	NOT ALLOWED	NOT ALLOWED	NOT ALLOWED	NOT ALLOWED
1 FT (305mm)	2 FT (610mm)	4 FT (1.22m)	2 FT (610mm)	4 FT (1.22m)
2 FT (610mm)	4 FT (1.22m)	8 FT (2.48m)	4 FT (1.22m)	8 FT (2.48m)
3 FT (914mm)	6 FT (1.86m)	12 FT (3.72m)	6 FT (1.86m)	12 FT (3.72m)
4 FT (1.22m)	8 FT (2.48m)	16 FT (4.8m)	8 FT (2.48m)	16 FT (4.8m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)

$V + H + V_1 + H_1 \text{ MAX.} = 40 \text{ FT (12.2m)}$


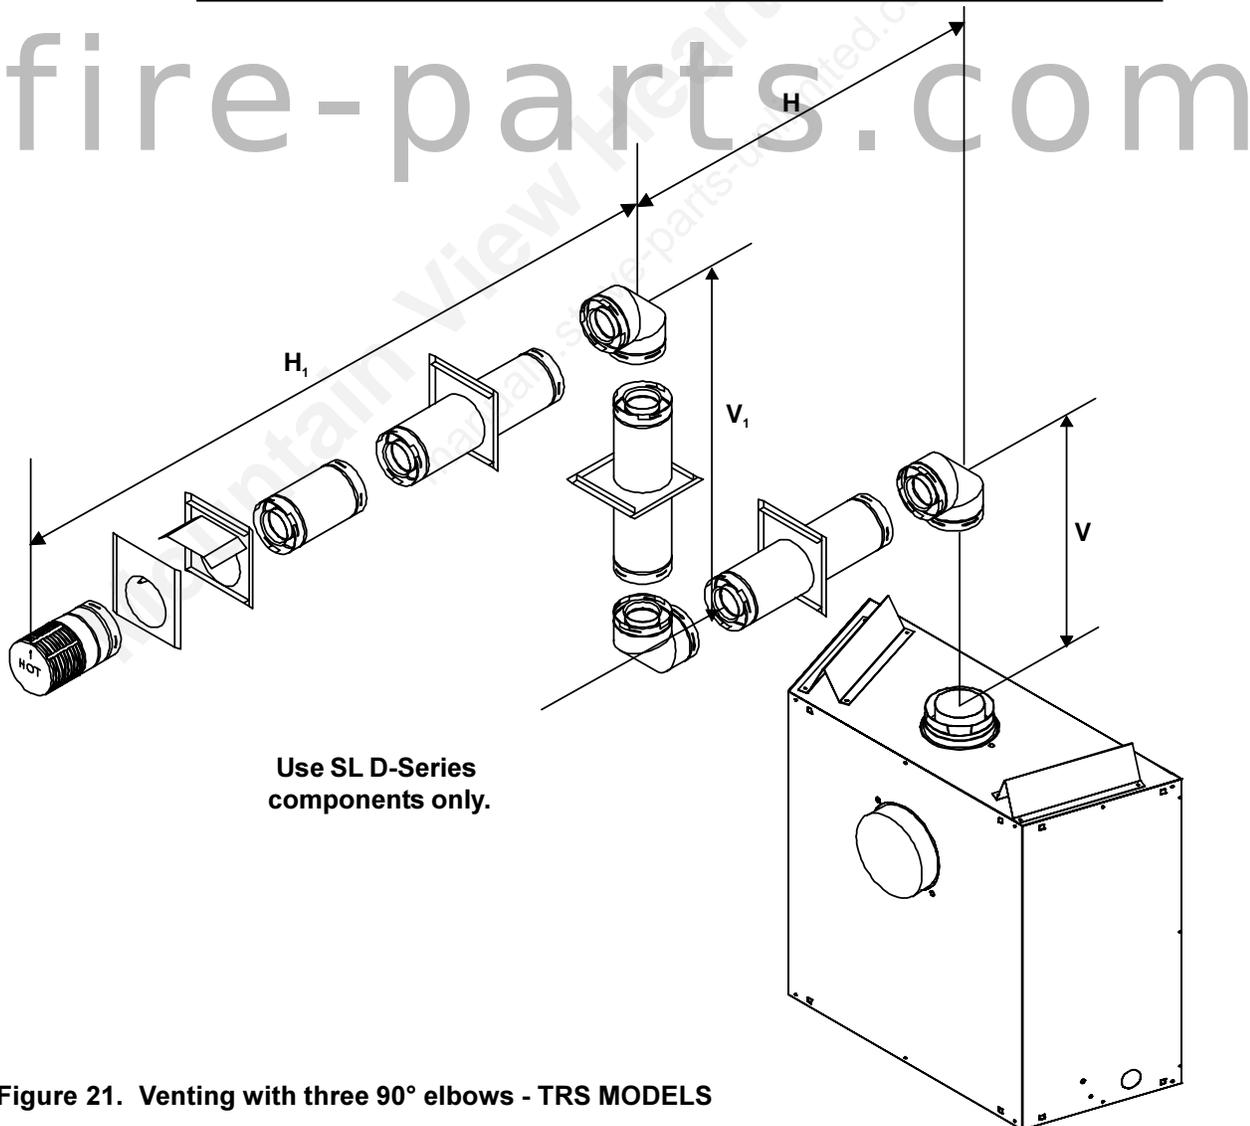


Figure 21. Venting with three 90° elbows - TRS MODELS

VENTING WITH THREE (3) 90° ELBOWS NATURAL GAS			
	MODEL SL-550TR	MODEL SL-750TR	MODEL SL-950TR
V (MIN.)	H + H₁ (MAX.)	H + H₁ (MAX.)	H + H₁ (MAX.)
90° Elbow on Top	2.5 FT (863mm)	2.5 FT (863mm)	2 FT (610mm)
1 FT (305mm)	3 FT (914mm)	3 FT (914mm)	3 FT (914mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)
H + H ₁ MAX. = 16 FT (4.8m)		V + V ₁ + H + H ₁ MAX. = 40 FT (12.2m)	

VENTING WITH THREE (3) 90° ELBOWS PROPANE			
	MODEL SL-550TR	MODEL SL-750TR	MODEL SL-950TR
V (MIN.)	H + H₁ (MAX.)	H + H₁ (MAX.)	H + H₁ (MAX.)
90° Elbow on Top	2.5 FT (863mm)	NOT ALLOWED	NOT ALLOWED
1 FT (305mm)	2.5 FT (863mm)	2 FT (610mm)	2 FT (610mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)	16 FT (4.8m)
H + H ₁ MAX. = 16 FT (4.8m)		V + V ₁ + H + H ₁ MAX. = 40 FT (12.2m)	

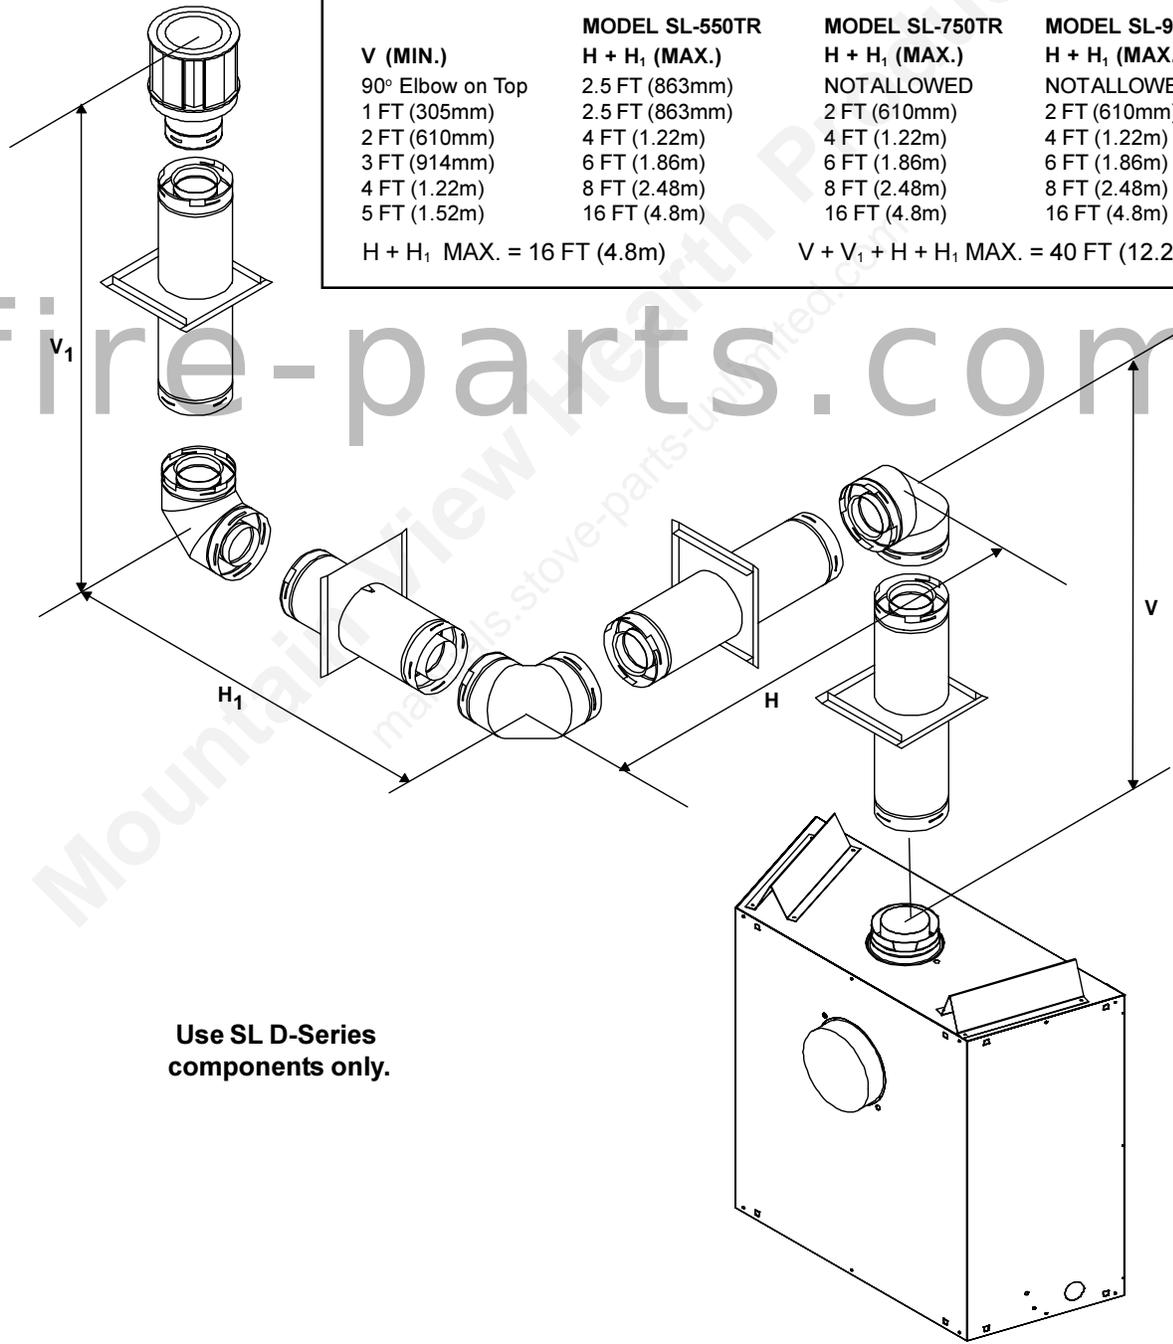

Use SL D-Series components only.

Figure 22. Venting with three 90° elbows - TR Models

VENTING WITH THREE (3) 90° ELBOWS


NATURAL GAS

V (MIN.)	MODEL SL-550TRS H + H ₁ (MAX.)	MODEL SL-750TRS H + H ₁ (MAX.)
90° Elbow on Top	2 FT (610mm)	2 FT (610mm)
1 FT (305mm)	3 FT (914mm)	3 FT (914mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)
H + H ₁ MAX. = 16 FT (4.8m)		V + V ₁ + H + H ₁ MAX. = 40 FT (12.2m)

VENTING WITH THREE (3) 90° ELBOWS

PROPANE

V (MIN.)	MODEL SL-550TRS H + H ₁ (MAX.)	MODEL SL-750TRS H + H ₁ (MAX.)
90° Elbow on Top	NOT ALLOWED	NOT ALLOWED
1 FT (305mm)	2 FT (610mm)	2 FT (610mm)
2 FT (610mm)	4 FT (1.22m)	4 FT (1.22m)
3 FT (914mm)	6 FT (1.86m)	6 FT (1.86m)
4 FT (1.22m)	8 FT (2.48m)	8 FT (2.48m)
5 FT (1.52m)	16 FT (4.8m)	16 FT (4.8m)
H + H ₁ MAX. = 16 FT (4.8m)		V + V ₁ + H + H ₁ MAX. = 40 FT (12.2m)

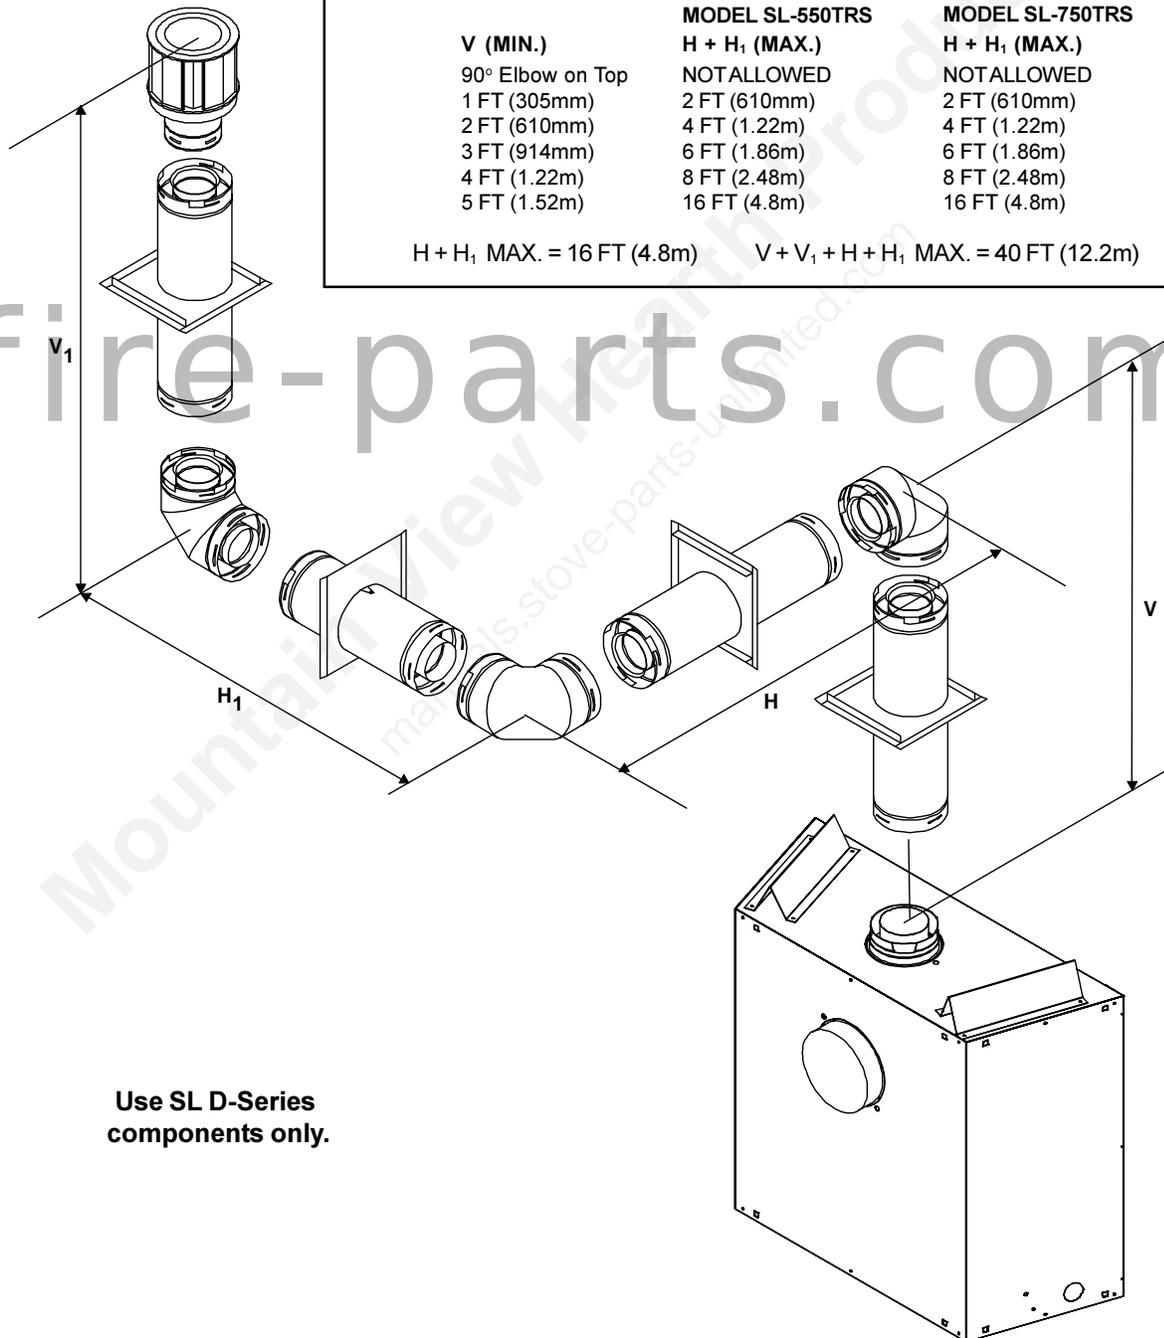

Use SL D-Series components only.

Figure 23. Venting with three 90° elbows - TRS Models

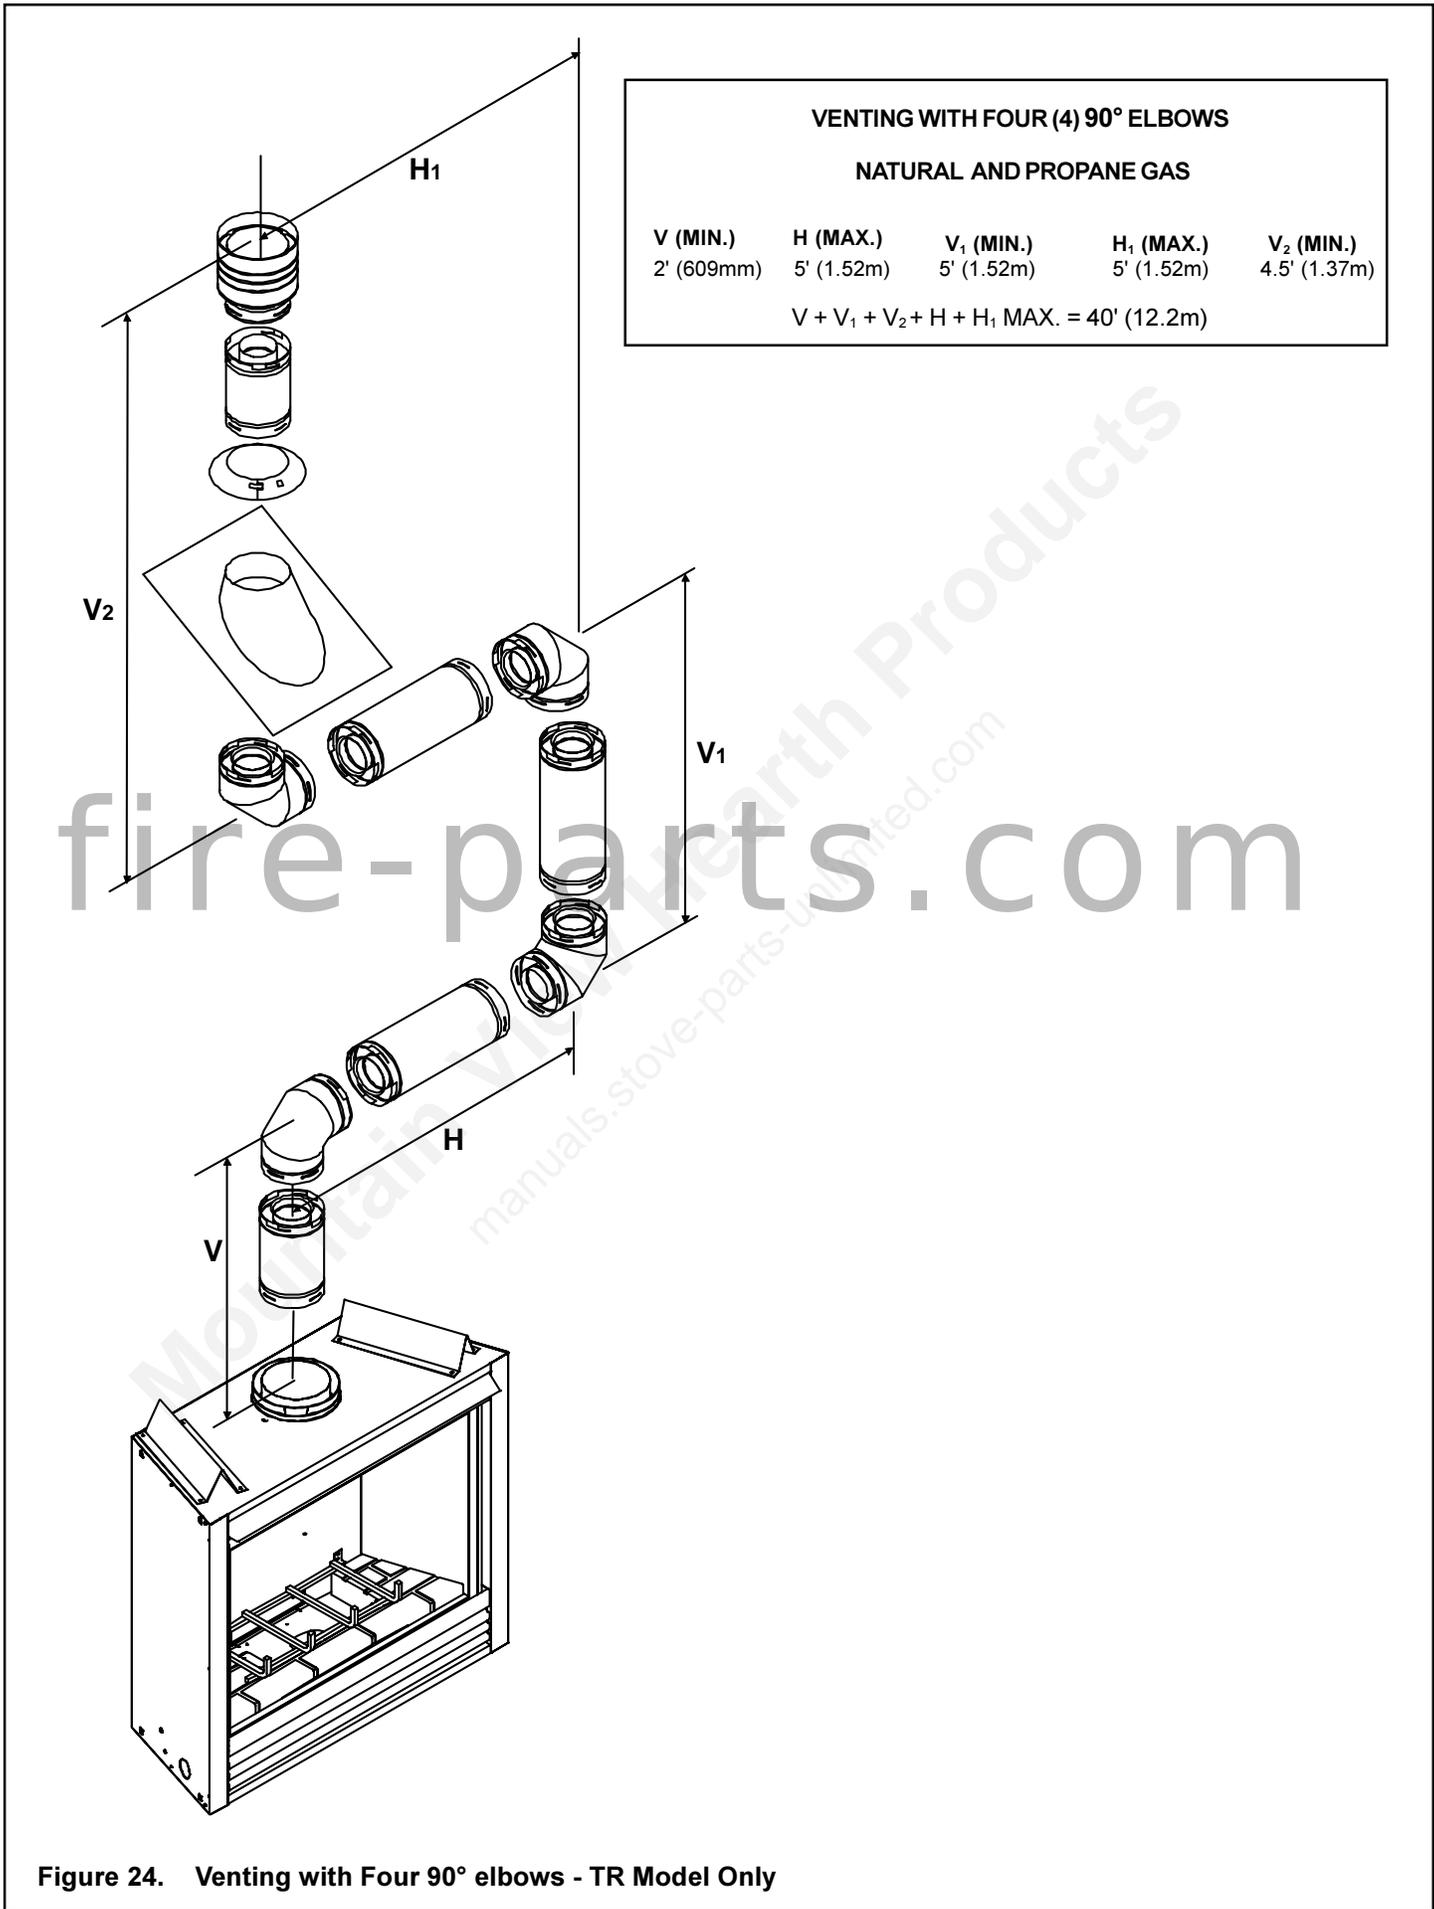


Figure 24. Venting with Four 90° elbows - TR Model Only

B. Installing Vent Components

After determining which set of starting collars will be used (top or rear), follow venting instructions accordingly.

Venting Out the Rear Vent (See Figure 25)

Remove the installed rear seal cap from the rear starting collars by cutting the strap at each end. Remove the insulation inside the 5" collar. Follow the vent configuration tables accordingly.

Remove the 5" diameter heat shield from the 5" diameter collar by sliding it out.



WARNING: THE TOP HEAT SHIELD (INSIDE THE FIREBOX) MUST REMAIN ATTACHED IF THE VENT SYSTEM IS ATTACHED TO THE REAR STARTING COLLARS. SEE FIGURE 25.

Venting Out the Top Vent

Remove the top vent collar seal cap by cutting the strap at each end. Remove the insulation inside **BOTH** the 4" diameter and 6 5/8" diameter collars. (See Figure 25).

Remove the 4" diameter heat shield from the 4" diameter collar by sliding it out.

You have to take the glass off for positioning the logs when the unit is finally installed in place and finished around it. Attach vent system to the top starting collars.



WARNING: THE REAR VENT COLLAR SEAL CAP MUST REMAIN ATTACHED TO THE REAR VENT COLLARS IF THE VENT SYSTEM IS ATTACHED TO THE TOP STARTING COLLARS. SEE FIGURE 25.



WARNING: FAILURE TO REMOVE INSULATION IN THE SET OF COLLARS YOU ARE USING COULD CAUSE A FIRE.



WARNING: YOU MUST LEAVE THE INSULATION IN PLACE IN THE SET OF COLLARS YOU ARE NOT USING.

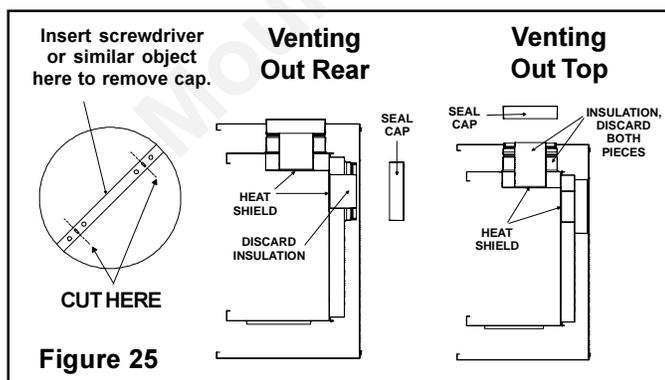


Figure 25

1. Attach the First Vent Component to the Starting Collars

To attach the first vent component to the starting collars of the fireplace:

- Apply a 3/8 inch (9.5mm) bead of stove cement around the fireplace inner vent starting collar.
- Lock the vent components into place by sliding the concentric pipe sections with four (4) equally spaced interior beads into the fireplace collar or previously installed component end with four (4) equally spaced indented sections.
- When the internal beads of each outer pipe line up, rotate the pipe section clockwise about one-quarter (1/4) turn. The vent pipe is now locked together.

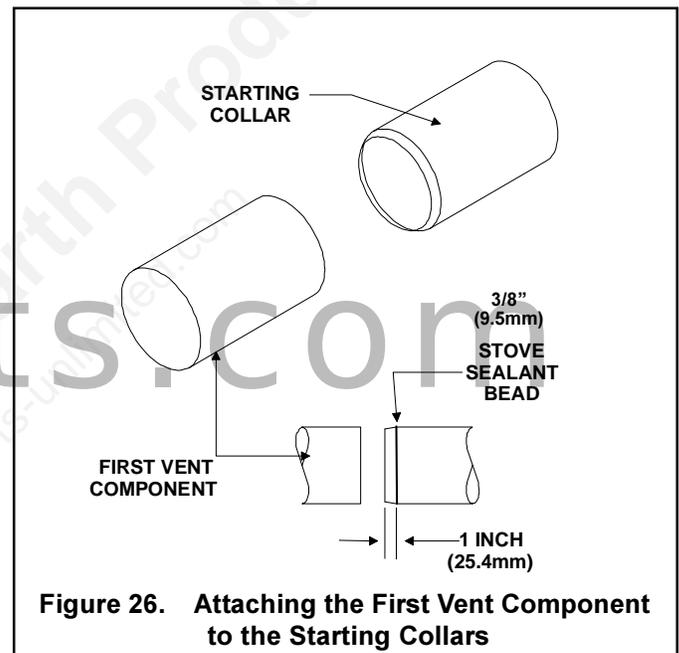


Figure 26. Attaching the First Vent Component to the Starting Collars




WARNING: A 3/8 INCH (9.5 MM) BEAD OF STOVE CEMENT MUST BE PLACED AROUND THE FIREPLACE INNER VENT STARTING COLLAR BEFORE ATTACHING THE FIRST VENT COMPONENT. FAILURE TO SEAL THIS JOINT MAY CAUSE THE FIREPLACE TO OPERATE IMPROPERLY. SEE THE DIAGRAM .

If the installation is for a termination cap attached directly to the fireplace, skip to the sections, **Install Firestops and Vent Termination**.

2. Continue Adding Vent Components

- Continue adding vent components, locking each succeeding component into place.
- Ensure that each succeeding vent component is securely fitted and locked into the preceding component.
- 90° elbows may be installed and rotated to any point around the preceding component's vertical axis. If an elbow does not end up in a locked position with the preceding component, attach with a minimum of two (2) sheet metal screws.

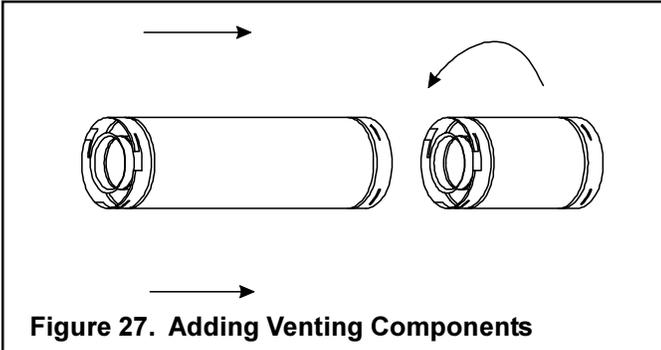

3. Install Support Brackets

For Horizontal Runs - The vent system must be supported every five (5) feet of horizontal run by a horizontal pipe support.


To install support brackets for horizontal runs:

- Place the pipe supports around the vent pipe.
- Nail the pipe supports to the framing members.

For Vertical Runs - The vent system must be supported every eight (8) feet (2.4m) above the fireplace flue outlet by wall brackets.

To install support brackets for vertical runs:

- Attach wall brackets to the vent pipe and secure the wall bracket to the framing members with nails or screws.

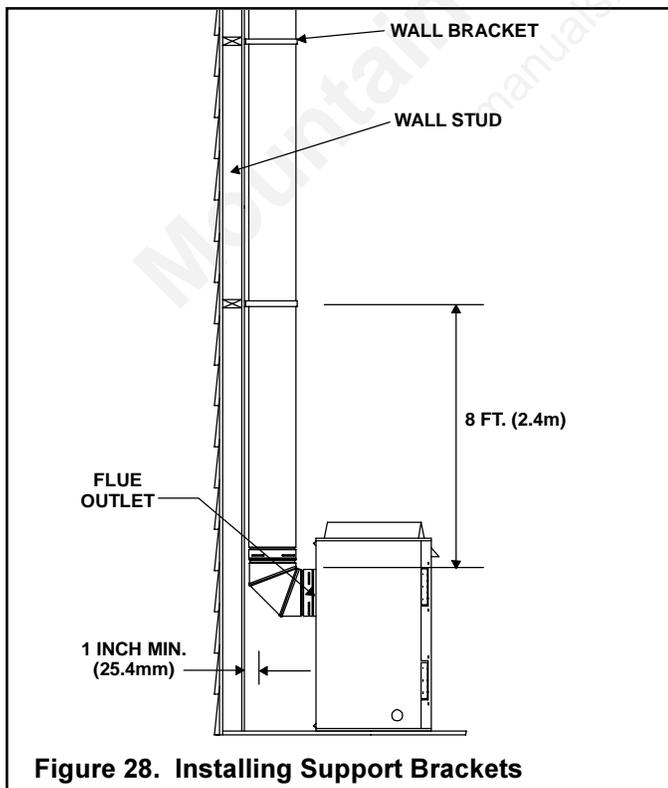

4. Install Firestops



For Horizontal Runs - Firestops are **REQUIRED** on both sides of a combustible wall through which the vent passes.

NOTE: Model DVK-01TRD or SLK-01TRD does not need an exterior firestop on an exterior combustible wall.

To install firestops for horizontal runs that pass through either interior or exterior walls:

Cut a 12-inch by 12-inch (305 mm X 305 mm) hole through the wall for D-series or a 10-inch by 10-inch (254 mm X 254 mm) hole for SL-D-series pipe. The center of the framing hole is one (1) inch (25.4mm) above the center of the horizontal vent pipe.


- Position the firestops on both sides of the hole previously cut and secure the firestops with nails or screws.
- The heat shields of the firestops **MUST BE** placed towards the top of the hole.
- Continue the vent run through the firestops.

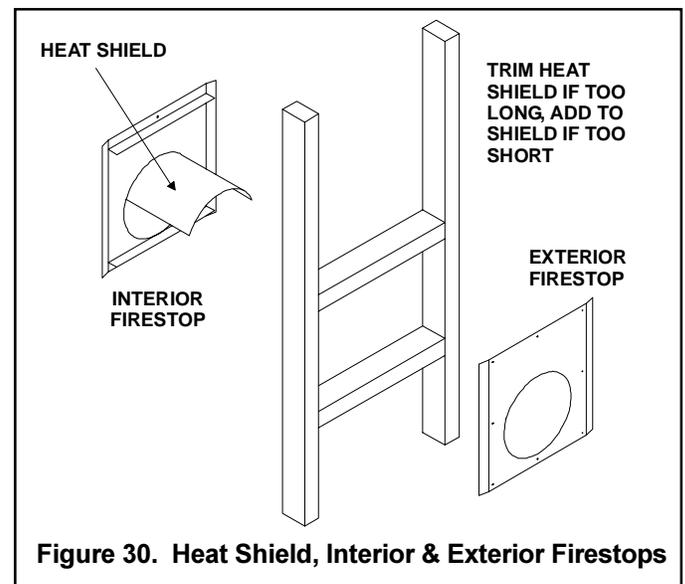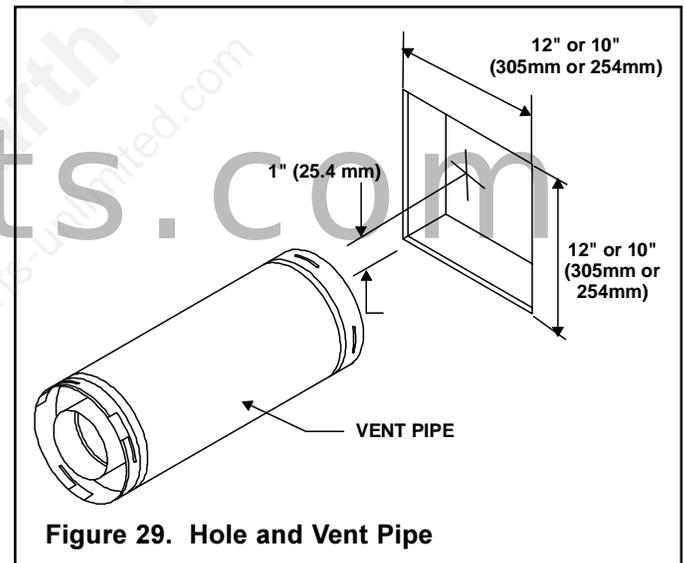


For Vertical Runs - One ceiling firestop is **REQUIRED** at the hole in each ceiling through which the vent passes.

To install firestops for vertical runs that pass through ceilings:

- Position a plumb bob directly over the center of the vertical vent component.
- Mark the ceiling to establish the centerpoint of the vent.
- Drill a hole or drive a nail through this centerpoint.
- Check the floor above for any obstructions, such as wiring or plumbing runs.
- Reposition the fireplace and vent system, if necessary, to accommodate the ceiling joists and/or obstructions.
- Cut an 11-inch X 11-inch (280mm X 280mm) for D-Series or a 10-inch X 10-inch (254mm X 254mm) hole through the ceiling, using the centerpoint previously marked.
- Frame the hole with framing lumber the same size as the ceiling joists.

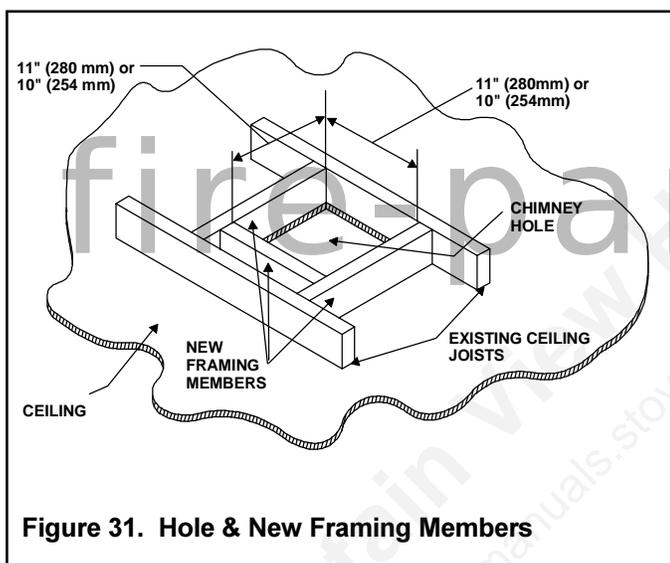


If the area above the ceiling is **NOT** an attic, position and secure the ceiling firestop on the ceiling side of the previously cut and framed hole.

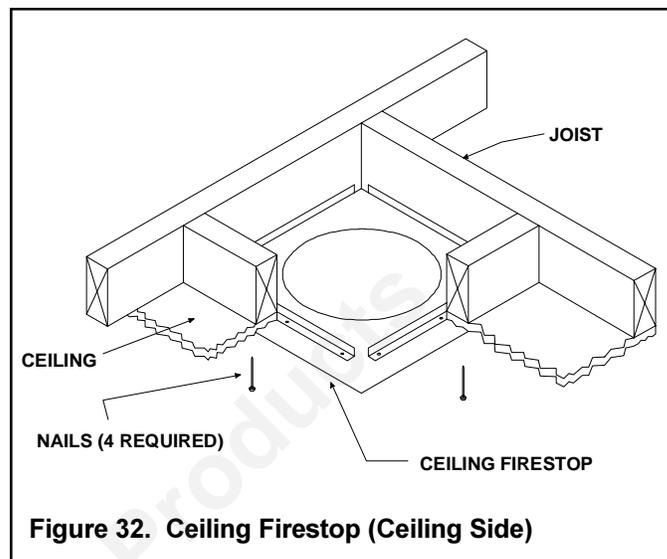

If the area above the ceiling **IS** an attic, position and secure the firestop on top of the previously framed hole.

NOTE: Keep insulation away from the vent pipe at least 1 inch (25mm).

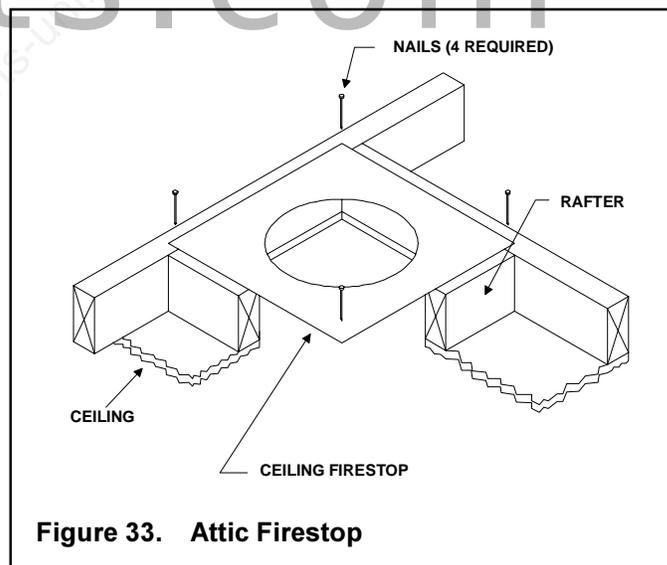

C. Vent Termination

For Horizontal Terminations - To attach and secure the termination to the last section of horizontal vent:

- Rotate and interlock the ends as described at the beginning of the Installing Vent Components section.
- The termination kit should pass through the wall firestops from the exterior of the building.
- Adjust the termination cap to its final exterior position on the building.



WARNING: THE TERMINATION CAP MUST BE POSITIONED SO THAT THE ARROW IS POINTING UP.

For roundcap termination kits:


- Use the exterior pipelock hole on the round flange of the wall firestop to secure the vent pipe in place.


For trapezoidal cap termination kits:

- Using screws secure the cap to the exterior wall through the flanges in the cap.



WARNING: THE BOTTOM OF THE VENT TERMINATION CAP MUST BE A MINIMUM OF 12 INCHES (305 MM) ABOVE GROUND LEVEL (GRADE). THE TOP OF THE CAP MUST BE A MINIMUM OF 18 INCHES (457 MM) BELOW COMBUSTIBLE MATERIAL, SUCH AS A DECK. THE SIDE OF THE CAP MUST BE A MINIMUM OF 6 INCHES (152 MM) AWAY FROM A PARALLEL OUTSIDE WALL. VENTING TERMINALS SHALL NOT BE RECESSED INTO A WALL OR SIDING. SEE THE DIAGRAM FOR VENT TERMINATION CLEARANCES.

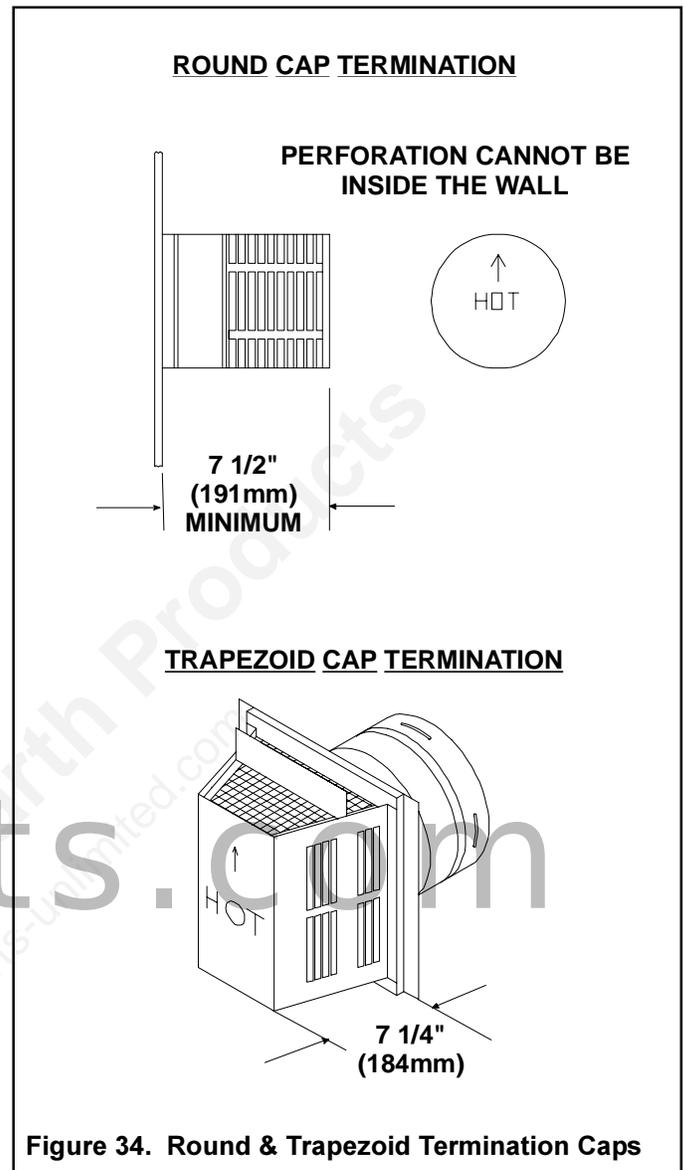

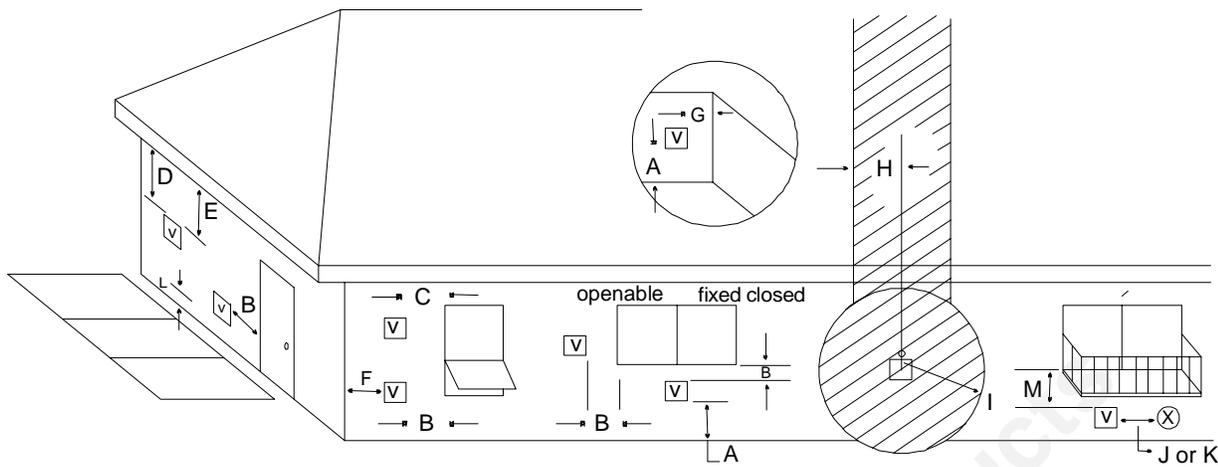

V = VENT TERMINAL
 X = AIR SUPPLY INLET
 = AREA WHERE TERMINAL IS NOT PERMITTED

- A = 12" clearances above grade, veranda, porch, deck or balcony
- B = 12" clearances to window or door that may be opened
- C = 9" (U.S.A.)
12" (Canada) clearance to permanently closed window.
- *D = 18" vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (60 cm) from the center-line of the terminal
- *E = 18" clearance to unventilated soffit
- F = 9" clearance to outside corner
- G = 6" clearance to inside corner
- H = 3 ft. (Canada) not to be installed above a gas meter/regulator assembly within 3 feet (90cm) horizontally from the center-line of the regulator

- I = 3 ft. (U.S.A.)
6 ft. (Canada) clearance to service regulator vent outlet.
- J = 9" (U.S.A.)
12" (Canada) clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance
- K = 3 ft. (U.S.A.)
6 ft. (Canada) clearance to a mechanical air supply inlet
- **L = 7 ft. clearance above paved sidewalk or a paved driveway located on public property
- ***M = 18" clearance under veranda, porch, deck or balcony

* 30" minimum for vinyl clad soffits.

** a vent shall not terminate directly above a sidewalk or paved driveway which is located between two single family dwellings and serves both dwellings.

*** only permitted if veranda, porch, deck or balcony is fully open on a minimum of 2 sides beneath the floor.

NOTE: Local codes or regulations may require different clearances.

Figure 35. Vent Termination Minimum Clearances

CAUTION: IF INSTALLING UNITS SL-550TRS, SL-750TRS OR SL-950TR, AND EXTERIOR WALLS ARE FINISHED WITH VINYL SIDING, IT IS NECESSARY TO INSTALL THE VINYL PROTECTOR KIT TO THE TOP OF THE EXTERIOR FIRESTOP (FOR ALL ROUND TERMINATION CAPS). IT IS STRONGLY RECOMMENDED WHENEVER POSSIBLE TO USE THE VINYL PROTECTOR KIT.

For Vertical Terminations - To locate the vent and install the vent sections:


- Locate and mark the vent centerpoint on the underside of the roof, and drive a nail through the centerpoint.
- Make the outline of the roof hole around the centerpoint nail.
- The size of the roof hole framing dimensions depend on the pitch of the roof. There **MUST BE** a 1-inch (25.4mm) clearance from the vertical vent pipe to combustible materials.
- Mark the roof hole accordingly.
- Cover the opening of the installed vent pipes.
- Cut and frame the roof hole.
- Use framing lumber the same size as the roof rafters and install the frame securely. Flashing anchored to the frame must withstand heavy winds.
- Continue to install concentric vent sections up through the roof hole and up past the roof line until you reach the appropriate distance above the roof.

To seal the roof hole, and to divert rain and snow from the vent system:

- Attach a flashing to the roof using nails, and use a non-hardening mastic around the edges of the flashing base where it meets the roof.
- Attach a storm collar over the flashing joint to form a water-tight seal. Place non-hardening mastic around the joint, between the storm collar and the vertical pipe.
- Slide the termination cap over the end of the vent pipe and rotate the pipe clockwise 1/4 turn.

WARNING: MAJOR U.S. BUILDING CODES SPECIFY MINIMUM CHIMNEY AND/OR VENT HEIGHT ABOVE THE ROOF TOP. THESE MINIMUM HEIGHTS ARE NECESSARY IN THE INTEREST OF SAFETY. SEE THE FOLLOWING DIAGRAM FOR MINIMUM HEIGHTS, PROVIDED THE TERMINATION CAP IS AT LEAST TWO (2) FEET FROM A VERTICAL WALL AND 2-FEET BELOW A HORIZONTAL OVERHANG.

NOTE: This also pertains to vertical vent systems installed on the outside of the building.

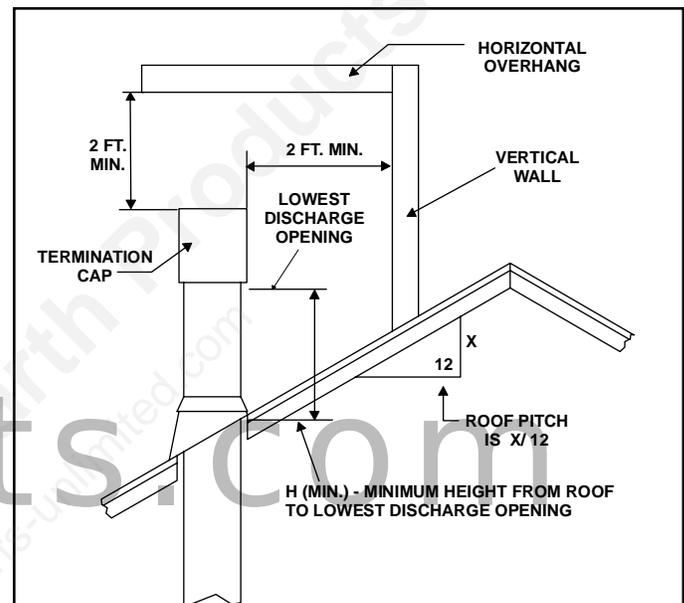


Roof Pitch	H (min.) ft.
flat to 6/12	1.0
6/12 to 7/12	1.25
over 7/12 to 8/12	1.5
over 8/12 to 9/12	2.0
over 9/12 to 10/12	2.5
over 10/12 to 11/12	3.25
over 11/12 to 12/12	4.0
over 12/12 to 14/12	5.0
over 14/12 to 16/12	6.0
over 16/12 to 18/12	7.0
over 18/12 to 20/12	7.5
over 20/12 to 21/12	8.0

Figure 36. Minimum Height from Roof to Lowest Discharge Opening

Step 4. Positioning, Leveling, and Securing the Fireplace

The diagram below shows how to properly position, level, and secure the fireplace.

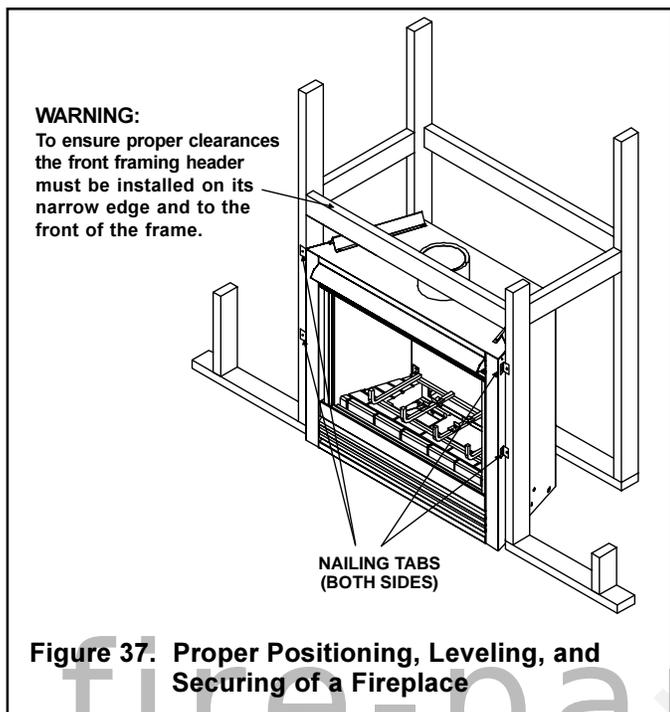

- Place the fireplace into position.
- Level the fireplace from side to side and from front to back.
- Shim the fireplace with non-combustible material, such as sheet metal, as necessary.
- Secure the fireplace to the framing using nails or screws through the nailing tabs.

Step 5. The Gas Control Systems



WARNING: THIS UNIT IS NOT FOR USE WITH SOLID FUEL.


Two types of gas control systems are used with this model: *Standing Pilot Ignition* and *Direct Spark Ignition (DSI)*. Model SL-750TRS and SL-550TRS have Standing Pilot Ignition only.

Standing Pilot Ignition System

This system includes millivolt control valve, standing pilot, thermopile/thermocouple flame sensor, and piezo ignitor.



WARNING: 110-120 VAC MUST NEVER BE CONNECTED TO A CONTROL VALVE IN A MILLIVOLT SYSTEM.

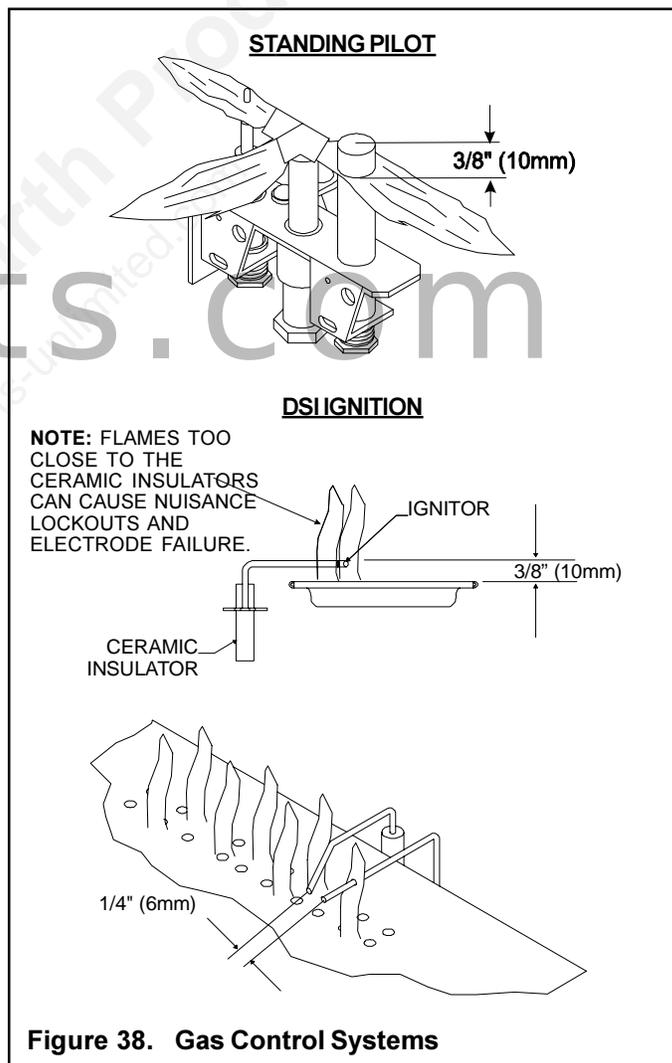

Direct Spark Ignition (DSI) System

This system includes a 120 VAC control valve, electronic module and spark ignitor/flame sensor.



WARNING: CONTINUOUS 110-120 VAC SERVICE MUST BE WIRED DIRECTLY TO THE FIREPLACE JUNCTION BOX IN A DSI SYSTEM.

Step 6. The Gas Supply Line

NOTE: Have the gas supply line installed in accordance with local building codes by a qualified installer approved and/or licensed as required by the locality.

NOTE: Before the first firing of the fireplace, the gas supply line should be purged of any trapped air.

NOTE: Consult local building codes to properly size the gas supply line leading to the 1/2 inch (13mm) hook-up at the unit.

This gas fireplace is designed to accept a 1/2 inch (13mm) gas supply line. To install the gas supply line:

- A listed (and State of Massachusetts approved) 1/2 inch (13mm) tee-handle manual shut-off valve and a listed flexible gas connector are connected to the 1/2 inch (13mm) inlet of the control valve. **NOTE:** If substituting for these components, please consult local codes for compliance.
- Locate the gas line access hole in the outer casing of the fireplace.
- The gas line may be run from either side of the fireplace provided the hole in the outer wrap does not exceed 2" in diameter and it does not penetrate the actual firebox.
- Open the fireplace lower grille, insert the gas supply line through the gas line hole, and connect it to the shut-off valve.
- When attaching the pipe, support the control so that the lines are not bent or torn.
- After the gas line installation is complete, use a soap solution to carefully check all gas connections for leaks.



WARNING: DO NOT USE AN OPEN FLAME TO CHECK FOR GAS LEAKS.

- Insert insulation from the outside of the fireplace and pack the insulation tightly to totally seal between the pipe and the outer casing.
- At the gas line access hole the gap between the supply piping and gas access hole can be plugged with non-combustible insulation to prevent cold air infiltration.

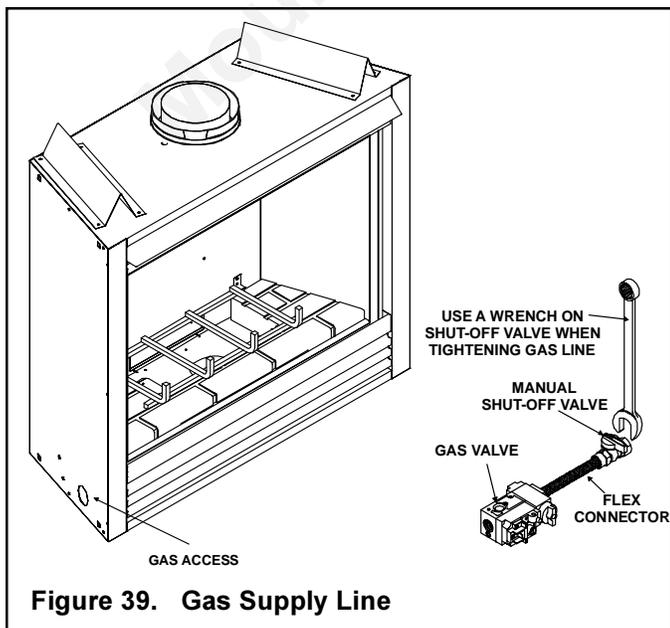


Figure 39. Gas Supply Line

Step 7. Gas Pressure Requirements

Pressure requirements for Heat-N-Glo gas fireplaces are shown in the table below.

Pressure	Natural Gas	Propane
Minimum Inlet Pressure	5.0 inches w.c.	11.0 inches w.c.
Maximum Inlet Gas Pressure	14.0 inches w.c.	14.0 inches w.c.
Manifold Pressure	3.5 inches w.c.	10.0 inches w.c.

A one-eighth (1/8) inch (3 mm) N.P.T. plugged tapping is provided on the inlet and outlet side of the gas control for a test gauge connection to measure the manifold pressure. Use a small flat blade screwdriver to crack open the screw in the center of the tap. Position a rubber hose over the tap to obtain the pressure reading.

The fireplace and its individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of the system at test pressures in excess of one-half (1/2) psig (3.5 kPa).

The fireplace must be isolated from the gas supply piping system by closing its individual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than one-half (1/2) psig (3.5 kPa).

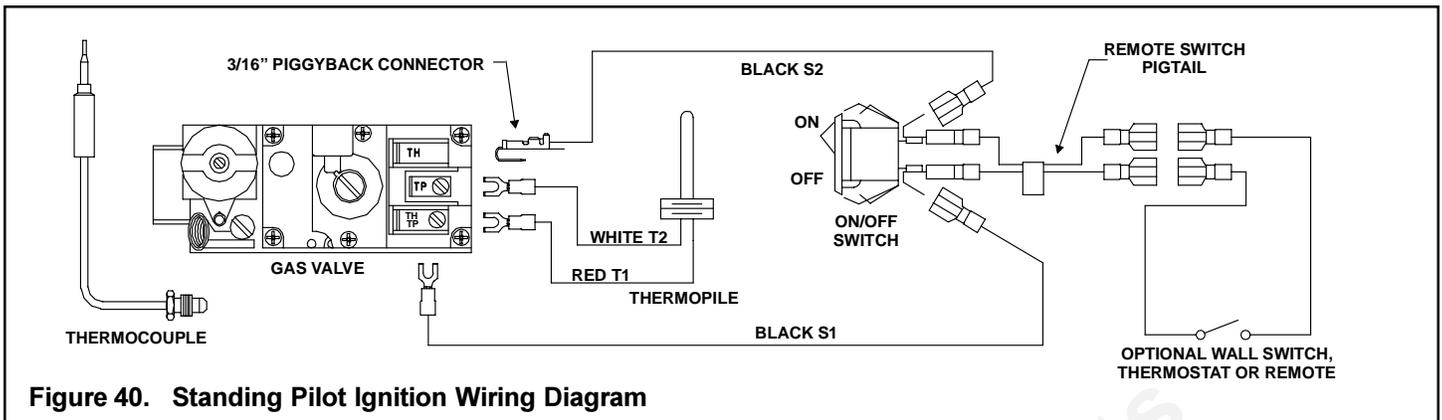


Figure 40. Standing Pilot Ignition Wiring Diagram

Step 8. Wiring the Fireplace

NOTE: Electrical wiring must be installed by a licensed electrician.

CAUTION: DISCONNECT REMOTE CONTROLS IF ABSENT FOR EXTENDED TIME PERIODS. THIS WILL PREVENT ACCIDENTAL FIREPLACE OPERATION.

For Standing Pilot Ignition Wiring

Appliance Requirements

- This appliance **DOES NOT** require 110-120 VAC to operate.



WARNING: DO NOT CONNECT 110-120 VAC TO THE GAS CONTROL VALVE OR REMOTE WALL SWITCH OR THE APPLIANCE WILL MALFUNCTION AND THE VALVE WILL BE DESTROYED.

Optional Accessories

Optional fan and remote control kits require that 110-120 VAC be wired to the factory installed junction box before the fireplace is permanently installed.

Remote Wall Switch

Position the remote wall switch in the desired position on a wall. Run a maximum of 25 feet (7.8 m) or less length of 18 A.W.G. minimum wire and connect it to the fireplace ON/OFF switch pigtails.

CAUTION: LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING.


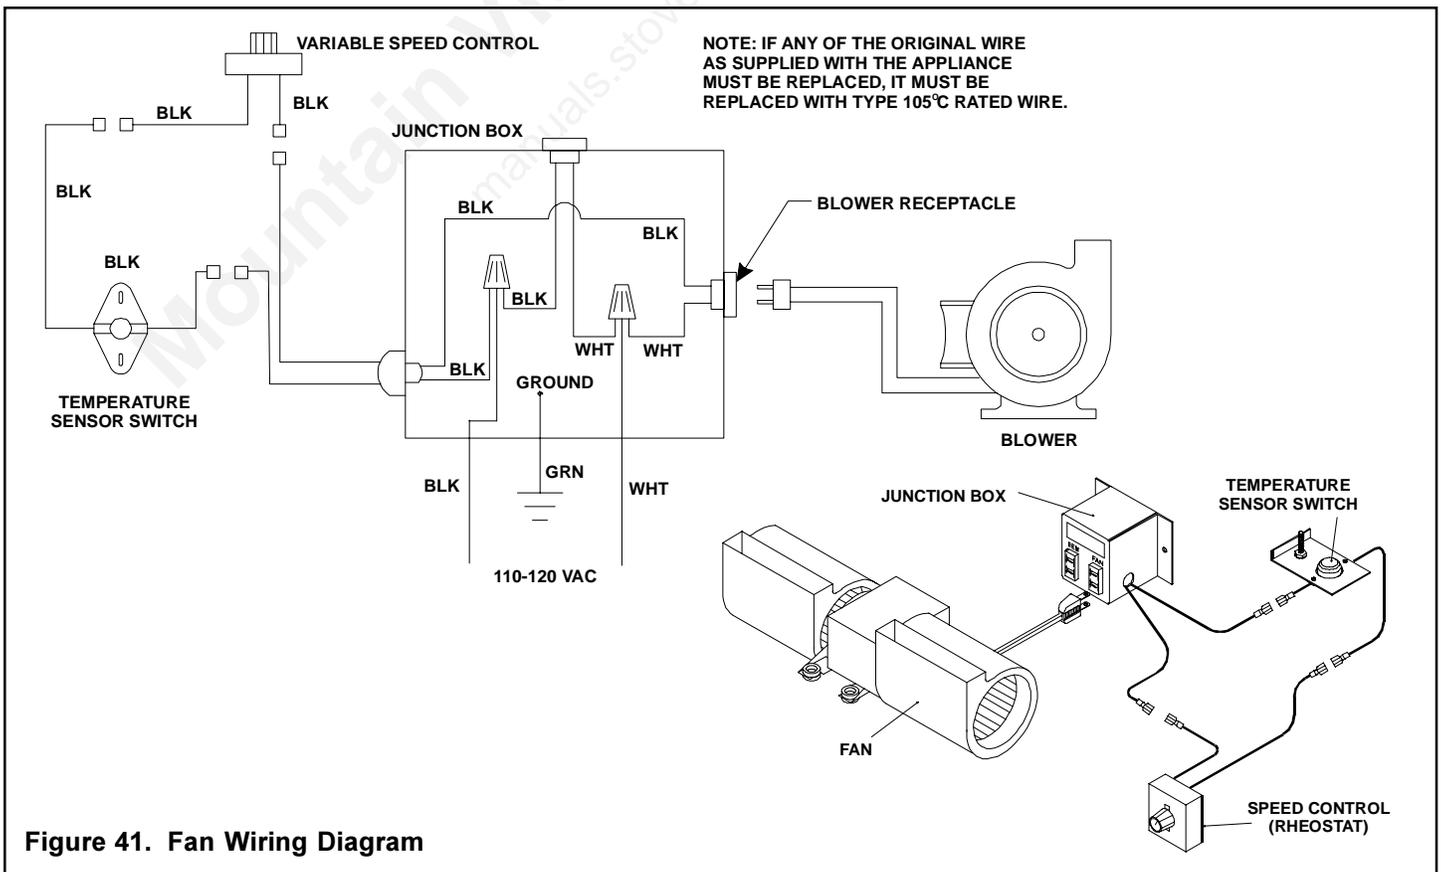


Figure 41. Fan Wiring Diagram

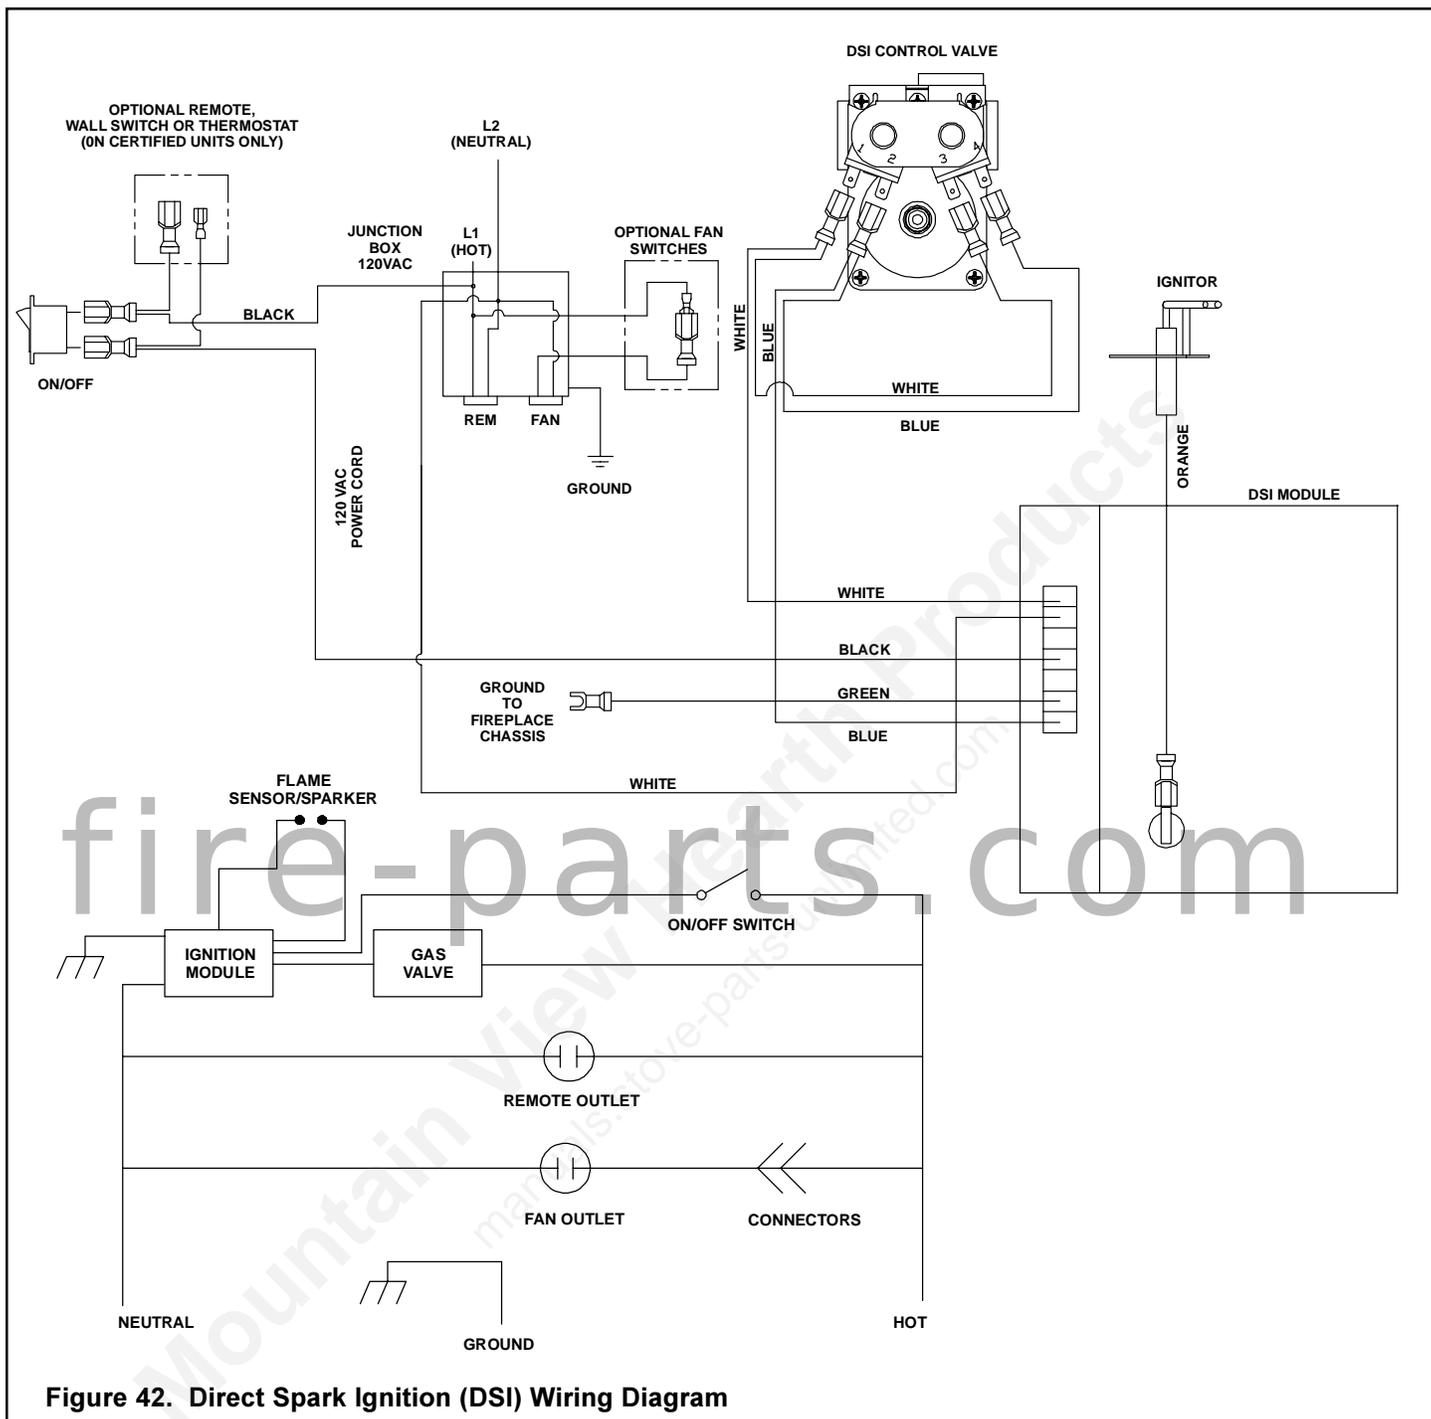

For Direct Spark Ignition (DSI) Wiring

Appliance Requirements

This appliance requires that 110-120 VAC be wired to the junction box included in the manual bag assembly. Maintain correct polarity when wiring the junction box.

The junction box is installed by sliding one tab of the box through the slot on the lower right side of the outer wrap and driving a screw through the other tab into the pilot hole on the outer wrap.

Optional Accessories

Optional fan and remote control kits require that 110-120 VAC be wired to the fireplace junction box.

Remote Wall Switch

Position the remote wall switch in the desired position on a wall. Run 16 A.W.G. minimum Romex wire and connect it to the fireplace ON/OFF switch pigtailed.

CAUTION: LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING.


Step 9. Finishing

Figure 43 shows the minimum vertical and corresponding maximum horizontal dimensions of fireplace mantels or other combustible projections above the top front edge of the fireplace. See Figures 4 and 5 for other fireplace clearances.


Only non-combustible materials may be used to cover the black fireplace front.



WARNING: WHEN FINISHING THE FIREPLACE, NEVER OBSTRUCT OR MODIFY THE AIR INLET/OUTLET GRILLES IN ANY MANNER.

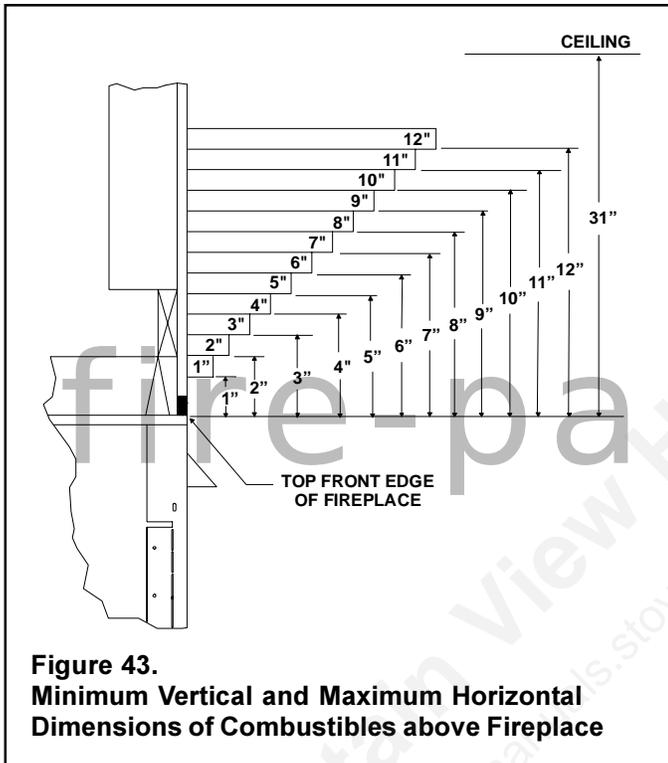

CAUTION: IF JOINTS BETWEEN THE FINISHED WALLS AND THE FIREPLACE SURROUND (TOP AND SIDES) ARE SEALED, A 300° F. MINIMUM SEALANT MATERIAL MUST BE USED. THESE JOINTS ARE NOT REQUIRED TO BE SEALED. ONLY NON-COMBUSTIBLE MATERIAL (USING 300° F. MINIMUM ADHESIVE, IF NEEDED) CAN BE APPLIED AS FACING TO THE FIREPLACE SURROUND. SEE THE DIAGRAM BELOW.

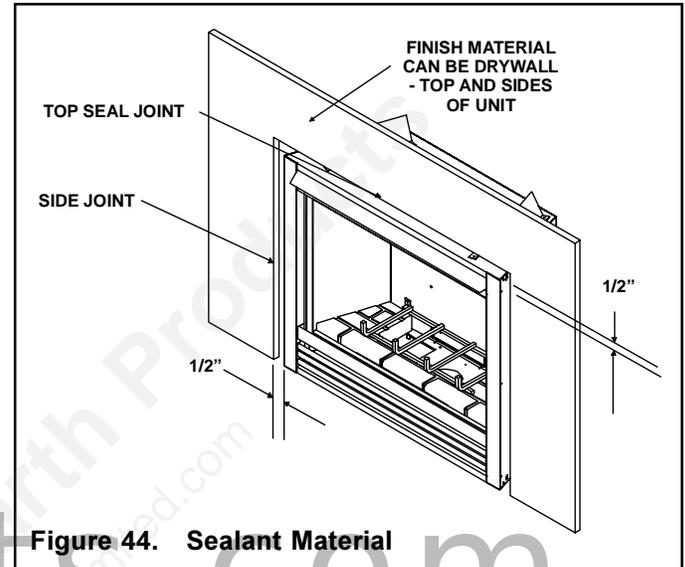

Hearth Extensions

A hearth extension may be desirable for aesthetic reasons. However, ANSI or CAN/CGA testing standards **do not** require hearth extensions for gas fireplace appliances.

Step 10. Installing Trim, Logs and Ember Material, and Removing Shipping Support

Installing the Trim

Combustible materials may be brought up to the specified clearances on the side and top front edges of the fireplace, but **MUST NEVER** overlap onto the front face. The joints between the finished wall and the fireplace top and sides can only be sealed with a 300° F. (149° C) minimum sealant.



WARNING: WHEN FINISHING THE FIREPLACE, NEVER OBSTRUCT OR MODIFY THE AIR INLET/OUTLET GRILLES IN ANY MANNER.

Install optional marble and brass trim surround kits as desired. Marble, brass, brick, tile, or other non-combustible materials can be used to cover up the gap between the sheet rock and the fireplace.

Do not obstruct or modify the air inlet/outlet grilles. When overlapping on both sides, leave enough space so that the bottom grille can be opened and the trim door removed.

Removing Grate Shipping Support

- Remove the log pack and hood, if applicable.
- Bend top retaining tab of grate shipping support into vertical position (see Figure 45).
- Lift grate slightly upward with one hand so that the grate clears the support.
- Slide shipping support to side, remove and discard.
- Lower grate onto refractory.

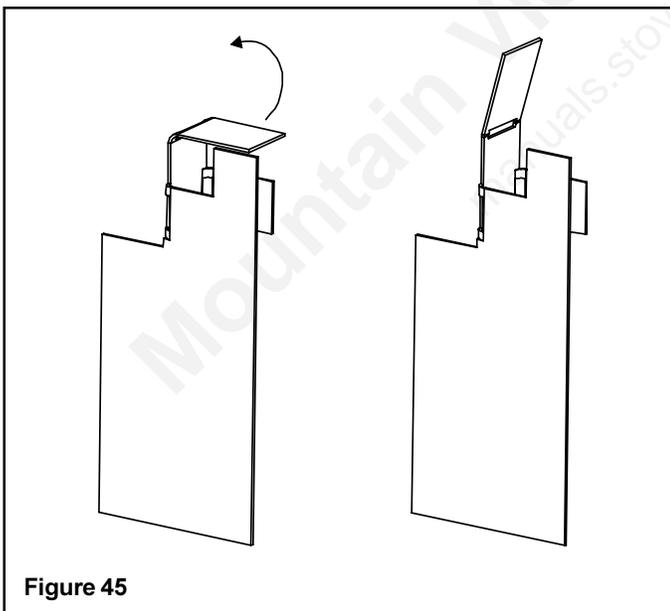


Figure 45

Positioning the Logs

If the gas logs have been factory installed they should not need to be positioned. If the logs have been packaged separately, refer to the instructions that accompany the logs. **Save the log instructions with this manual.**

If sooting occurs, the logs might need to be repositioned slightly to avoid excessive flame impingement.

Placing the Ember Material

Ember material is shipped with this gas fireplace. The bag labeled Golden Ember (GE-93) is flame colorant material. The bag labeled Glowing Ember (050-721) is standard glowing ember material. To place the ember material:

- Remove the top louver by lifting it up and away from the unit.
- Unlatch the latches at the top and bottom of the glass door.
- Remove the glass door from the unit (see Figure 46).
- Place dime size pieces of ember material about 1/2 inch apart near port holes in burner top. Do NOT press embers into burner ports. Cover the top of the burner with a single layer of ember material. Then sprinkle GE-93 on top of the burner. For best performance do NOT place embers on the ports at the rear of the burner (see Figure 47).
- Save the remaining ember materials for use during fireplace servicing. The bag of embers provided is sufficient for 3 to 5 applications.
- Reinstall and latch the glass door and top louver on the unit.

CAUTION: THE GLASS DOOR MUST BE SECURELY LATCHED BEFORE OPERATING THE UNIT.

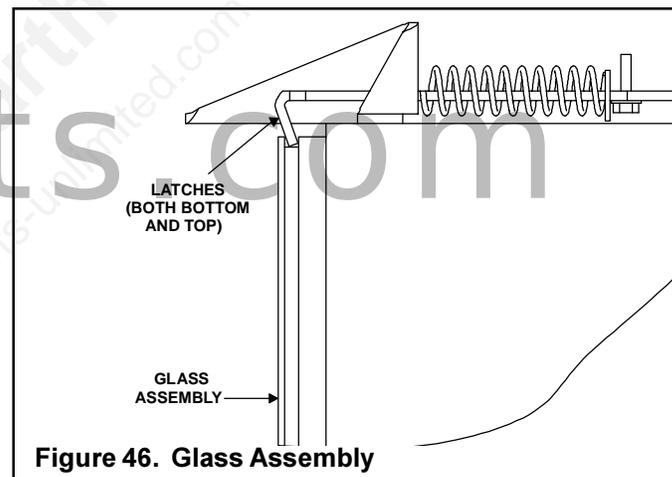


Figure 46. Glass Assembly

GLASS SPECIFICATIONS:

SL-950TR	26 5/8 x 42 3/8	TEMPERED
SL-750TR	24 5/8 x 35 3/8	TEMPERED
SL-750TRS	24 5/8 x 35 3/8	CERAMIC
SL-550TR	21 1/8 x 30 3/8	TEMPERED
SL-550TRS	21 1/8 x 30 3/8	CERAMIC

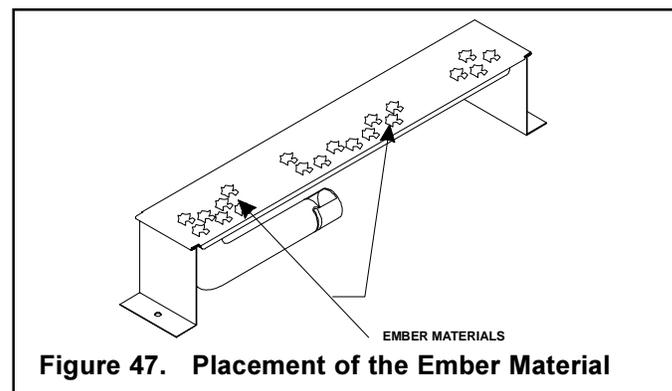


Figure 47. Placement of the Ember Material

CAUTION: IT IS STRONGLY RECOMMENDED THAT TRIM DOORS WITH OPTIONAL MESH SCREENS BE INSTALLED ON PROPANE MODELS.

Step 11. Before Lighting the Fireplace

Before lighting the fireplace, be sure to do the following:

Remove all paperwork from underneath the fireplace.

Review safety warnings and cautions

- Read the **Safety and Warning Information** section at the beginning of this *Installers Guide*.

Double-check for gas leaks

- Before lighting the fireplace, double-check the unit for possible gas leaks.

Double-check vent terminations and front grilles for obstructions.

- Before lighting the fireplace, double-check the unit for possible obstructions that could be blocking the vent terminations or the front grilles.

Double-check that the grate shipping support was removed (see Step 10).

- Make sure that the grate is resting directly on the refractory.

Double-check for faulty components

- Any component that is found to be faulty **MUST BE** replaced with an approved component. Tampering with the fireplace components is **DANGEROUS** and voids all warranties.

A small amount of air will be in the gas supply lines. When first lighting the fireplace, it will take a few minutes for the lines to purge themselves of this air. Once the purging is complete, the fireplace will light and will operate normally.

Subsequent lightings of the fireplace will not require this purging of air from the gas supply lines, **unless the gas valve has been turned to the OFF position**, in which case the air would have to be purged.

NOTE: The fireplace should be run for 8 hours on the initial start-up. This will help to cure the chemicals used in the paint and logs.

Step 12. Lighting the Fireplace

You've reviewed all safety warnings, you've checked the fireplace for gas leaks, you know the vent system is unobstructed, and you've checked for faulty components. Now you're ready to light the fireplace.



WARNING: PLEASE REFER TO THE USER'S MANUAL FOR ALL CAUTIONS, SAFETY, AND WARNING INFORMATION PERTAINING TO THE LIGHTING AND OPERATION OF THE FIREPLACE.

After the Installation



LEAVE THIS INSTALLATION MANUAL WITH THE APPLIANCE FOR FUTURE REFERENCE.

4

Maintaining and Servicing Your Fireplace

Fireplace Maintenance

Although the frequency of your fireplace servicing and maintenance will depend on use and the type of installation, you should have a qualified service technician perform an appliance check-up at the beginning of each heating season. See the table below for specific guidelines regarding each fireplace maintenance task.

IMPORTANT: TURN OFF THE GAS BEFORE SERVICING YOUR FIREPLACE.

Replacing old ember material

Frequency: Once annually, during the checkup.

By: Qualified service technician.

Task: Brush away loose ember material near the burner. Replace old ember material with new dime-size and shape pieces of Golden Ember (DE-93) and Glowing Ember (050-721). New ember material should be placed alternately on top of the burner - a layer of Golden Ember, a layer of Glowing Ember, and so on. Save the remaining ember material and repeat this procedure at your next servicing. For more information, see **Placing Ember Material**.

Cleaning Burner and Controls

Frequency: Once annually.

By: Qualified service technician.

Task: Brush or vacuum the control compartment, fireplace logs and burner areas surrounding the logs.

Checking Flame Patterns, Flame Height

Frequency: Periodically.

By: Qualified service technician/Home owner.

Task: Make a visual check of your fireplace's flame patterns. Make sure the flames are steady - not lifting or floating. See Figure 48. The flame sensor (DSI) or thermopile/thermocouple (standing pilot) tips should be covered with flame. See Figure 38.

Checking Vent System

Frequency: Before initial use and at least annually thereafter, more frequently if possible.

By: Qualified service technician/Home owner.

Task: Inspect the external vent cap on a regular basis to ensure that no debris is interfering with the flow of air. Inspect entire vent system for proper function.

Cleaning Glass Door

Frequency: As necessary

By: Home owner.

Task: Clean as necessary, particularly after adding new ember (flame colorant) material. Film deposits on the inside of the glass door should be cleaned off using a household glass cleaner. **NOTE: DO NOT handle or attempt to clean the door when it is hot and DO NOT use abrasive cleaners.**

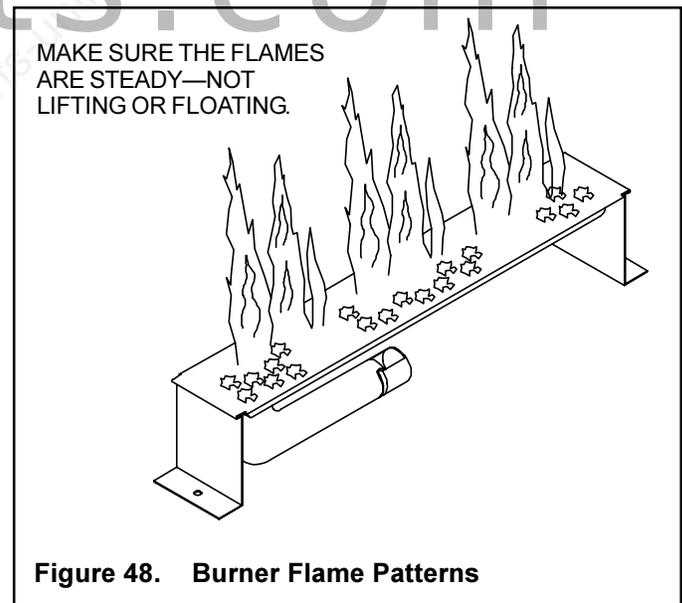


Figure 48. Burner Flame Patterns