

Log Set Assembly: LOGS-750TRS-E

Model: SL-750TRS-IPI-D, SL-750TRS-IPI-E
SL-750TRSFHHIPI

LOG PLACEMENT INSTRUCTIONS

STEP 1.

CAUTION: Logs are fragile, handle with care. Carefully remove the logs from the packaging.



Figure 1.

STEP 2.

LOG #1 (SRV2117-701) Place log #1 on left flat side of the burner assembly. Pull the log forward and slide it to the right until the notches under the log are in the burner grooves.


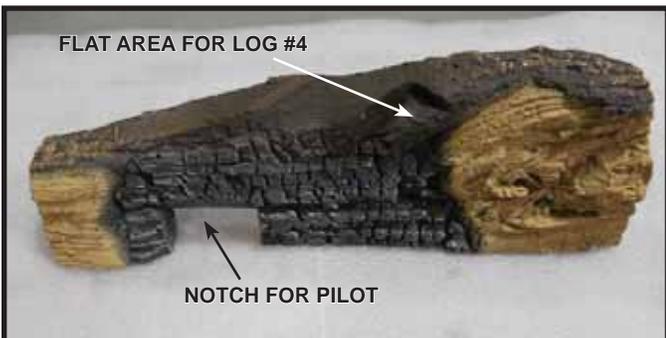


Figure 2.

STEP 3.

LOG #2 (SRV2120-702) Place log #2 on the grate bar and push it back against refractory. The pilot should be centered within the large notch on log #2.

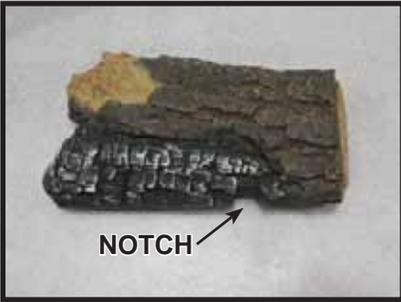

STEP 4.

LOG #3 (SRV2120-703) Place log #3 on right flat side of burner assembly. The notch on the log should fit over the bar on the far right side of the grate. Push the log back against the grate tab.

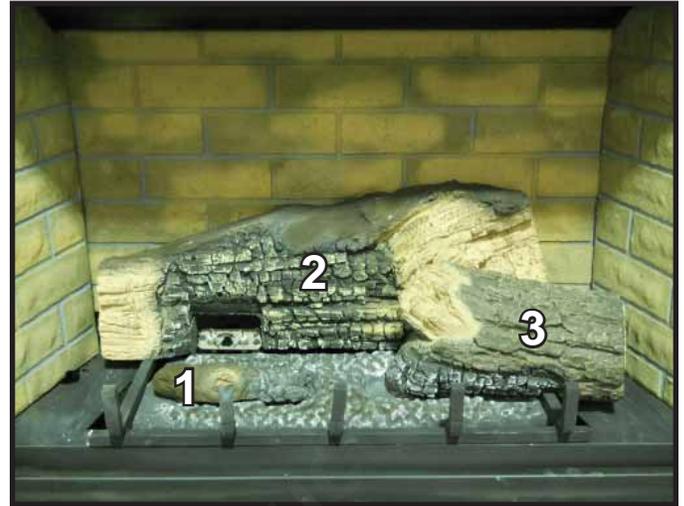


Figure 3.



STEP 5.

LOG #4 (SRV2120-704) Place log #4 so that the right end sits in the notch or flat spot of log #2. The left end of the log will sit on the left grate tine and also contact the vertical portion of the grate tine as shown in Figure 4. The "burned" part of the log should be pointed downward.

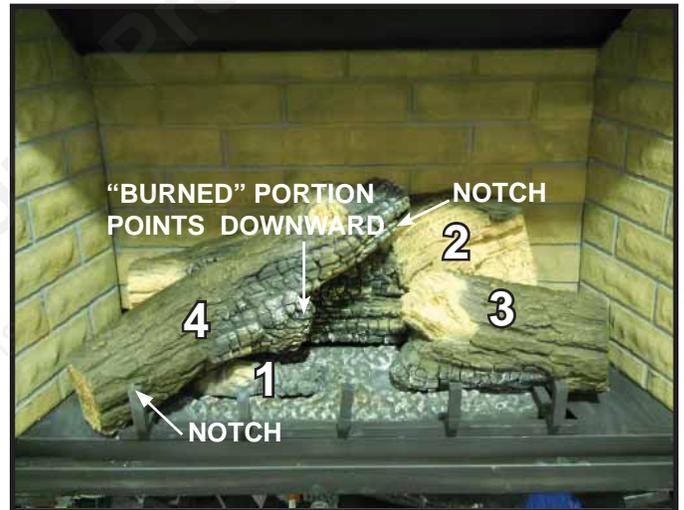


Figure 4.



STEP 6.

LOG #5 (SRV2117-705) Place log #5 on log #2. Log #5 will mate with the flat areas located on the top side of Log #4. See Figure 5.

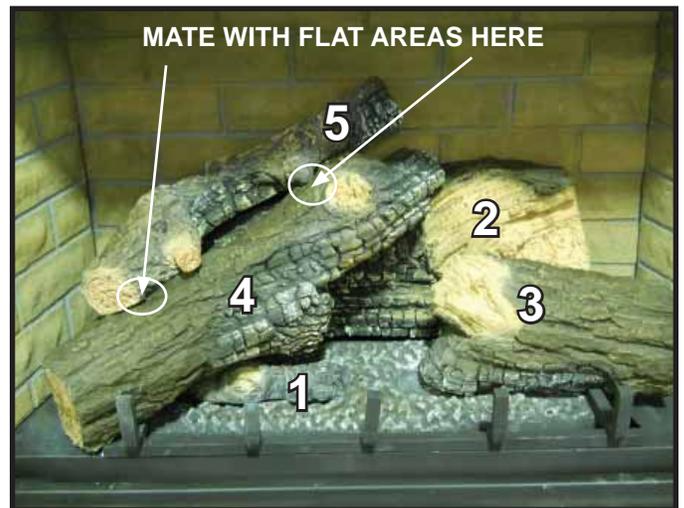


Figure 5.