

Model: 8000TRC

LOG PLACEMENT INSTRUCTIONS

Remove glass door.

CAUTION: Logs are fragile! Use care when handling.

LOG #1: (SRV582-701)

Place log #1 on the grate as shown in photo. The logs should be pushed against the tabs on the grate




LOG #2: (SRV582-703)

Place log #2 as shown in photo. The gap between log #1 and log #2 should be approximately one inch. The center bar of the grate should be visible.




LOG #3: (SRV582-702)

Place log #3 as shown in picture. A one inch gap should be present between log #3 and log #1. The center bar of the grate should be visible.

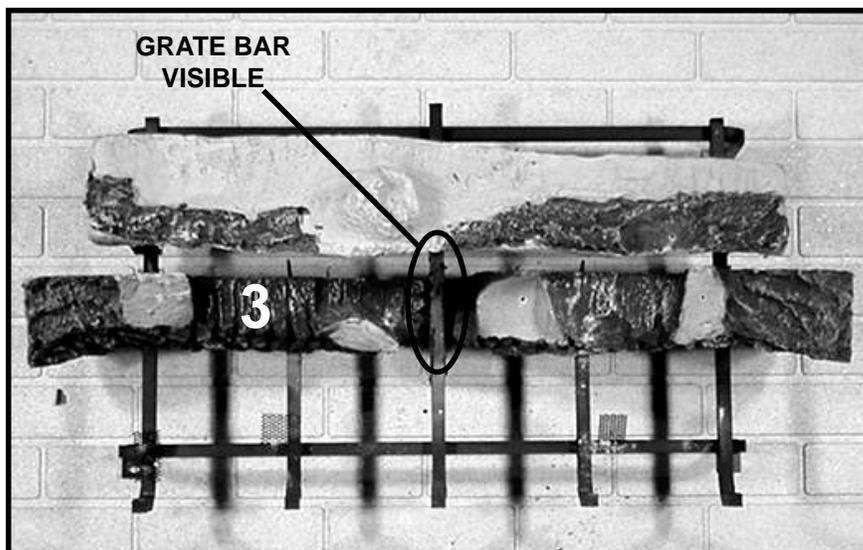


LOG #4: (SRV582-704)

The front of log #4 should contact the curled prong of the grate as shown in photo. The one inch gap between logs should be maintained.

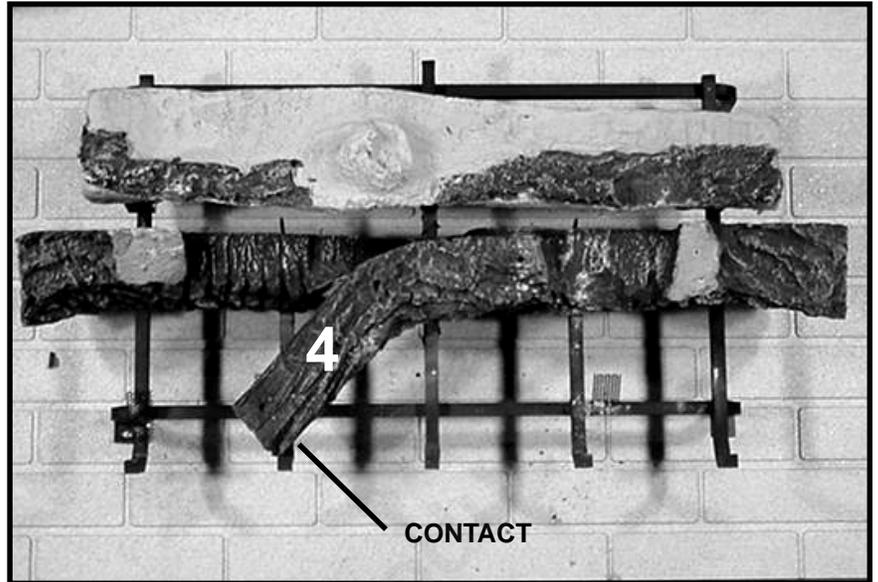


LOG #5: (SRV402-701)

The front of log #5 should be positioned between the two grate bars as shown in photo. The rear of log #5 should rest on log #1.

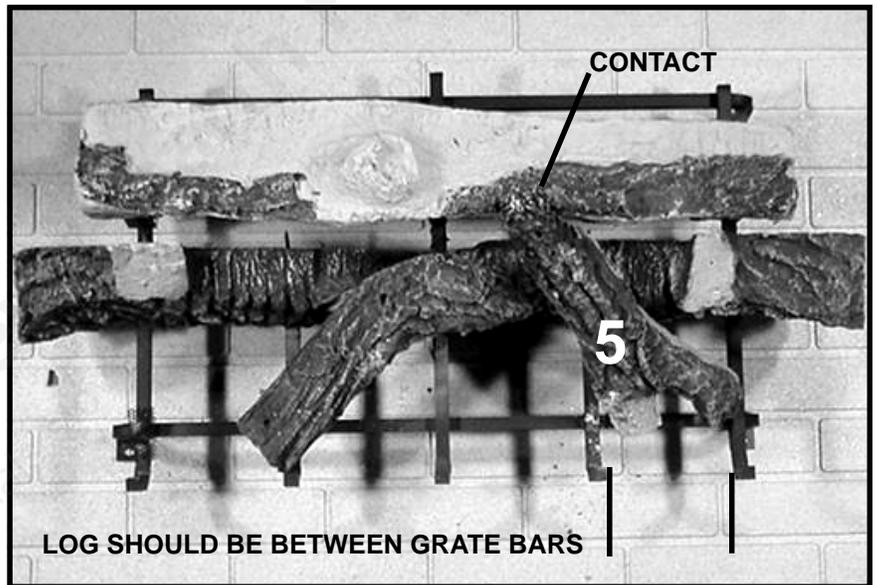


LOG #6: (SRV582-706)

The front of log #6 should be even with the side grate bar as shown in photo. It should rest on log #2 and log #1.

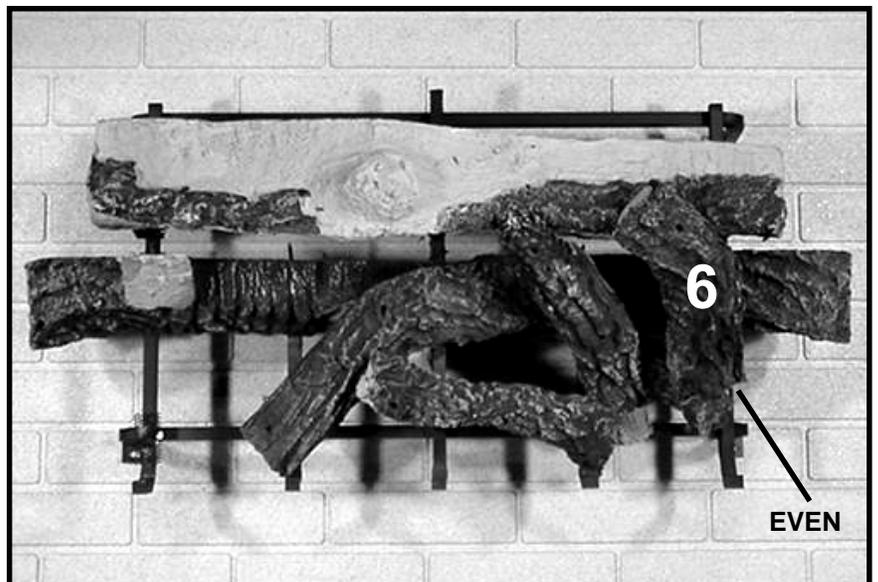

LOG #7: (SRV582-707)

Place log #7 as shown in photo. The right end of the log should rest on the grate bar. The left side of the log should rest on log #4.

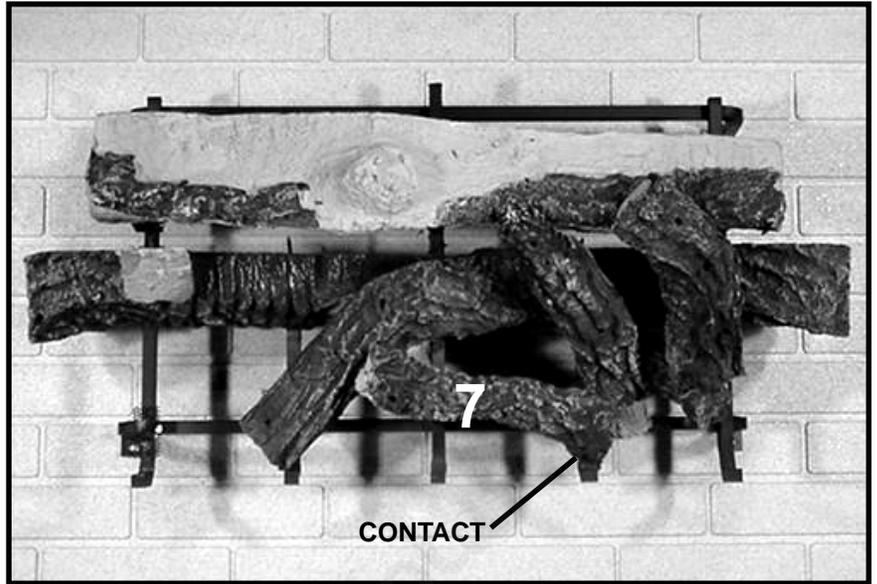

LOG #8: (SRV582-705)

Place log #8 as shown in photo. It should rest on log #1 and contact the curled prong of the grate.

