


LOG PLACEMENT INSTRUCTIONS AT-GRAND


NOTE: Remove any cardboard, and the plastic strip that secures the grate during shipment. Make sure the grate is centered left to right.

1. Place log #1 on the grate and against the back wall of the unit. Push the log to the left until it contacts the clip welded to the grate.
Log#1: SRV 530-711



Top View

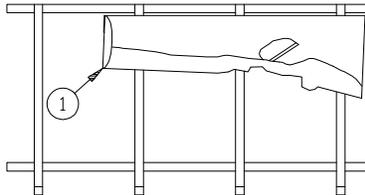



Front View

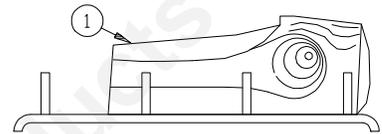



2. Place logs #2 and #3 on the grate so they are pointed toward each other and pushed against the tabs on grate.
Log #2: SRV 446-702
Log #3: SRV 446-703

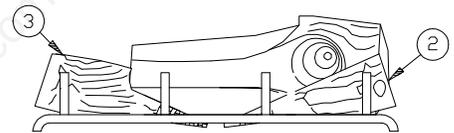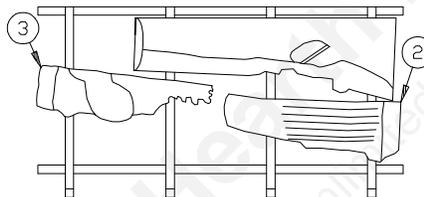

3. Place the notch in the end of log #4 on the front left vertical bar of the grate and the other end across the slot of log #1. The slot is located to the left of the knothole on log #1.
Log #4: SRV 446-704

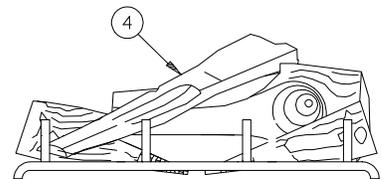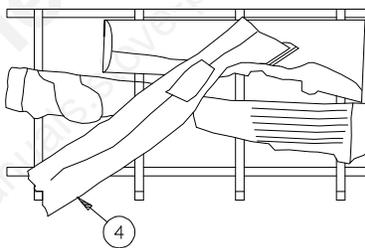

4. Hook the forked end of log #5 onto the front right vertical bar of the grate and lay the other end across the flat spot, on top of the charred area, of log #4.
Log #5: SRV 446-705

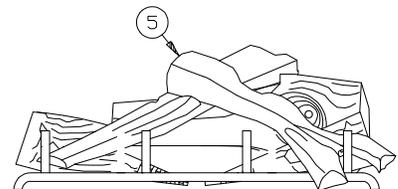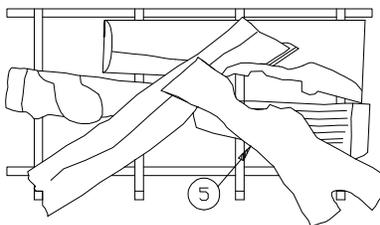

5. Lay log #6 across log #1 and the rear left bar of the grate. The burned end of the log should be up. Log #6 should be approximately 1/4" away from the back wall.
Log #6: SRV 446-706

