


# LOGS-CAMP



## Campfire Log Placement Instructions

1. Remove glass door.
2. Remove log set.
3. Unpack all logs. There should be six logs.



**CAUTION:** Logs are fragile! Use care when handling them.

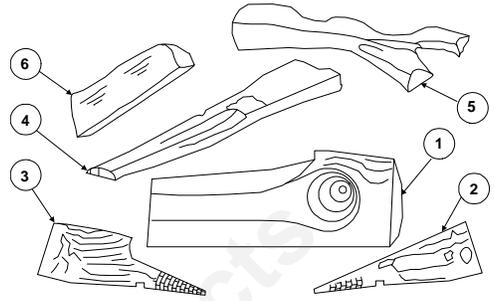



4. Place log #1 (SRV530-711) on the grate. The log should be pushed against the tabs on the grate.

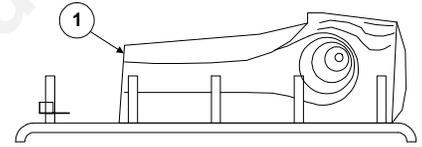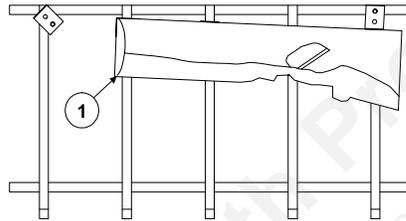



5. Place logs #2 (SRV446-702) and #3 (SRV446-703) on the grate so they are pointed toward each other and positioned over the center of the burner.

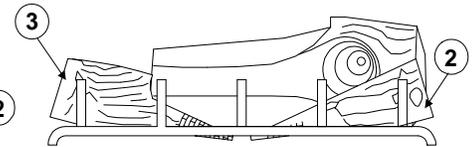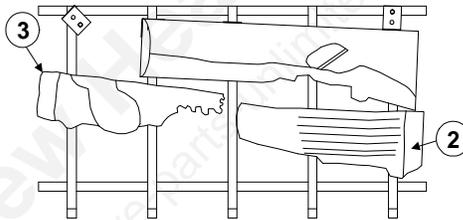



6. Place log #4 (SRV446-704) so the end with the groove is resting in the front left corner of the grate. The other end of the log rests in the groove across log #1.

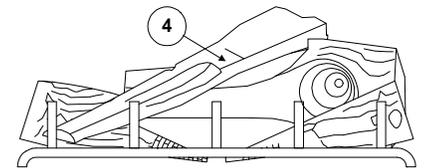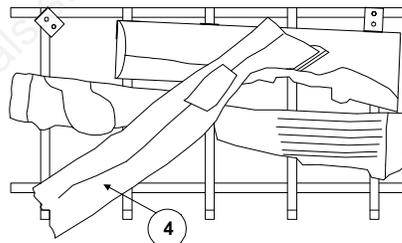

7. Place log #5 (SRV446-705) so the end with the Y shape is placed in the front right corner of the grate and rest it across log #4 on the flat dented surface.

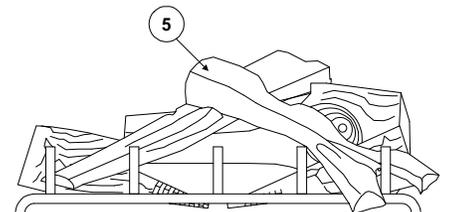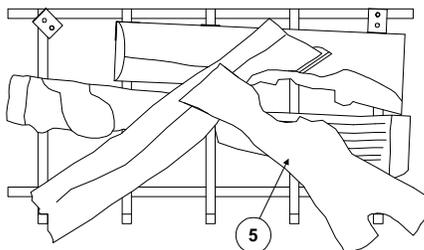

8. Place log #6 (SRV446-706) in the back left corner. There is a tab on the grate that one end rests on and a groove in log #4.

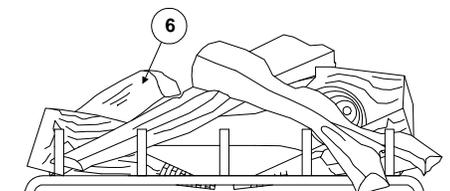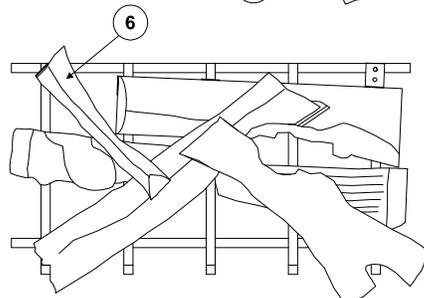

9. Replace glass and trim door.