
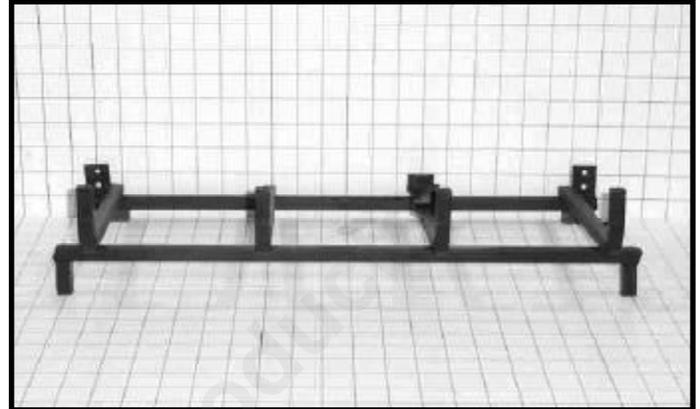




Log Assembly: LOGS-SL750

Models: SL-750TR-C, SL-750TRS-C, SL-750TV-C
SL-950TR-C, SL-950TV-C



LOG PLACEMENT INSTRUCTIONS

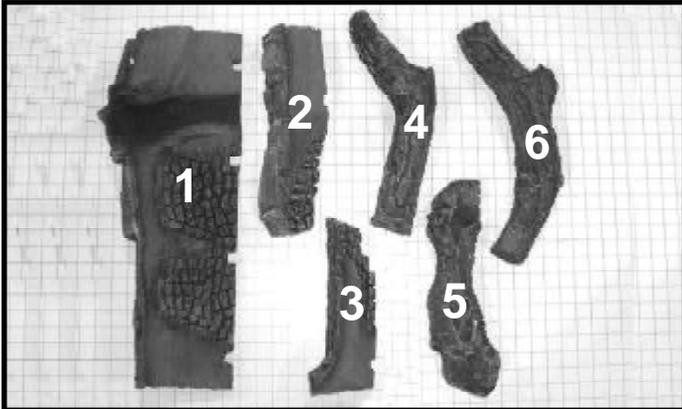



Carefully remove the logs from the packaging. **CAUTION:** Logs are fragile!

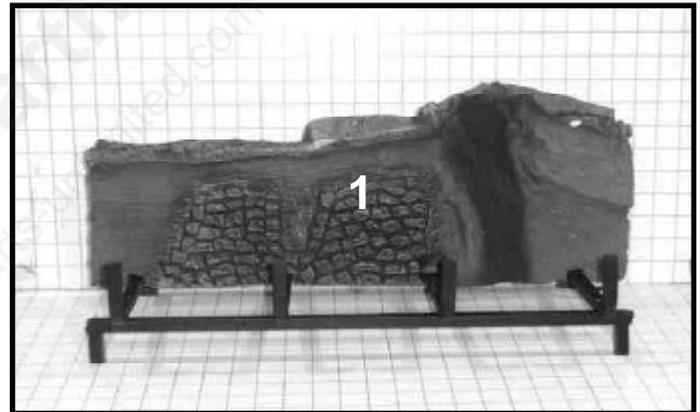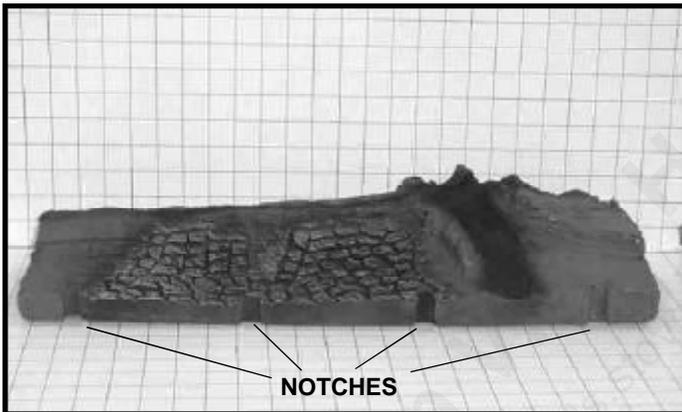



LOG #1 (SRV530-714): Place log #1 on the grate using the notches in the bottom of the log. Slide log #1 up to the front tabs for NG. Slide it back until top of log touches the back of the fireplace for LP.

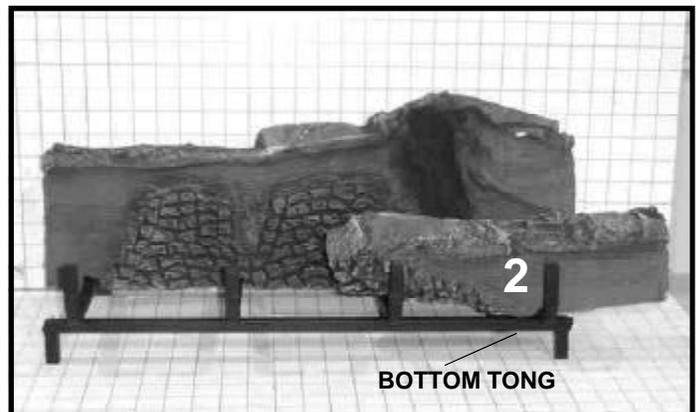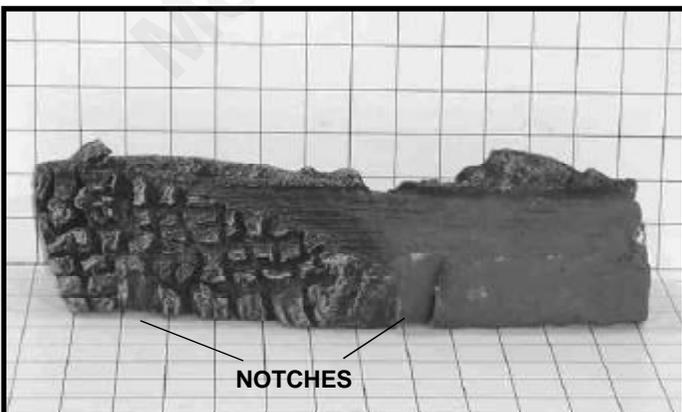



LOG #2 (SRV530-719): Place log #2 on the right two grate tongs using the notches in the bottom of the log. Slide the log backward until the back edge is in contact with the tab and parallel to log #1.

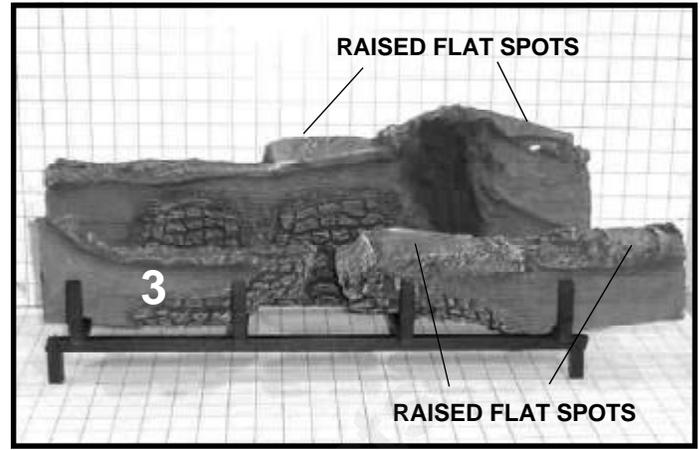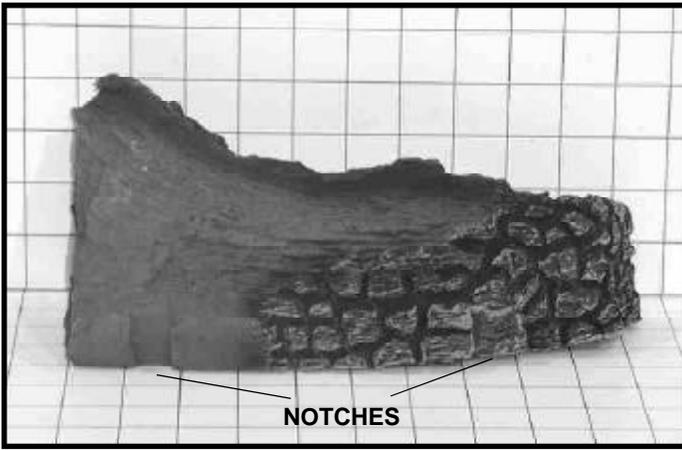



LOG #3 (SRV530-718): Place log #3 on the left two grate tongues using the notches in the bottom of the log. Position log parallel to log #1 and on the same line as log #2. Left edge of log should rest between tong of grate and second tab.

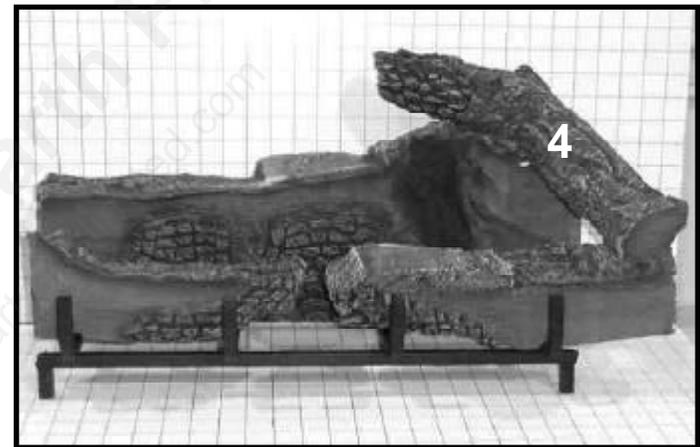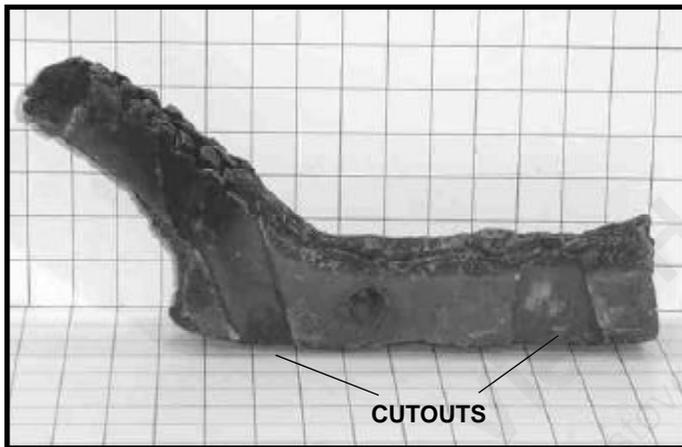

LOG #4 (SRV530-716): Place log #4 on top of log #1 and log #2 so that the cutouts on the bottom of log #4 fit on the raised flat spots of log #1 and log #2.

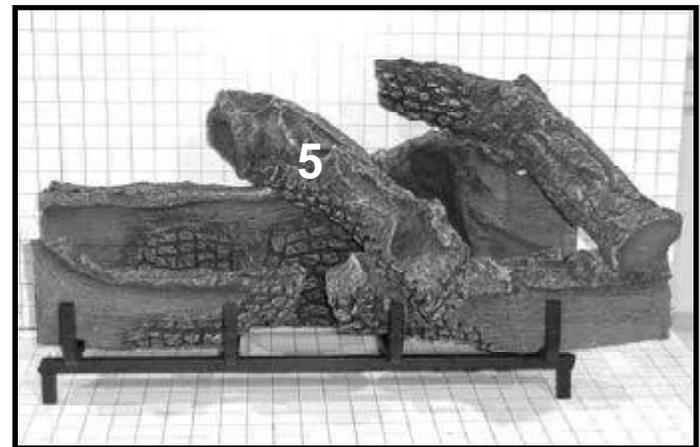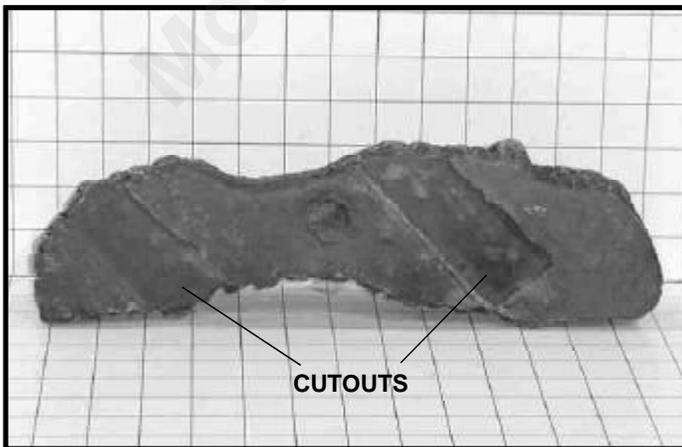

LOG #5 (SRV530-717): Place log #5 on top of log #1 and log #2 so that the cutouts on the bottom of log #5 fit onto the raised flat spots on log #1 and log #2.

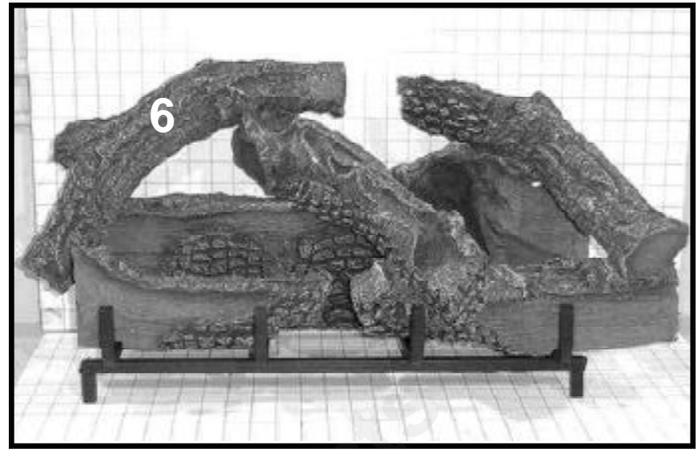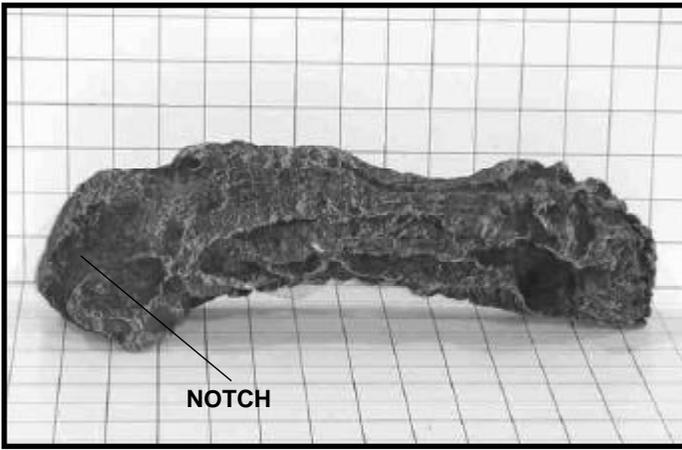

LOG #6 (SRV530-715): Place log #6 so that the right edge fits into the notch on log #5, the left edge rests on log #3, and the middle rests on log #1.

Mountain View Hearth Products
manuals.stove-parts-unlimited.com