

# Part #1-00-4041001 - Noise Kit - Instructions

## Models: TIARA II and TOPAZ



### Kit Contents:

- 32- #8-1/2" TEK Screws
- 1- Right Side Panel
- 1- Left Side Panel
- 1- Rear Panel

### Tools Needed:

- 1- Cordless Drill
- 1- 1/4" Nut Driver or Bit
- 1- Phillips Head Screwdriver

1. Using a Phillips Head Screwdriver, remove stove front and glass assembly




2. Remove all ceramic logs and refractory panels.



3. Remove the log bracket.



4. Install the right side panel into the firebox insuring the panel is tight against the firebox back and the bottom of the panel rests on top of the side burner brackets as shown below. Secure panel with (9) #8-1/2" Tek screws supplied in the kit. Repeat process for the left side.

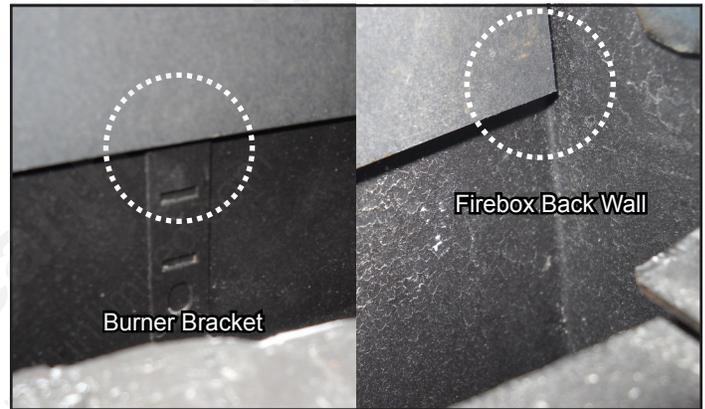

5. Install the rear panel in the back of the firebox insuring the panel is on top of the rear burner brackets. Leave about a 1/2" gap at the sides and top of the panel. Secure panel with (14) #8-1/2" Tek screws supplied in the kit.



7. Install the rear refractory panel in place if there was one supplied with the unit from factory.



8. Install log bracket.



8. Install the remaining refractory panels, log set, glass and front assembly.

