



Trim Kit

Installation Instruction Sheet

Models - VF32SB, VF32PB, VF36SB, VF36PB, VF42SB, VF42PB

To install optional Trim Kit follow the instructions below:

1. Before mounting the trim to the unit face, you must first attach the trim sides to the trim top using the (4) corner keys supplied in the parts bag. (A small flathead screwdriver will be needed for this assembly.) Slide the corner keys into the grooves on the back of the trim and tighten firmly. See Figure 1a & b.
2. Remove the top grill/panel from the fireplace. Also, lower the bottom grill/panel.
3. Slide the Trim assembly onto the face of the fireplace. Note: The trim sides have grooves cut out to slide around the shoulder screws that hold the top and bottom grill panels on.
4. Once the trim assembly has been slide onto the fireplace face, attach the trim to the unit using the (6) screws provided in the parts bag. See Figure 2.
5. Replace the top grill panel and close the lower grill panel and the assembly is complete.

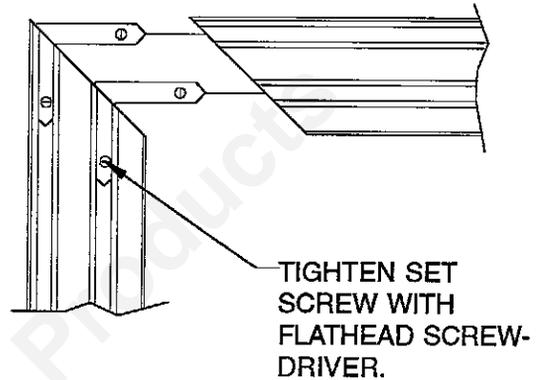


Figure 1a - Back view of trim.

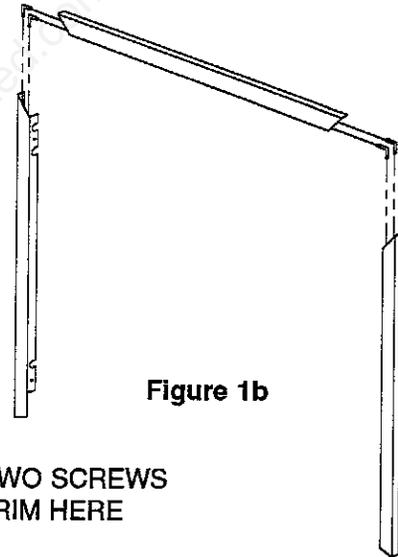


Figure 1b

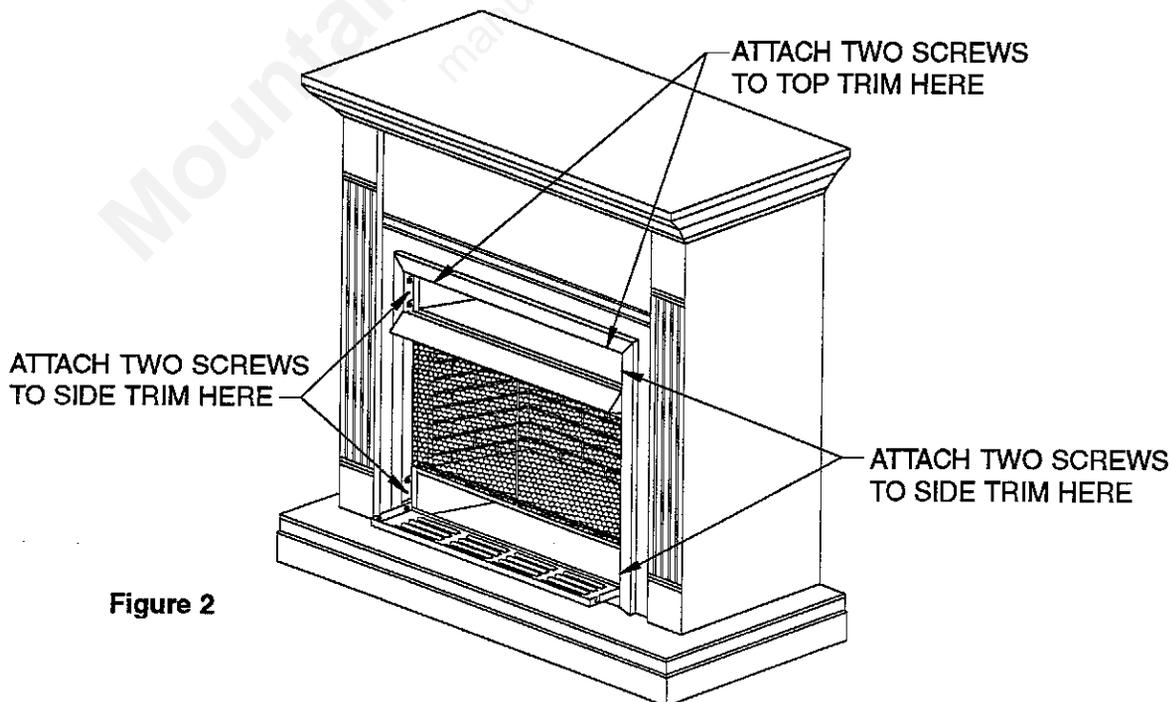


Figure 2

Replacement Parts

VF32SB - Satin Black Trim Kit

<u>Description</u>	<u>Part#</u>	<u>Qty.</u>
Leftside Trim (Black)	89877	1
Rightside Trim (Black)	89875	1
Top Trim (Black)	89894	1
Corner Key	89419	4
#10 x 3/8" PH Screw	83465	6

VF32PB - Polished Brass Trim Kit

<u>Description</u>	<u>Part#</u>	<u>Qty.</u>
Leftside Trim (Brass)	89878	1
Rightside Trim (Brass)	89876	1
Top Trim (Brass)	89895	1
Corner Key	89419	4
#10 x 3/8" PH Screw	83465	6

VF36SB - Satin Black Trim Kit

<u>Description</u>	<u>Part#</u>	<u>Qty.</u>
Leftside Trim (Black)	89877	1
Rightside Trim (Black)	89875	1
Top Trim (Black)	89879	1
Corner Key	89419	4
#10 x 3/8" PH Screw	83465	6

VF36PB - Polished Brass Trim Kit

<u>Description</u>	<u>Part#</u>	<u>Qty.</u>
Leftside Trim (Brass)	89878	1
Rightside Trim (Brass)	89876	1
Top Trim (Brass)	89880	1
Corner Key	89419	4
#10 x 3/8" PH Screw	83465	6

VF42SB - Satin Black Trim Kit

<u>Description</u>	<u>Part#</u>	<u>Qty.</u>
Leftside Trim (Black)	89877	1
Rightside Trim (Black)	89875	1
Top Trim (Black)	89881	1
Corner Key	89419	4
#10 x 3/8" PH Screw	83465	6

VF42PB - Polished Brass Trim Kit

<u>Description</u>	<u>Part#</u>	<u>Qty.</u>
Leftside Trim (Brass)	89878	1
Rightside Trim (Brass)	89876	1
Top Trim (Brass)	89882	1
Corner Key	89419	4
#10 x 3/8" PH Screw	83465	6

To Order Repair/Replacement Parts write or call:

United States Stove Company

227 Industrial Park Road, P.O.Box 151, South Pittsburg, TN 37380

(888) 299-1440 • www.usstove.com