

APR Industries Ltd.  
1354 Waverley Street  
Winnipeg, Manitoba, R3T 0P5  
Canada

## WTK-P KOZI Wall Thermostat Kit



### THIS KIT SHOULD CONTAIN



1 Rubber Grommet



1 Wall Thermostat



1 Brown Wire (25 ft Length)

### INSTALLATION INSTRUCTIONS:

1. Allow the stove to cool to room temperature and unplug it from the electrical outlet. While facing the stove, open the right side panel by removing the 2 screws in the front upper and lower corners. You will now be able to access the **MX** control board located on this side panel.
2. As shown in Figure 1, place the rubber grommet in the hole at the back of the right side panel.

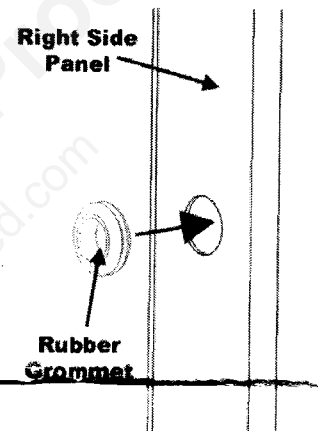


Figure 1. Placing the grommet into the right side panel

3. Place the brown wire through the hole in the grommet.
4. Attach one set of ends of the brown wire into the **MX** control board as shown in Figure 2.

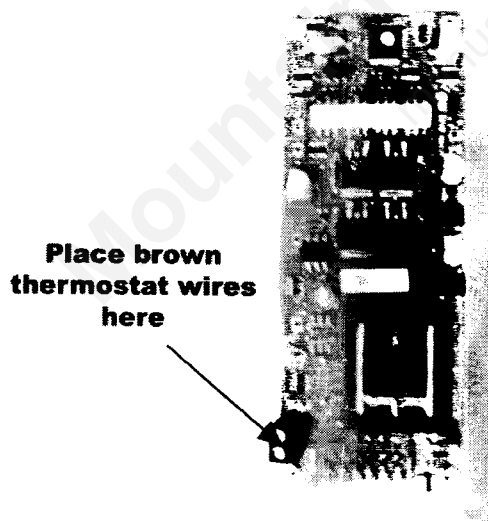


Figure 2. Thermostat wiring to the **MX** Control board

5. Remove face of the wall thermostat. Attach the other ends of the brown wire into the wall thermostat as shown in Figure 3. Set anticipator to .25 for millivolts. Place the face back onto the wall thermostat.



Figure 3. Thermostat wiring to the wall thermostat

6. Close the right side panel on the pellet stove and screw back into place.

Printed in Canada  
Revised Oct 2013