

QUADRA-FIRE®

THERMOCOUPLE GROUNDING KIT FOR ALL PELLET APPLIANCES

For All Pellet Appliances except the 1200 Series:


Locate the bullet connector where the red wire from the Thermocouple joins the red wire from the Junction Box. Disconnect the bullet connector and insert the red and green grounding wires and reconnect. See pictures on pages 1 and 2 for the grounding location for each model.

Pellet 1200 Series:


The new green grounding wire has fork connectors at each end. Loosen the two screws (shown in picture on page 2), attach the grounding wire and retighten the screws.

Included in Kit: Red & Green Grounding Wire Set and Green Grounding Wire (1200 Series only).

Tools Needed: Phillips Head Screwdriver

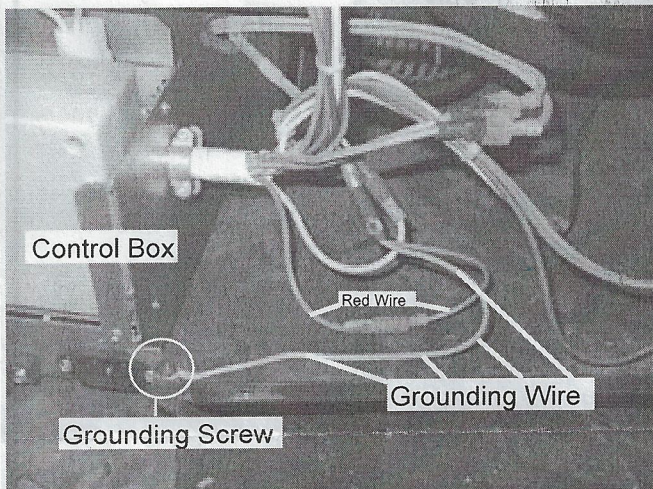


Castile Insert

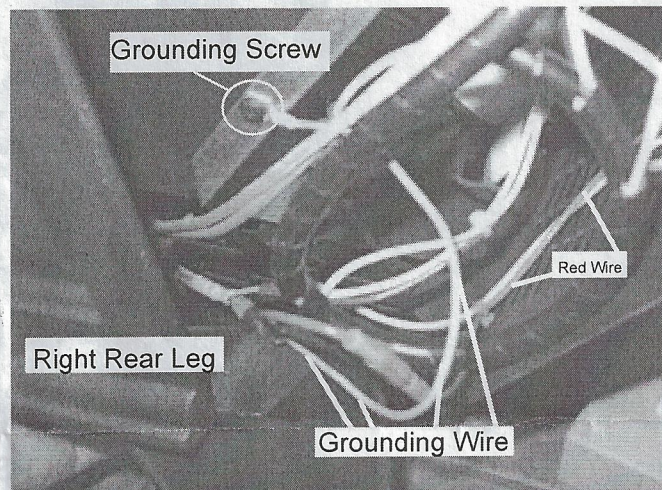


Castile Freestanding


GROUNDING LOCATIONS (Cont'd)

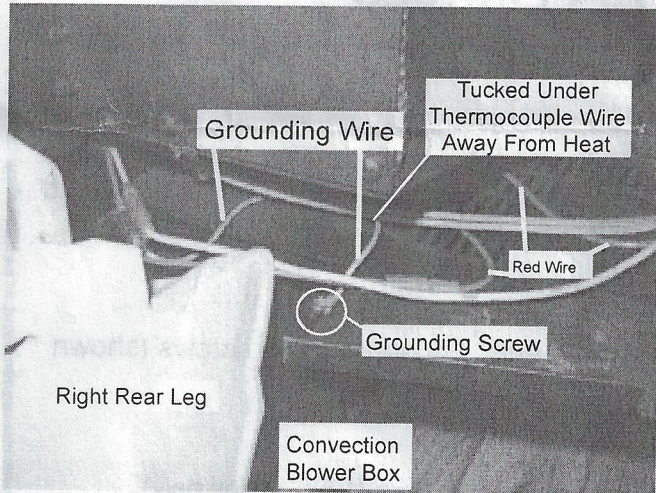

Mt. Vernon

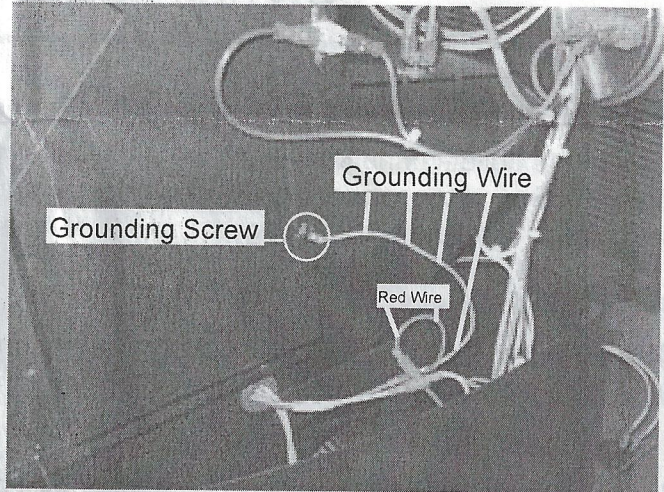

Santa Fe

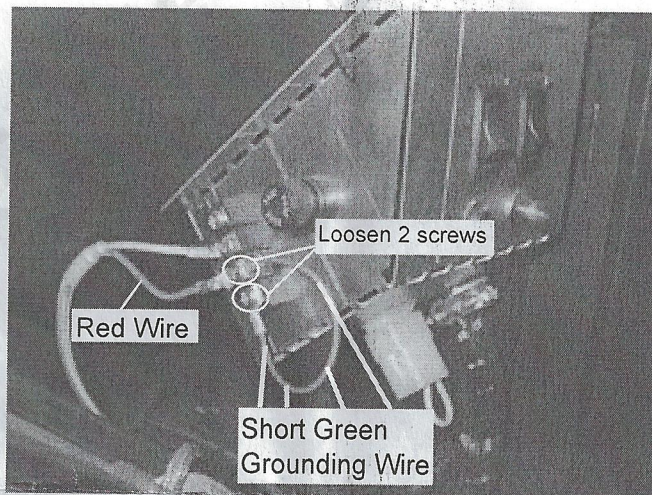

1200 Series