

1 0 2 6 2 8



NZ6000 HINGE RETRO FIT INSTALLATION INSTRUCTIONS

Quality System Certified to
ISO
9001-2008
W415-0584 / A / 10.19.11

This Kit Includes:

- | | | |
|---|-----------|-----------------|
| 4 | 10-32 | Flat Head Screw |
| 2 | 10-32 | Set Screw |
| 2 | W485-0022 | Pin |
| 2 | W330-0048 | Hinge |

1. Remove the doors and carefully place them down on a protected flat surface.
2. Remove and discard the top hinges from each door.

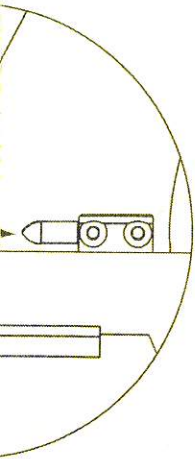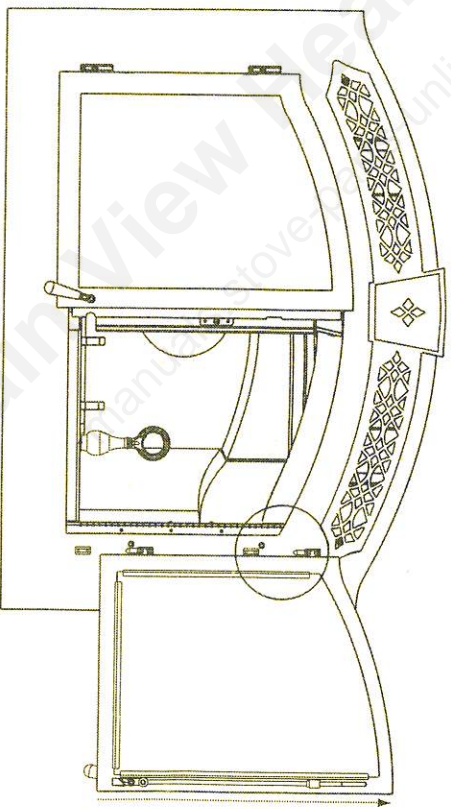

3. Replace the original hinges with both W330-0048. Attach both new hinges to either door using the Flat Head Screws.