



HOW TO TAKE THE COMBEX OUT OF THE STOVE

- 1) Disconnect the stove from the wall and move it forward in order to have access to both sides as well as to back of the stove.
- 2) Unscrew the left ornamental side of the stove. There are three (3) screws to remove. One on the side of the stove and two (2) others behind the stove. Use a socket wrench with a 5/16 " socket or a slotted screwdriver.

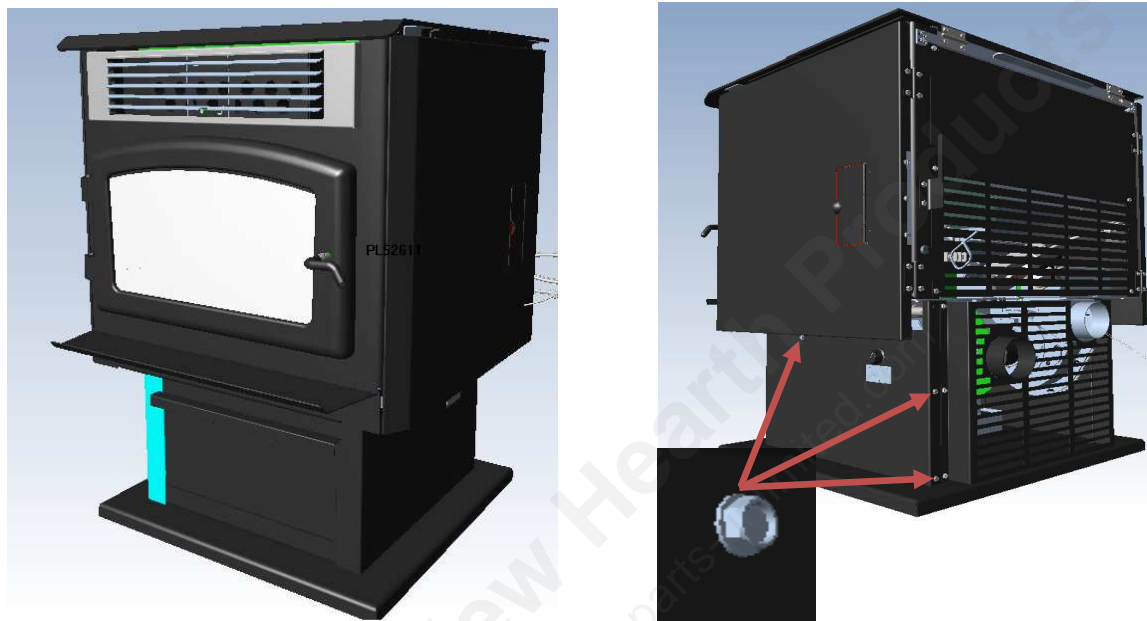


- 3) Before unscrewing the ornamental right side, it is necessary to remove the air inlet button with a small slotted screwdriver.

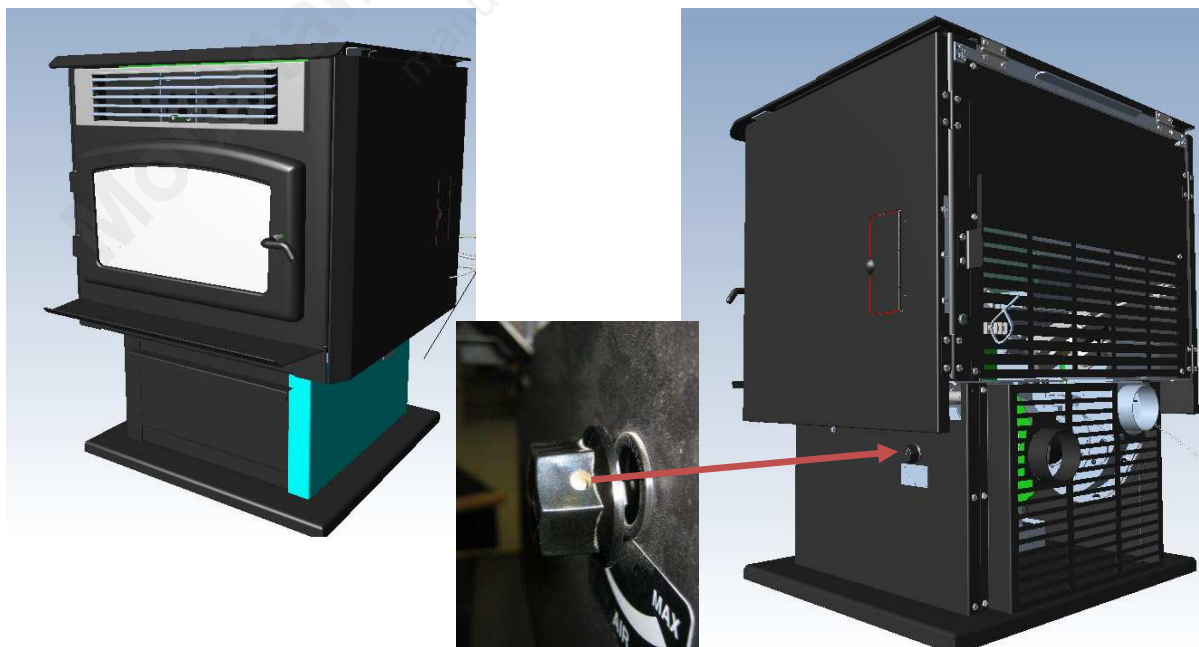



- 4) It is now possible to unscrew the right ornamental panel of the stove. There are three (3) screws to remove. One on the side of the stove and two (2) others behind the stove. Use a socket wrench with a 5/16" socket or a slotted screwdriver.




- 5) Unscrew the back panel. There are six (6) screws. Three (3) on the left-hand side and three (3) others on the right-hand side of the panel. Use a socket wrench with a 5/16" socket or a slotted screwdriver.

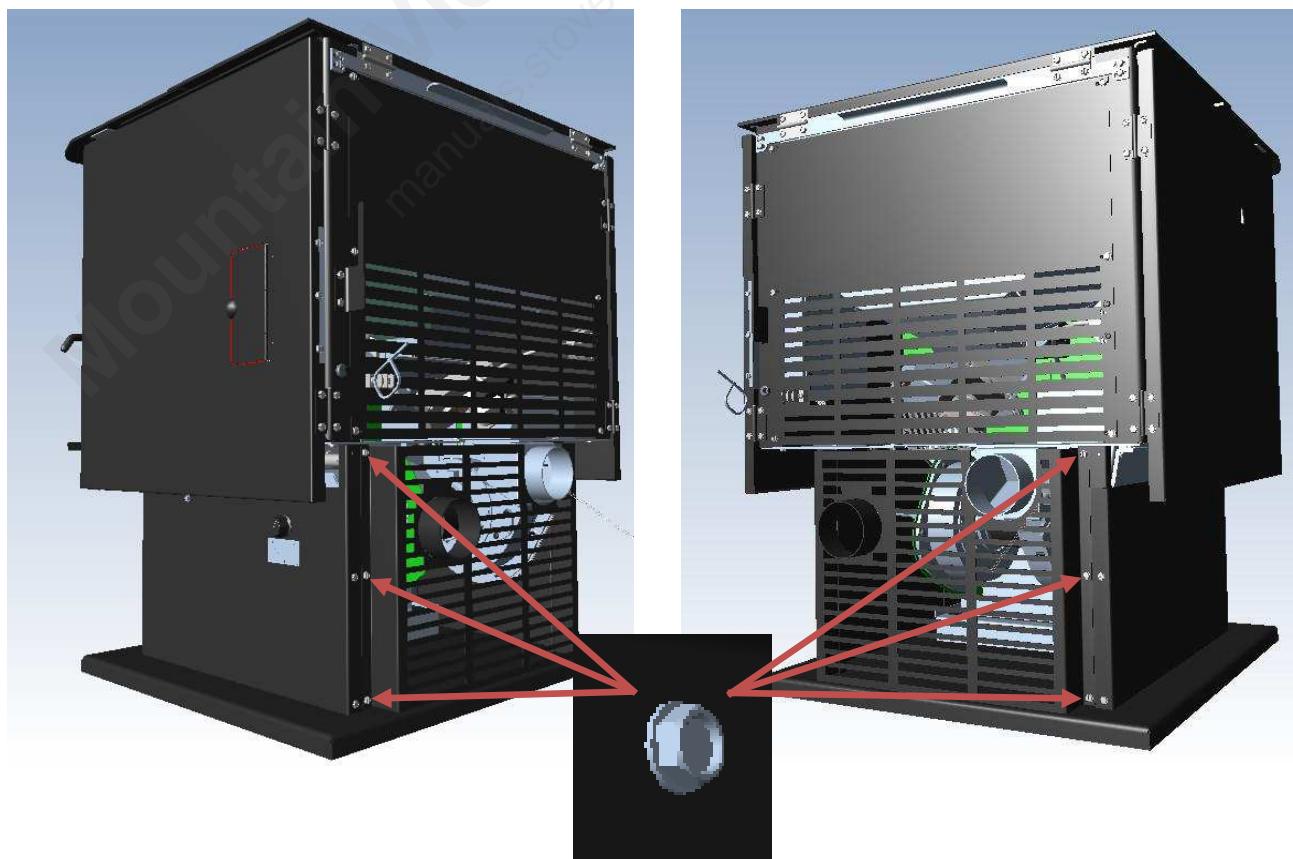


- 6) Unscrew the four (4) screws that hold the exhaust pipe plate. Use the same socket wrench with a 5/16" socket or a slotted screwdriver.

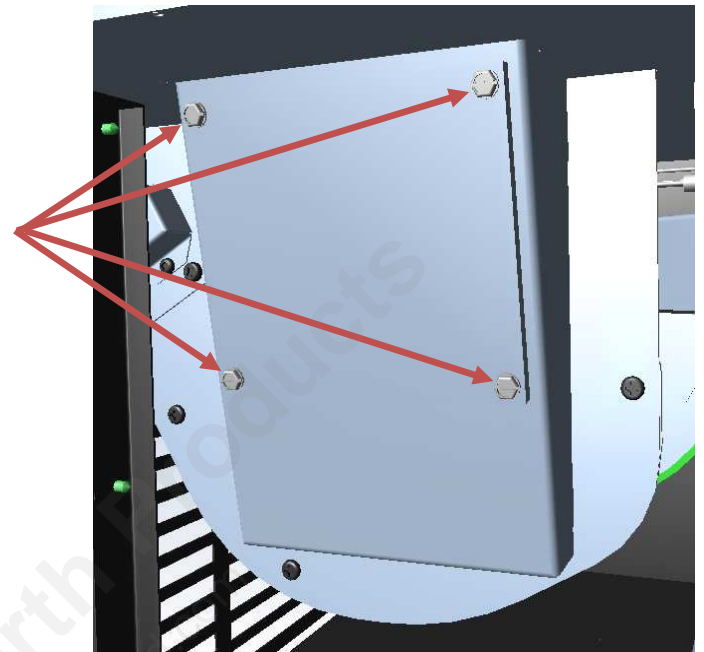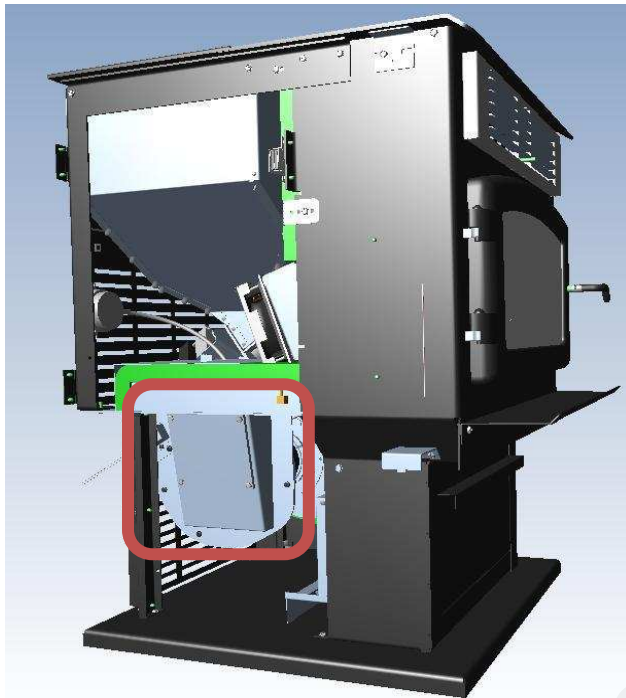

- 7) Unscrew the five (5) combex screws on the left hand side of the device (when facing it). Use a Robertson or Philips screwdriver.

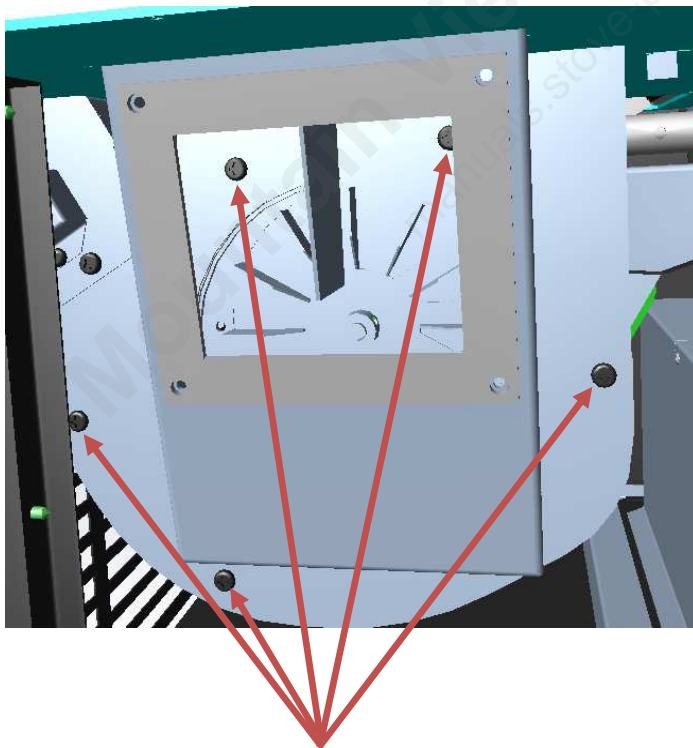

- 8) Unscrew the remaining combex screw on the right hand side of the device (when facing it). Use a Robertson or Philips screwdriver. **NOTE:** This screw will probably be hidden under tar, you will have to scratch some off in order to get to the screw.

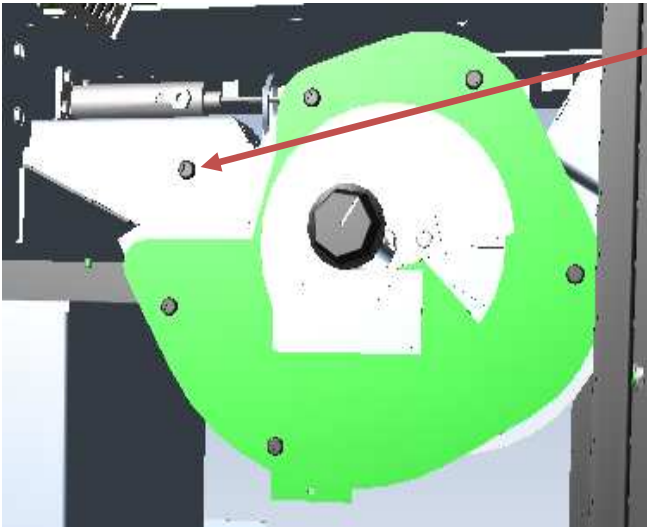

Mountain View Hearth
manuals.stove-parts-unlimited.com