


repair parts

Forester Insert and Freestanding 25

MODELS 143.840200 / 143.840300 / 143.840601

(Blower Assembly)

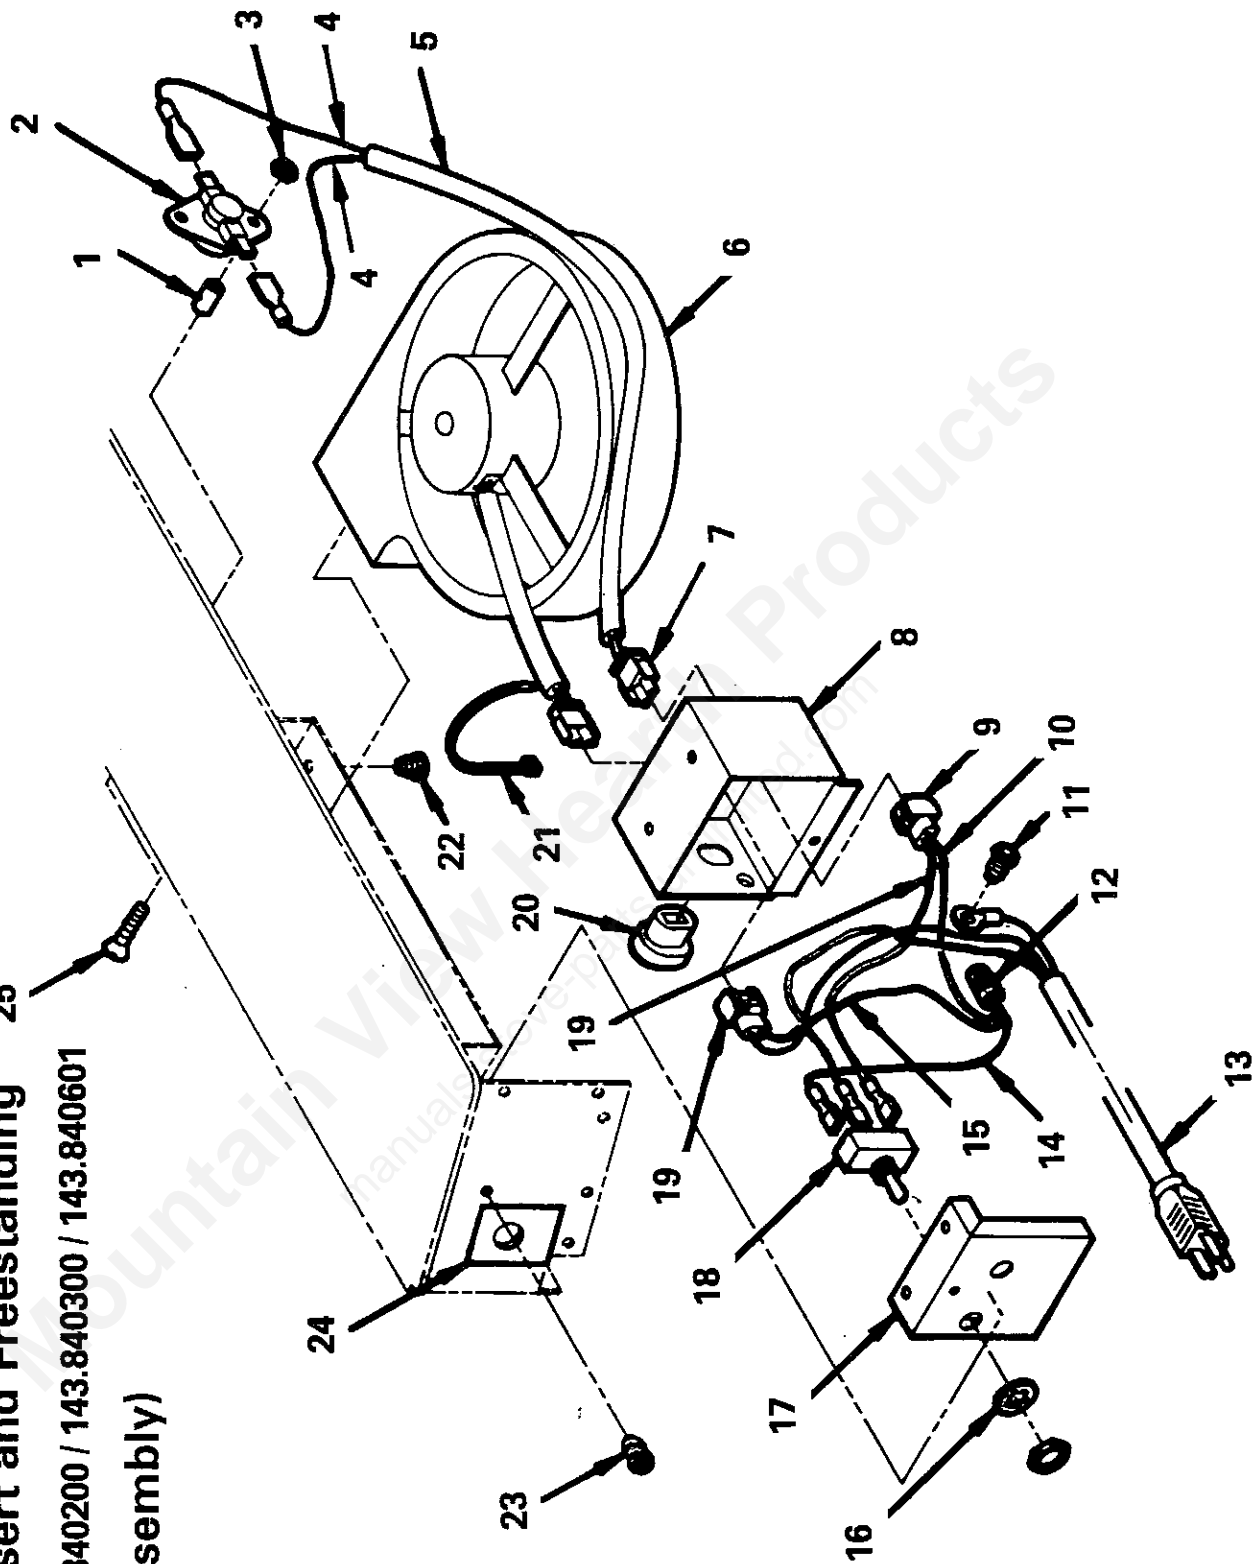

repair parts

Forester Blower Assembly

Models 143.840200 / 143.840300 / 143.840601


Key No.	Part No.	Description
1	83848	Spacer, (2 Req'd.)
2	80100	Thermostat
3	83234	Hex Nut, #8-32 (2-Req'd.)
4	80122	Jumper Wire (2 Req'd)
5	80120	Vinyl Tubing
6	67822	Blower Assembly
7	80092	Male Connector (2 Req'd.)
8	22061	Box, Control
9	80094	Connector, Female ** (2-Req'd.)
10	80119	Wire, Jumper
11	83220	Screw, Thread Cutting
12	80006	Nut, Wire
13	80116	Cord, Power Supply
14	80118	Wire, Jumper
15	80151	Wire, Jumper
16	83240	Washer, Lock (Internal Tooth)
17	22062	Cover, Control Box
18	80004	Switch, Toggle
19	80117	Wire, Jumper
20	80109	Bushing, Strain Relief
21	80123	Tie, Cable (2-Req'd.)
22	83245	Screw, Sheet Metal (10A x 3/8 HX W HD serrated) (2 Req'd.)
23	83222	Screw, Sheet Metal (10B x 3/8 HX W HD serrated) (2 Req'd.)
24	85444	Label, Blower Control
25	83235	Screw, Machine (# 8 - 32 x 1 SL FH HD) (2 Req'd.)

** Includes two terminals per connector

repair parts

Forester Insert and Freestanding

Model Nos. 143.840200 / 143.840300 / 143.840601

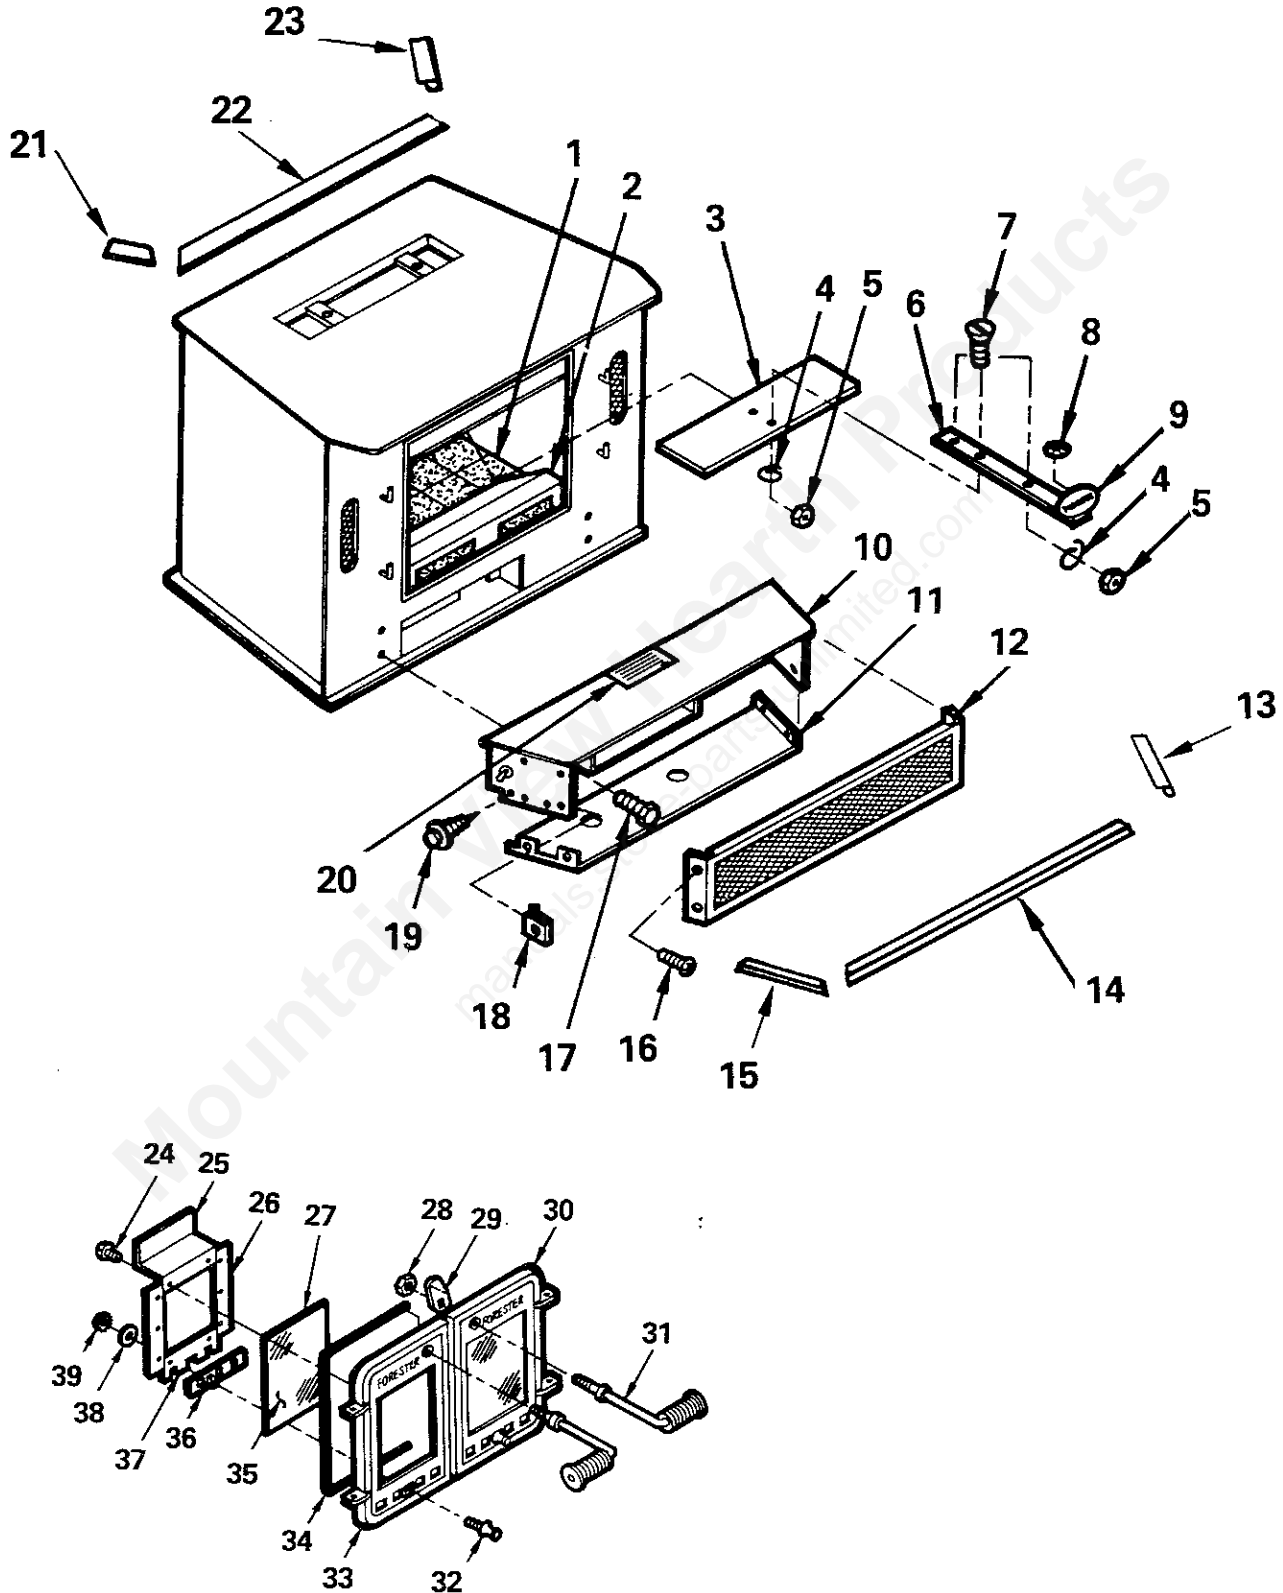

repair parts


Model Numbers 143.840200 / 143.840300 / 143.840601

Key No.	Part No.	Description
1	89066	Firebrick (10 Req'd.)
2	22307	Manifold, Air
3	22049	Damper, Flue Outlet
4	83002	Washer, Lock 1/4 (split) (3 Req'd.)
5	83072	Nut, Hex - 1/4" - 20 (3 Req'd.)
6	22048	Arm, Damper Adjustment
7	83181	Screw, Machine - 1/4 - 20 x 3/4 SL FL HD (3 Req'd.)
8	83257	Fastener, Pushnut (2 Req'd.)
9	85388	Nameplate, "Forester"
10	68003	Plate, Hearth Extension
11	22308	Panel, Hearth Extension Bottom
12	67815	Hearth Extension Grill Assembly
13	89233	R/H Hearth Trim (Brass Plated)-not included w/Model 143.840601
14	89219	Hearth Trim (Brass Plated)-not included w/Model 143.840601
15	89224	L/H Hearth Trim (Brass Plated)-not included w/Model 143.840601
16	83005	Screw, Machine - #10 - 24 x 1/2 PH TR (4 Req'd.)
17	83236	Screw, Machine - 1/4 - 20 x 3/4 HZ F (4 Req'd.)
18	83192	Nut, Clip (#10 - 24) (4-Req'd.)
19	83166	Screw, Sheet Metal - 10A x 1/2 SL HX BLK (6 Req'd.)
20	85442	Label, Hearth Extension
21	89221	L/H Cabinet Top Trim (Brass Plated)-not included w/Model 143.840601
22	89223	Cabinet Top Trim (Brass Plated)-not included w/Model 143.840601
23	89222	R/H Cabinet Top Trim (Brass Plated)-not included w/Model 143.840601
24	83202	Screw, Machine - #10 - 24 x 3/8 PH RD PLN (20 Req'd.)
25	21947	Retainer, Glass Top (2 Req'd.)
26	21781	Retainer, Glass Side (4 Req'd.)
27	88047	Gasket, Glass (2 Req'd.)
28	83243	Nut, Lock - 7/16" - 20 NF (Thin-Top) (1-Req'd.)
29	22083	Latch, Door
30	22315	Door, Right Hand (For Glass Inset)
31	89189	Handle, Door (2 Req'd.)
32	40025	Knob, Draft Control (2 Req'd.)
33	22313	Door, Left Hand (For glass Inset)
34	22319	Gasket, Rope (1/2") 36" long (2-Req'd.)
35	89155	Glass (8" x 10") (2 Req'd.)
36	22314	Slide, Draft (2 Req'd.)
37	22316	Retainer, Glass Bottom (2 Req'd.)
38	83091	Washer, Flat (#10) (2 Req'd.)
39	83244	Nut, (Keps #10-24) F (2 Req'd.)
*	68004	Complete L/H Door Assembly
*	68005	Complete R/H Door Assembly
*	85493	Owner's Manual (F642-4386)
*	83236	Leveler / Roller
*	67796	Log Retainer

* Not Shown

Forester Fireplace Insert

Model 143.840601

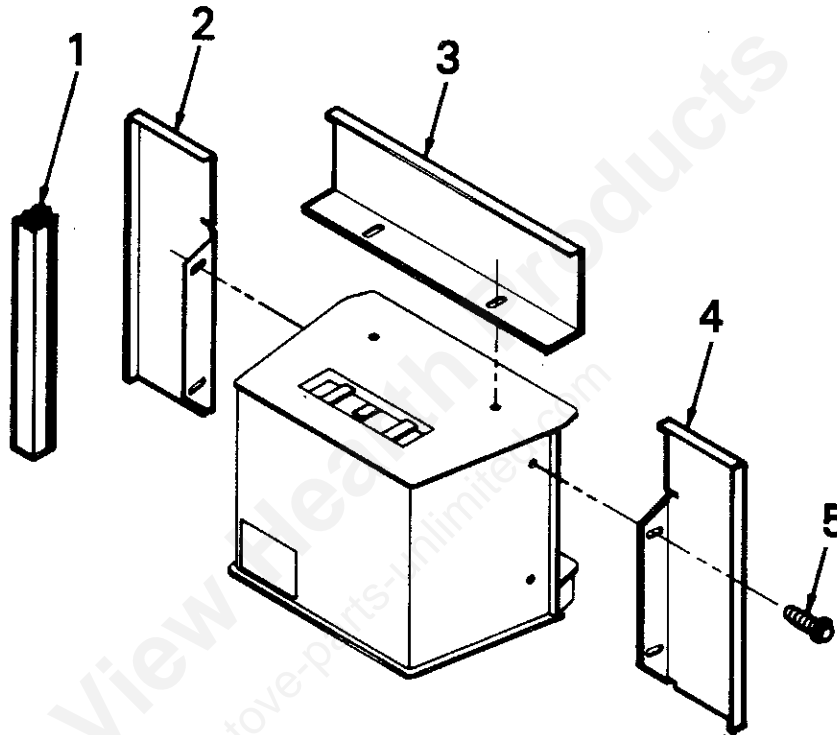

repair parts

Key	Part No. 42MB	Description
1	88055	Gasket (10' Roll)
2	67818	Trim, R/H
3	67816	Trim, Top
4	67817	Trim, L/H
5	83236	Screws, Thread cutting 1/4-20 x 3/4 HX W (Type F) (6 Req'd.)
*	88056	(Cement, Furnace (4 oz. Tube)(Optional not supplied with kit)
*	89185	Drill, Twist

* Not Shown