


AHS1
AHS1B

ORDER ALL REPAIR PARTS FROM YOUR ASHLEY DEALER
BY SUPPLYING THE FOLLOWING INFORMATION:

1. PART NAME
2. PART NUMBER (Not Key No.)
3. MODEL NUMBER

FIGURE 21

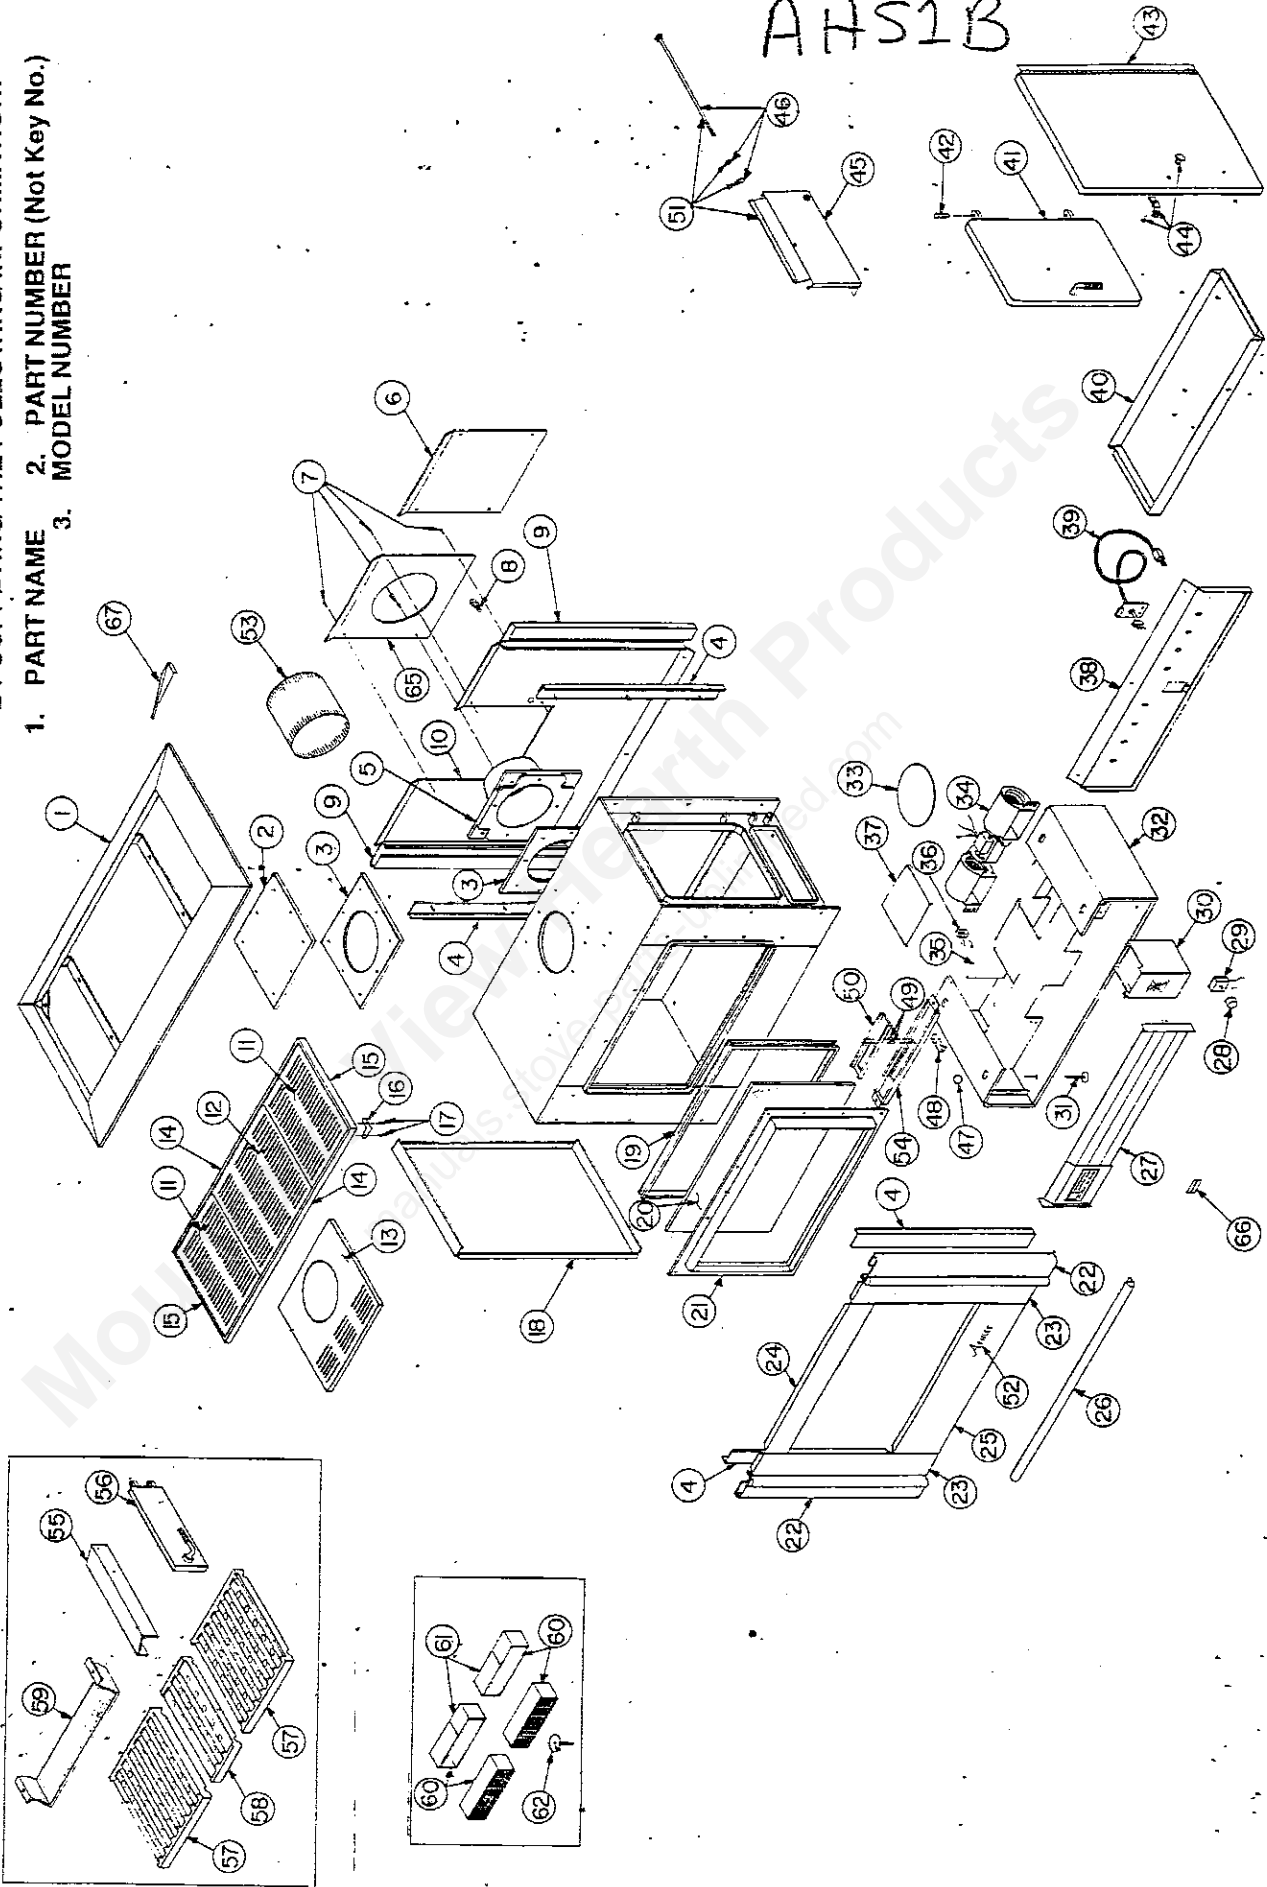

KEY NO.	PART NAME	QTY.	AHS1 PART NO.	AHS1B PART NO.
1	Top, Frame Assy. Ptd.	1	035121	035132
2	Plate, Cover Ptd.	1	035176	035176
3	Gasket	2	035177	035177
4	Rail, Mounting Assy. Ptd.	4	035125	035136
5	Collar, Flue Reamed	1	035175	035175
6	Cover, Plate Rear Cab. Ptd.	1	035836	035838
7	Screw, 8 x 1/2	2	*	*
8	Handle, Spring	1	025516	025516
9	Corner, Cabinet Ptd.	2	035126	035137
10	Rear, Cabinet Ptd.	1	035828	035830
11	Top, Louvered (Lt. & Rt.) Pt.	2	035131	035142
12	Top, Center Louvered Ptd.	1	035130	035141
13	Top, Louvered Ctr. (w/hoie)	1	035268	035266
14	Trim, Brass (30-3/4 Long)	2	032413	032413
15	Trim, Brass (14-5/8 Long)	2	032414	032414
16	Key, Corner	4	024034	024034
17	Screw, Set 8-32 x 1/8 Slit	8	024035	024035
18	Side, Left Cabinet Ptd.	1	035128	035139
19	Gasket, Glass	1	035179	035179
20	Glass	1	033971	033971
21	Frame, Glass & Brass Assy.	1	035178	035178
22	Corner, Cab. & Brass Assy.	2	035190	035195
23	Side, Cabinet Front Ptd.	2	035122	035133
24	Top, Cabinet Front Ptd.	1	035124	035135
25	Bottom, Cabinet Front Ptd.	1	035123	035134
26	Trim, Brass (26-7/8 Long)	1	032418	032418
27	Louver, Grille Assy.	1	035967	035967
28	Knob	1	011656	011656
29	Control, Speed Adjusted	1	035262	035262
30	Housing, Wiring Assy. Ptd.	1	035073	035073
31	Leveler, Leg	4	016343	016343
32	Pedestal Assy. Ptd.	1	035408	035408
33	Pad	1	035968	035968
34	Blower Assy.	1	035165	035165
35	Insulation	1	035183	035183
36	Connector & Wire Assy.	1	035184	035184
37	Insulation	1	035181	035181
38	Shroud, Blower Ptd.	1	035075	035075
39	Cordset/Coverplate Assy.	1	025994	025994
40	Pan, Ash Assy.	1	034290	034290
41	Door (Feed) & Handle Assy. (See Fig. 22 For Components)	1	035401	035401
42	Pin	4	P626	P626
43	Door, Cabinet Assy. Ptd.	1	035127	035138
44	Knob & Latch Kit	1	035403	035403
45	Curtain, Smoke Ptd.	1	035144	035144
46	Rod, Stove Kit	1	035409	035409
47	Handle, 3/4 Dia. Ball	1	019848	019848
48	Handle, Airwash Slide Ptd.	1	035410	035410
49	Spacer	2	P5138	P5138
50	Slide, Air	1	032210	032210
51	Curtain, Smoke & Fasteners	1	035411	035411
52	Logo & Fasteners Kit	1	035412	035412
53	Pipe, Last Joint Ptd. Assy.	1	004302	004302
54	Housing, Air Slide	1	032209	032209
55	Retainer, Ash Ptd.	1	035413	035413
56	Door (Ash) & Handle Assy. (See Fig. 23 For Components)	1	035399	035399
57	Grate, Large	2	035308	035308
58	Grate, Small	1	035309	035309
59	Shield, Flame Impingement	1	035072	035072
60	Combustor & Wrap Kit	2	035415	035415
61	Wrap for Combustor	2	035416	035416
62	Probe Thermometer	1	036049	036049
65	Adapter Flue Outlet Ptd.	1	035829	035831
66	Label Lo/Hi	1	035552	035552
67	Trim Corner	4	035846	035846

* Purchase Locally

25 - S 30 ~~34~~ L

40 - S


15 - S

P.O.
12491
7-26-89

ORDER ALL REPAIR PARTS FROM YOUR ASHLEY DEALER BY SUPPLYING THE FOLLOWING INFORMATION:

1. PART NAME 2. PART NUMBER (Not Key No.) 3. MODEL NUMBER

FIGURE 22

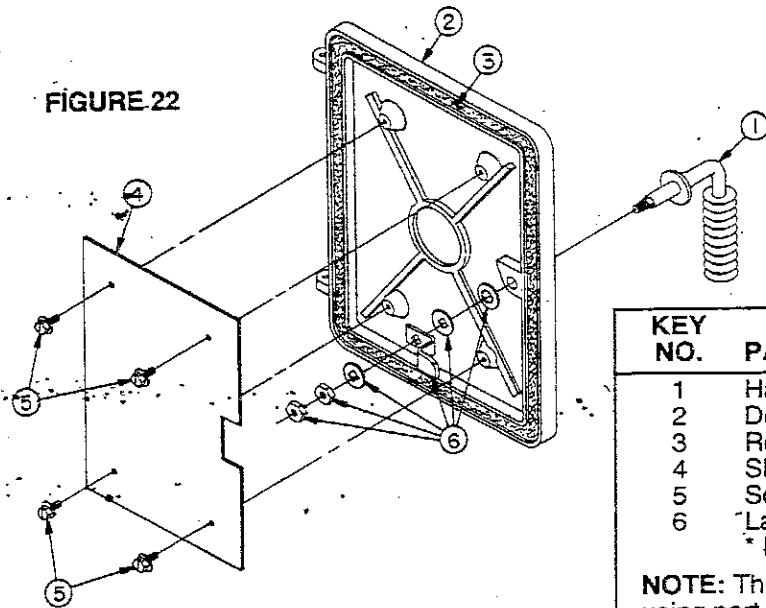


KEY NO.	PART NAME	QTY. Per Unit	PART. NUMBER
1	Handle Assy.	1	015905
2	Door Feed & Rope Assy.	1	035400
3	Rope Fiberglass	1	009535-03
4	Shield Door Radiation Ptd.	1	035402
5	Screw 1/4 x 1/2 Long Mach.	4	*
6	Latch & Latch Fasteners	1	035395
	* Purchase Locally		

NOTE: The complete feed door assembly may be ordered by using part number 035401 or individual components may be ordered as described above.

ORDER ALL REPAIR PARTS FROM YOUR ASHLEY DEALER BY SUPPLYING THE FOLLOWING INFORMATION:

1. PART NAME 2. PART NUMBER (Not Key No.) 3. MODEL NUMBER

FIGURE 23

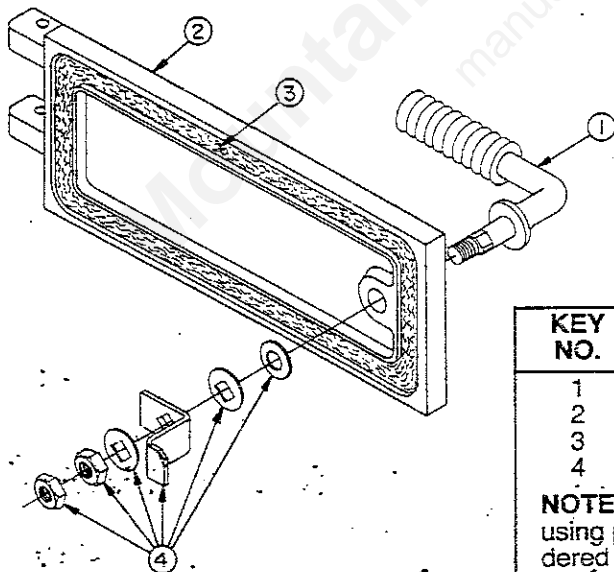

KEY NO.	PART NAME	QTY. Per Unit	PART. NUMBER
1	Handle Assy.	1	015905
2	Door Ash & Rope Assy.	1	035756
3	Rope Fiberglass	1	012053-01
4	Latch & Latch Fasteners	1	035395

NOTE: The complete ash door assembly may be ordered by using part number 035399 or individual components may be ordered as described above.