




## REPLACING THE COMBUSTION PACKAGE ACCLAIM MODEL # 0041

- STEP #1 Lift out the griddle. Remove the ash pan and dump the ashes. The pan is handy contain for the hardware.
- STEP #2 Remove the front door. Open the door and pull down on the spring-loaded upper hinge pin. When the pin clears its recess, tilt the door slightly forward and lift it off the lower support.
- STEP #3 Remove the andirons.
- STEP #4 Lift out the front and back grate section.
- STEP #5 Thoroughly clean the firebox and ash drop area of the stove.
- STEP #6 Reach inside the stove and tap the wedges securing the lower fireback assembly upward with a rubber mallet or soft face hammer. Remove the wedges and lower fireback with the arch inserts attached from the stove.

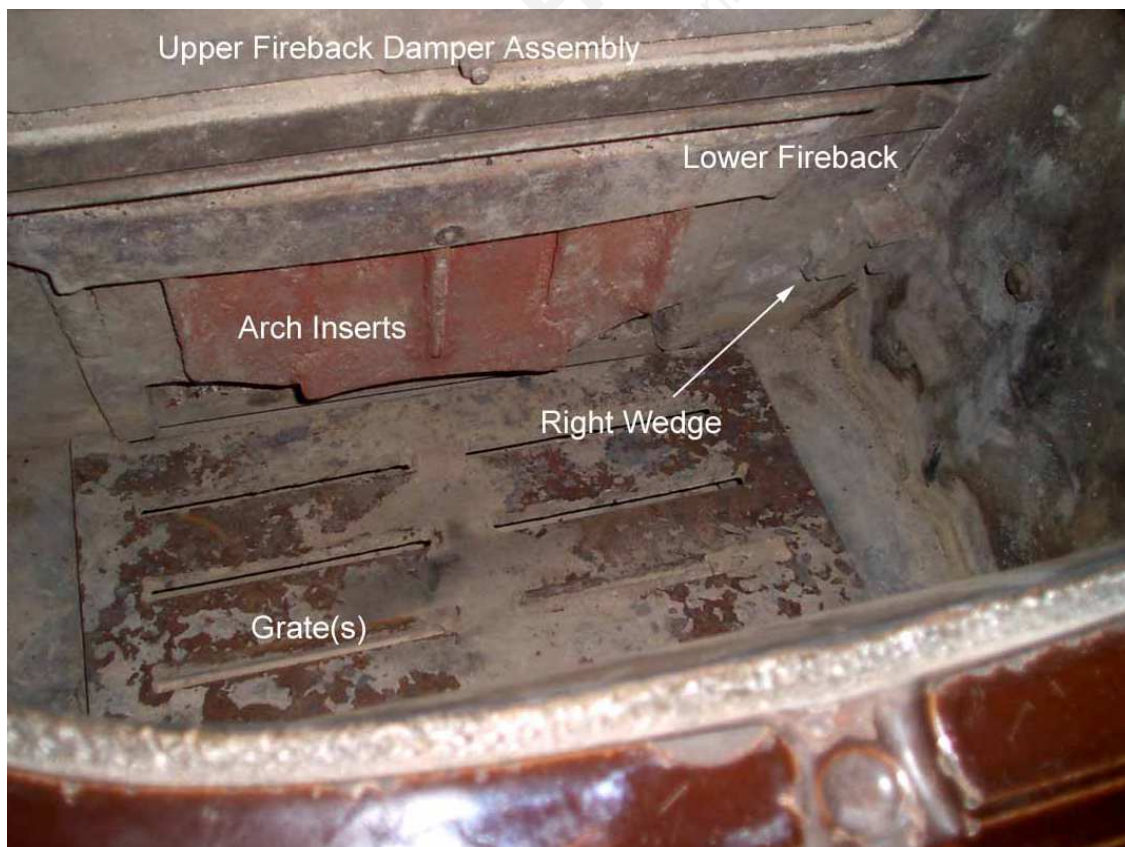

- STEP #7 Two ¼ -20 hex head cap screws with washers secure the upper fireback assembly to the inside flange of the stove back. Loosen one cap screw two full turns and remove the other cap screw and washer. Remove the upper fireback assembly (damper housing assembly).
- STEP #8 Remove the secondary combustion package. Clean out the firebox thoroughly. Vacuum out the entire firebox and ash drop area and the heat exchange areas to the sides of the refractory.
- STEP #9 Examine the damper gasket and the gasket on the stove back flange used to seal the lower fireback and the upper fireback assembly. If the gasket is damaged, broken or dried up, replace it.
- STEP #10 When all the necessary cleaning and regasketing is completed, reassemble the stove in reverse with repaired and/or replacement parts in reverse sequence.

Mountain View Hearth Products  
manuals.stove-parts-unlimited.com