

INSTALLER: THESE INSTRUCTIONS MUST BE CONVEYED TO AND REMAIN WITH THE HOMEOWNER.

CERTIFIED UNDER CANADIAN AND AMERICAN NATIONAL STANDARDS, CSA 2.33, ANSI Z21.88 FOR VENTED GAS FIREPLACE HEATERS



**INSTALLATION AND OPERATION INSTRUCTIONS FOR:
VENTED GAS FIREPLACE HEATER**

NATURAL GAS MODELS **GDS60-N** and **GS60-N**
PROPANE GAS MODELS **GDS60-P** and **GS60-P**

Model GS60 is made up of Model GDS60 and the Adapter Kit GS-150KT

WARNING: If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
- Do not touch any electrical switch.
- Do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.


Installation and service must be performed by a qualified installer, service agency or the gas supplier.



Wolf Steel Ltd., 24 Napoleon Rd., Barrie, ON L4M 4Y8 Canada • (705)721-1212 • fax(705)722-6031
www.napoleonfireplaces.com • ask@napoleon.on.ca

W415-0158 / E / 02.19.04

TABLE of CONTENTS

<p>Pg 2-4 INTRODUCTION Warranty General Instructions General Information Care of Glass & Plated Parts Shipping Bracket</p> <p>5 LOCATION & CLEARANCES</p> <p>6-12 DIRECT VENT SPECIFICS MODEL GDS60 Vent Lengths/Air Terminal Locations Special Installation Example Offset Installation Example Horizontal Terminations Orifice Replacement Top Vent to Rear Vent Modification Venting Parameters Wall & Ceiling Protection Horizontal Venting Installation Vertical Venting Installation Stove Vent Connection Mobile Home Installation</p> <p>13-14 B-VENT SPECIFICS MODEL GS60  Chimney Installation 'B' Vent Installation Combustion Air Adding Vent Sections Flashing and Storm Collar Installation</p>	<p>Pg 14 GAS INSTALLATION</p> <p>15-16 FINISHING Logo Placement Front Cast Installation Glass Door Closing & Opening Log Placement</p> <p>17-18 OPERATION / MAINTENANCE Spill Switch Venting Action Check Operating Instructions Maintenance</p> <p>19 BLOWER INSTALLATION</p> <p>19 ADJUSTMENTS Pilot Burner Adjustment Venturi Adjustments Restricting Vertical Vents</p> <p>20-21 REPLACEMENTS Ordering Replacement Parts Termination Kits Replacement Parts Accessories</p> <p>22-23 TROUBLE SHOOTING GUIDE</p> <p>24 SERVICE HISTORY</p>
--	--

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE

WARNING

- The stove is a vented gas-fired heater. Do not burn wood or other materials in this stove.
- Adults and especially children should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition. Supervise young children when they are in the same room as the stove.
- Due to high temperatures, the stove should be located out of traffic and away from furniture and draperies.
- Clothing or other flammable material should not be placed on or near the stove.
- Any safety screen or guard removed for servicing must be replaced prior to operating the stove.
- It is imperative that the control compartments, burners and circulating blower and its passageway in the stove and venting system are kept clean. The stove and its venting system should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. The stove area must be kept clear and free from combustible materials, gasoline and other flammable vapours and liquids.
- Under no circumstances should this stove be modified.
- This stove must not be connected to a chimney flue pipe serving a separate solid fuel burning appliance.
- Do not use this stove if any part has been under water. Immediately call a qualified service technician to inspect the stove and to replace any part of the control system and any gas control which has been under water.
- Do not operate the stove with the glass door opened, cracked or broken. Replacement of the glass should be done by a licensed or qualified service person.
- Do not strike or slam shut the stove glass door.
- This fireplace uses and requires a fast acting thermocouple. Replace only with a fast acting thermocouple supplied by Wolf Steel Ltd.

NOTE: changes, other than editorial, are denoted by a vertical line in the margin.

W415-0158/E/02.19.04

*NAPOLEON gas fireplaces are manufactured under the strict Standard of the world recognized
ISO 9001 : 2000 Quality Assurance Certificate.*

NAPOLEON products are designed with superior components and materials, assembled by trained craftsmen who take great pride in their work. The burner and valve assembly are leak and test-fired at a quality test station. The complete fireplace is test-fired and thoroughly inspected by a qualified technician before packaging to ensure that you, the customer, receives the quality product that you expect from NAPOLEON.

NAPOLEON GAS FIREPLACE PRESIDENT'S LIFETIME LIMITED WARRANTY

The following materials and workmanship in your new NAPOLEON gas fireplace are warranted against defects for as long as you own the fireplace. This covers: combustion chamber, heat exchanger, stainless steel burner, phazer™ logs and embers, ceramic glass (thermal breakage only), gold plated parts against tarnishing, porcelainized enamelled components and aluminum extrusion trims.

Electrical (110V and millivolt) components and wearable parts such as catalytic tiles, blowers, gas valves, thermal switch, switches, wiring, remote controls, ignitor, gasketing, and pilot assembly are covered and NAPOLEON will provide replacement parts free of charge during the first year of the limited warranty.

Labour related to warranty repair is covered free of charge during the first year. Repair work, however, requires the prior approval of an authorized company official. Labour costs to the account of NAPOLEON are based on a predetermined rate schedule and any repair work must be done through an authorized NAPOLEON dealer.

CONDITIONS AND LIMITATIONS

NAPOLEON warrants its products against manufacturing defects to the original purchaser only -- i.e., the individual or legal entity (registered customer) whose name appears on the warranty registration card filed with NAPOLEON -- provided that the purchase was made through an authorized NAPOLEON dealer and is subject to the following conditions and limitations:

This factory warranty is nontransferable and may not be extended whatsoever by any of our representatives.

The gas fireplace must be installed by a licenced, authorized service technician or contractor. Installation must be done in accordance with the installation instructions included with the product and all local and national building and fire codes.

This limited warranty does not cover damages caused by misuse, lack of maintenance, accident, alterations, abuse or neglect and parts installed from other manufacturers will nullify this warranty.

This limited warranty further does not cover any scratches, dents, corrosion or discolouring caused by excessive heat, abrasive and chemical cleaners nor chipping on porcelain enamel parts, mechanical breakage of PHAZER™ logs and embers, nor any venting components used in the installation of the fireplace.

NAPOLEON warrants its stainless steel burners against defects in workmanship and material for life, subject to the following conditions: During the first 10 years NAPOLEON will replace or repair the defective parts at our option free of charge. From 10 years to life, NAPOLEON will provide replacement burners at 50% of the current retail price.

In the first year only, this warranty extends to the repair or replacement of warranted parts which are defective in material or workmanship provided that the product has been operated in accordance with the operation instructions and under normal conditions.

After the first year, with respect to this President's Limited Lifetime Warranty, NAPOLEON may, at its discretion, fully discharge all obligations with respect to this warranty by refunding to the original warranted purchaser the wholesale price of any warranted but defective part(s).

After the first year, NAPOLEON will not be responsible for installation, labour or any other costs or expenses related to the reinstallation of a warranted part, and such expenses are not covered by this warranty.

Notwithstanding any provisions contained in this President's Limited Lifetime Warranty, NAPOLEON'S responsibility under this warranty is defined as above and it shall not in any event extend to any incidental, consequential or indirect damages.

This warranty defines the obligations and liability of NAPOLEON with respect to the NAPOLEON gas fireplace and any other warranties expressed or implied with respect to this product, its components or accessories are excluded.

NAPOLEON neither assumes, nor authorizes any third party to assume, on its behalf, any other liabilities with respect to the sale of this product. NAPOLEON will not be responsible for: over-firing, downdrafts, spillage caused by environmental conditions such as rooftops, buildings, nearby trees, hills, mountains, inadequate vents or ventilation, excessive venting configurations, insufficient makeup air, or negative air pressures which may or may not be caused by mechanical systems such as exhaust fans, furnaces, clothes dryers, etc.

Any damages to fireplace, combustion chamber, heat exchanger, brass trim or other component due to water, weather damage, long periods of dampness, condensation, damaging chemicals or cleaners will not be the responsibility of NAPOLEON.

The bill of sale or copy will be required together with a serial number and a model number when making any warranty claims from your authorized dealer. The warranty registration card must be returned within fourteen days to register the warranty.

NAPOLEON reserves the right to have its representative inspect any product or part thereof prior to honouring any warranty claim.

ALL SPECIFICATIONS AND DESIGNS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE DUE TO ON-GOING PRODUCT IMPROVEMENTS. NAPOLEON® IS A REGISTERED TRADEMARK OF WOLF STEEL LTD. PATENTS U.S. 5.303.693.801 - CAN. 2.073.411, 2.082.915. © WOLF STEEL LTD.

W415-0158 / E / 02.19.04

GENERAL INSTRUCTIONS

THIS GAS STOVE SHOULD BE INSTALLED AND SERVICED BY A QUALIFIED INSTALLER to conform with local codes.

Installation practices vary from region to region and it is important to know the specifics that apply to your area,

for example: in Massachusetts State:

- The fireplace damper must be removed or welded in the open position prior to installation of a fireplace insert or gas log.
- The appliance off valve must be a "T" handle gas cock.
- The flexible connector must not be longer than 36 inches.
- The appliance is not approved for installation in a bedroom or bathroom unless the unit is a direct vent sealed combustion product.
- **WARNING:** This product must be installed by a licensed plumber or gas fitter when installed within the commonwealth of Massachusetts.

In absence of local codes, install to the current CAN1-B149 Installation Code in Canada or to the National Fuel Gas Code, ANSI Z223.1, and NFPA 54 in the United States. Mobile home installation must conform with local codes. In the absence of local codes, install to the current standard for gas equipped mobile housing CAN/CSA Z240 MH Series in Canada or the manufactured home construction and safety standard, Title 24 CFR, part 3280, or the Fire Safety Criteria for manufactured home installations, Sites and Community Standard ANSI/NFPA 501A in the United States.

Purge all gas lines with the glass door of the stove removed. Assure that a continuous gas flow is at the burner before re-installing the door.

Under extreme vent configurations, allow several minutes (5-15) for the flame to stabilize after ignition.

It is recommended that all horizontal runs have a ¼ inch rise per foot.

Objects placed in front of the stove must be kept a minimum of 48" away from the front face of the unit.

The stove and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa). The stove must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psig (3.5 kPa).

The stove, when installed with a blower, must be electrically connected and grounded in accordance with local codes. In the absence of local codes, use the current CSA C22.1 CANADIAN ELECTRICAL CODE in Canada or the ANSI/NFPA 70-1996 NATIONAL ELECTRICAL CODE in the United States. The blower power cord must be connected into a properly grounded receptacle. The grounding prong must not be removed from the cord plug.

GENERAL INFORMATION

FOR YOUR SATISFACTION, THIS STOVE HAS BEEN TEST-FIRED TO ASSURE ITS OPERATION AND QUALITY!

Minimum inlet gas supply pressure is 4.5 inches water column for natural gas and 11 inches water column for propane. Maximum inlet gas pressure is 7 inches water column for natural gas and 13 inches water column for propane. When the valve is set to "HI", the manifold pressure under flow conditions is 3.5 inches water column for natural gas and 10 inches water column for propane. When the fireplace is installed at elevations above 4,500ft, and in the absence of specific recommendations from the local authority having jurisdiction, the certified high altitude input rating shall be reduced at the rate of 4% for each additional 1,000ft.

W415-0158/E/02.19.04

Change in flame appearance from "HI" to "LO" is more evident in natural gas than in propane. Expansion / contraction noises during heating up and cooling down cycles are normal and to be expected.

This appliance is only for use with the type of gas indicated on the rating plate. (See page 14). This appliance is not convertible for use with other gases, unless a certified kit is used.

INSTALLER: It is your responsibility to check off the appropriate box on the rating plate according to the model, venting and gas type of the unit.

CARE OF GLASS, AND PLATED PARTS

Do not use abrasive cleaners to clean these parts. Buff lightly with a clean dry cloth.

The glass is 3/16" ceramic glass available from your Napoleon / Wolf Steel Ltd. dealer. **DO NOT SUBSTITUTE MATERIALS.** Clean the glass after the first 10 hours of operation with a recommended gas fireplace glass cleaner. Thereafter clean as required. **DO NOT CLEAN GLASS WHEN HOT!** If the glass is not kept clean permanent discoloration and / or blemishes may result.

SHIPPING BRACKET

To avoid the stove being damaged during shipping, a shipping bracket has been used and must be unbolted before the stove can be installed.

1. Remove the four nuts holding the shipping bracket to the bottom of the stove.
2. Lift the stove up and away from the skid to clear the threaded bolts sticking through the bracket. Set down on a flat surface. **The stove top is not secured to the unit.**
3. Discard the nuts, bracket and the skid.



FIGURE 1

GDS60: TOP VENT / REAR VENT

VERTICAL TERMINATION: Maximum input is 35,000 BTU/hr for natural gas and 31,500 BTU/hr for propane. Maximum output for natural gas is 27,300 BTU/hr at an efficiency of 78%. Maximum output for propane is 24,570 BTU/hr at an efficiency of 78%. Maximum A.F.U.E. (annual fuel utilization efficiency) rating is 72% for natural gas and 71% for propane.


REAR VENT HORIZONTAL TERMINATION:

Maximum input is 21,000 BTU/hr for natural and propane gas. *This application requires changing the main burner orifice.*

This stove is not approved for closet or recessed installations. It is approved for bathroom, bedroom and bed-sitting room installations.

This stove may be installed in an aftermarket permanently located, manufactured (mobile) home, where not prohibited by local codes.

GS60: Maximum input is 35,000 BTU/hr for natural gas and 31,500 BTU/hr for propane. This stove is approved for bedroom and bed-sitting room installations.



LOCATION & CLEARANCES

Provide adequate ventilation and combustion air.
Provide adequate accessibility clearance for servicing
and operating the stove.

Never obstruct the front opening of the stove.

GDS60 AND GS60

As long as clearance to combustibles is kept within the required distances, the most desirable and beneficial location for a Napoleon stove is in the centre of a building, thereby allowing the most efficient use of the heat created. The location of windows, doors and the traffic flow in the room where the stove is to be located should be considered. If possible, you should choose a location where the vent will pass through the house without cutting a floor or roof joist.

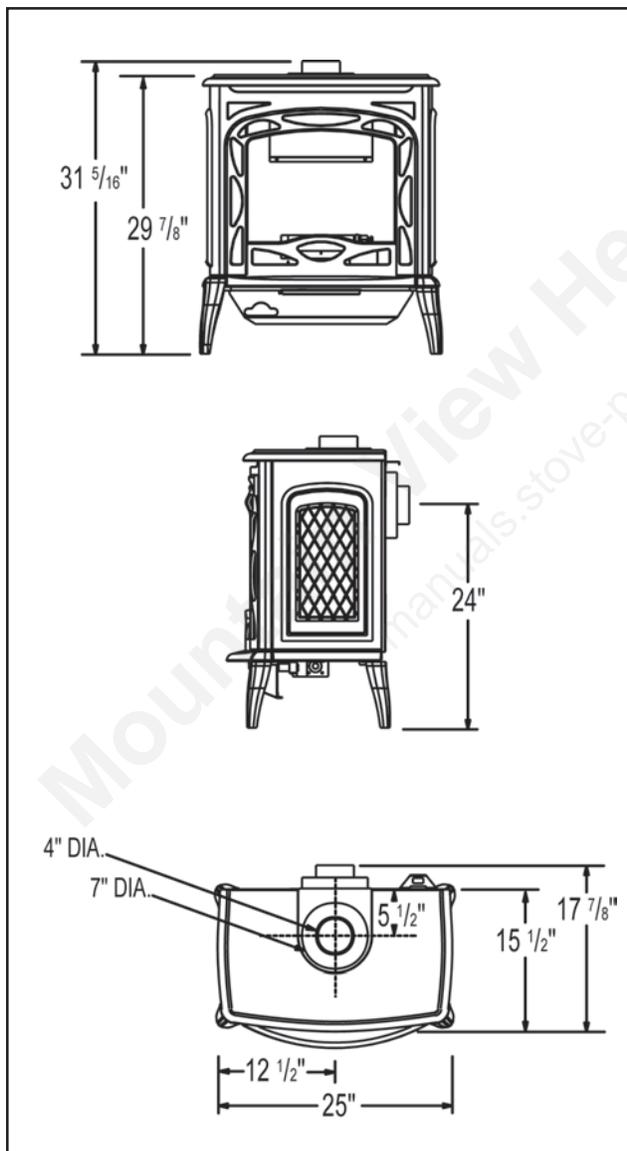


FIGURE 2 - SHOWN WITH OPTIONAL FRONT INSTALLED

NOTE: The total width of the stove is increased to 39" width with the optional side shelves attached.

MAINTAIN THESE MINIMUM CLEARANCES TO COMBUSTIBLES:

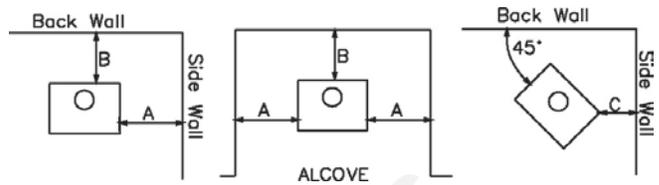


FIGURE 3

A. 6" B. 6" C. 2" *

No ADDITIONAL FLOOR PROTECTION IS REQUIRED

MINIMUM 20" FROM STOVE TOP TO CEILING

6" TO SINGLE WALL CONNECTOR

1" TO DIRECT VENT AND B-VENT

*AT A DISTANCE OF 2" FROM THE WALL, ACCESS TO THE BLOWER SWITCH, ON-OFF SWITCH OR THE BLOWER POWER CORD MAY NOT BE PRACTICAL.

A terminal shall not terminate directly above a sidewalk or paved driveway which is located between two single family dwellings and serves both dwellings. Local codes or regulations may require different clearances.

Do not allow the inside liner to bunch up on horizontal or vertical runs and elbows. Keep it pulled tight. A 1-1/4" air gap all around between the inner liner and outer stove pipe is required for safe operation. Use a firestop when penetrating interior walls, floor or ceiling.

DIRECT VENT SPECIFICS - MODEL GDS60

VENTING LENGTHS & AIR TERMINAL LOCATIONS

Use only Wolf Steel or Simpson Dura-Vent Model DV-GS venting components. Minimum and maximum vent lengths, for both horizontal and vertical installations, and air terminal locations for either system are set out in this manual and must be adhered to. For Simpson Dura-Vent, follow the installation procedure provided with the venting components. Both Wolf Steel and Simpson Dura-Vent venting components may have a 0" rise per foot on horizontal runs.

When using Wolf Steel venting components, use only the following vent kits: **WALL TERMINAL KIT GD175** (7-1/2' of venting included), or **1/12 TO 7/12 PITCH ROOF TERMINAL KIT GD110**, **8/12 TO 12/12 ROOF TERMINAL KIT GD111**, **FLAT ROOF TERMINAL KIT GD112** or **STOVE PERISCOPE KIT GD180** (for wall penetration below grade) in conjunction with the appropriate venting components.

For optimum performance, it is recommended that all horizontal runs have a minimum 1/4 inch rise per foot.

These vent kits allow for either horizontal or vertical venting of the stove. The maximum number of 4" flexible connections is two horizontally or three vertically (excluding the stove and the air terminal connections).

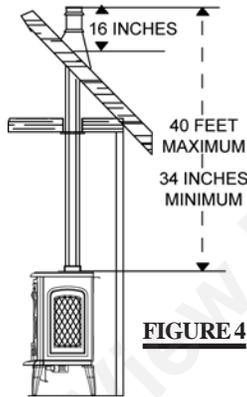


FIGURE 4

When terminating vertically, the minimum vertical rise is 34 inches above the stove and the maximum vertical rise is 40 feet. **FIGURE 4.**

Deviation from the minimum vertical vent length can create difficulty in burner start-up and/or carboning. Use an adjustable pipe as the final length of rigid piping to the stove for ease of installation.

For optimum flame appearance and stove performance, keep the vent length and number of elbows to a minimum. The air terminal must remain unobstructed at all times. Examine the air terminal at least once a year to verify that it is unobstructed and undamaged.

The maximum horizontal run is 34 inches with a 90° elbow located 29" above the stove. **FIGURE 5.**

The maximum horizontal run with a 57 inch vertical rise immediately above the stove is 20 feet . **FIGURES 6a & b.**

IF VERTICAL RISES GREATER THAN 57 INCHES ARE NECESSARY, THE INCREASED RISE MUST BE DEDUCTED FROM THE MAXIMUM HORIZONTAL RUN.


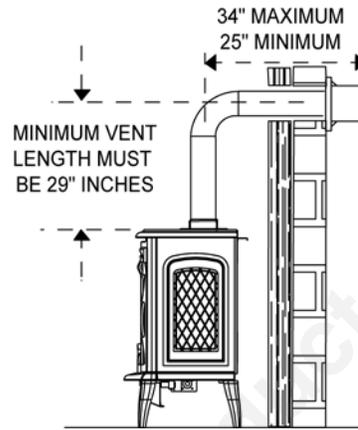


FIGURE 5

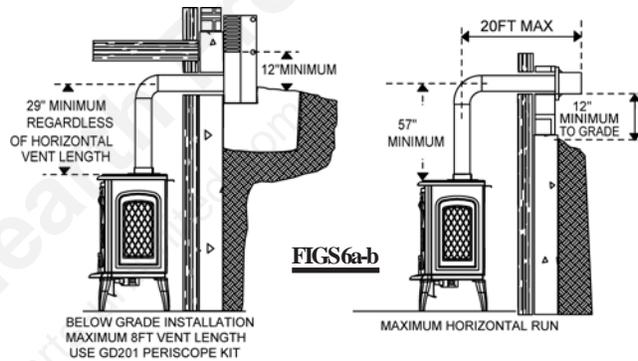

FIGS 6a-b

HORIZONTAL RUN NOT TO EXCEED VERTICAL RISE

Use the chart on this page to calculate horizontal runs for vertical rises between 29 and 57 inches. When calculating maximum run lengths, include 5 feet for each 90° or 45° elbow. (DO NOT INCLUDE THE FIRST ELBOW DIRECTLY OFF THE UNIT.)


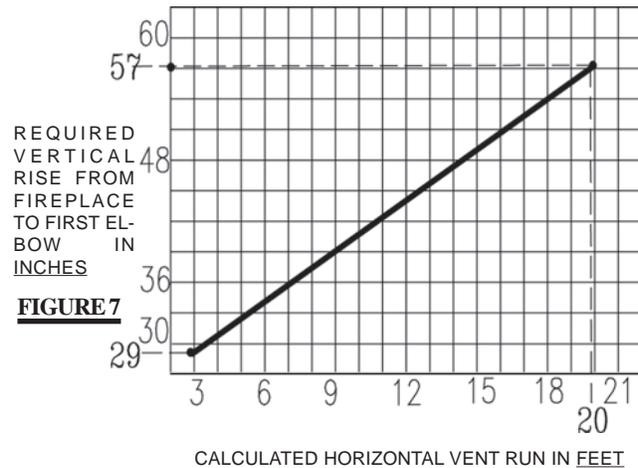


FIGURE 7

AIR TERMINAL INSTALLATIONS

FIGURE 8

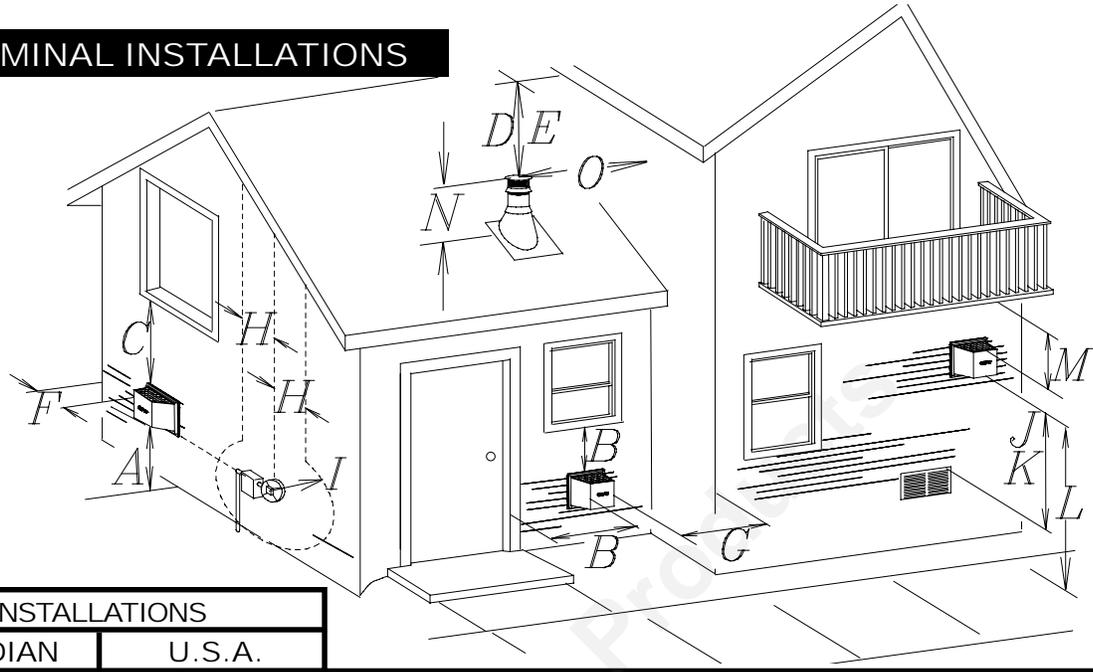

INSTALLATIONS			
	CANADIAN	U.S.A.	
A	12 INCHES	12 INCHES	Clearance above grade, veranda porch, deck or balcony.
B	12 INCHES	9 INCHES	Clearance to windows or doors that open.
C	12 INCHES*	12 INCHES*	Clearance to permanently closed windows.
D	18 INCHES**	18 INCHES**	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet from the centerline of the terminal.
E	12 INCHES**	12 INCHES**	Clearance to unventilated soffit.
F	0 INCHES	0 INCHES	Clearance to an outside corner wall.
G	0 INCHES***	0 INCHES***	Clearance to an inside <i>non</i> -combustible corner wall or protruding <i>non</i> -combustible obstructions (chimney, etc.).
	2 INCHES***	2 INCHES***	Clearance to an inside combustible corner wall or protruding combustible obstructions (vent chase, etc.).
H	3 FEET	3 FEET****	Clearance to each side of the centerline extended above the meter / regulator assembly to a maximum vertical distance of 15ft.
I	3 FEET	3 FEET****	Clearance to a service regulator vent outlet.
J	12 INCHES	9 INCHES	Clearance to a non-mechanical air supply inlet to the building or a combustion air inlet to any other appliance.
K	6 FEET	3 FEET†	Clearance to a mechanical air supply inlet.
L	7 FEET‡	7 FEET****	Clearance above a paved sidewalk or paved driveway located on public property unless fitted with a heat shield kit GD-301.
M	12 INCHES††	12 INCHES****	Clearance under a veranda, porch, deck or balcony.
N	16 INCHES	16 INCHES	Clearance above the roof.
O	2 FEET†*	2 FEET†*	Clearance from an adjacent wall including neighbouring buildings.

* Recommended to prevent condensation on windows and thermal breakage

** It is recommended to use a heat shield and to maximize the distance to vinyl clad soffits.

*** The periscope GD-201 requires a minimum 18 inches clearance from an inside corner.

**** This is a recommended distance. For additional requirements check local codes.

† Three feet above if within 10 feet horizontally.

‡ A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single dwellings and serves both dwellings.

†† Permitted only if the veranda, porch, or deck is fully open on a minimum of two sides beneath the floor.

†* Recommended to prevent recirculation of exhaust products. For additional requirements check local code

W415-0158/E/02.19.04

SPECIAL INSTALLATION EXAMPLE

When a horizontal offset is required in a through-the-roof installation, the following procedure for vent length calculations must be followed:

In an installation as shown in **FIGURES 9 & 12**, lengths A and C are known based on room height and roof requirements.

Length C must never be less than 29 inches. Any 90° and 45° elbows must be calculated as 5 feet of venting each.

The allowable horizontal run can be calculated using these parameters. In this example, the total vertical height is 20 feet (length "A" is required to be 11 feet while length "C" needs to be 9 feet). The maximum vertical length is 40 feet and all runs and elbows must be subtracted from this maximum vertical length.

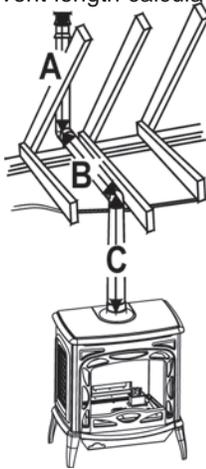


FIGURE 9

The maximum allowable horizontal run that "B" can be is:

- 40 ft. (maximum vertical run length)**
- 11 ft. (through the roof vertical rise "A")
- 10 ft. (2 - 90° elbow)
- 9 ft. (vertical run "C")
- 10 ft. (maximum allowable horizontal length for "B")

The length of "B" must never be greater than the length of "A" and "C" combined.

The maximum allowable horizontal run that "A" in Figure 13 can be is:

- 40 ft. (maximum vertical run length)**
- 7 ft. (horizontal run "B")
- 33 ft. (maximum allowable vertical length for "A")

OFFSET INSTALLATION EXAMPLE

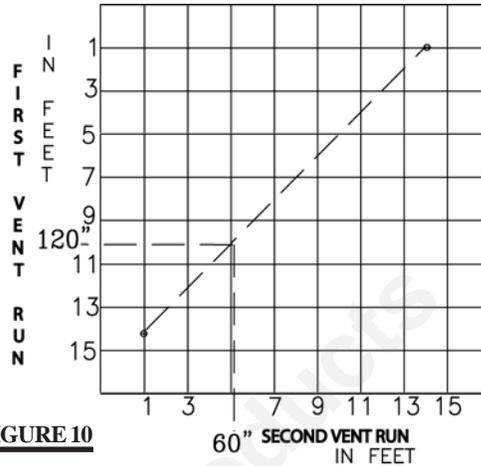


FIGURE 10

If a **first run of 120 inches** is required, using the "First Vent Run" on the chart shows that a **maximum second run of 60 inches** is allowable.

IF NECESSARY, THE FIRST RUN AND THE SECOND RUN MAY BE REVERSED.

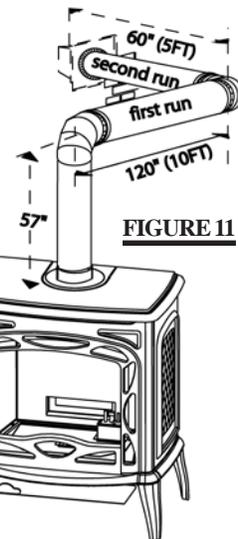


FIGURE 11


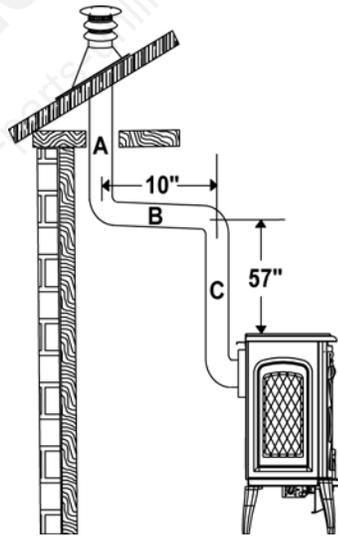


FIGURE 12

FIGURE 13

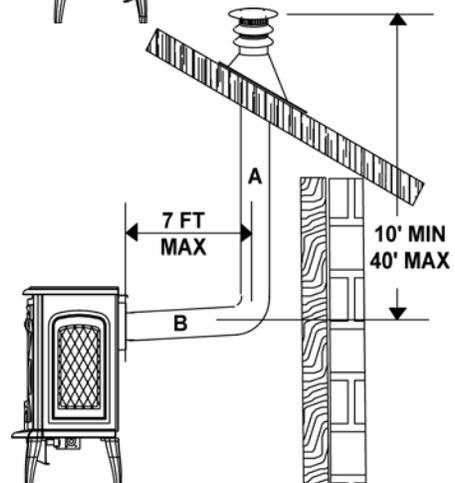

REAR VENT HORIZONTAL TERMINATION

When venting off the rear of the unit and terminating horizontally, a #45 natural gas orifice or a #55 propane orifice must be used.

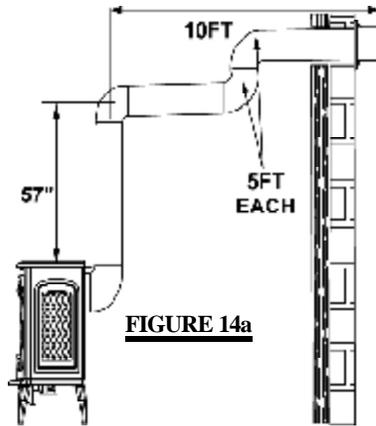


FIGURE 14a

The maximum allowable length is 20 feet. All 90° and 45° elbows (except the first two when venting horizontally) reduce the length by 5 feet each, both horizontally and vertically). In this illustration, the maximum allowable length after taking the two elbows into account is 10 feet.

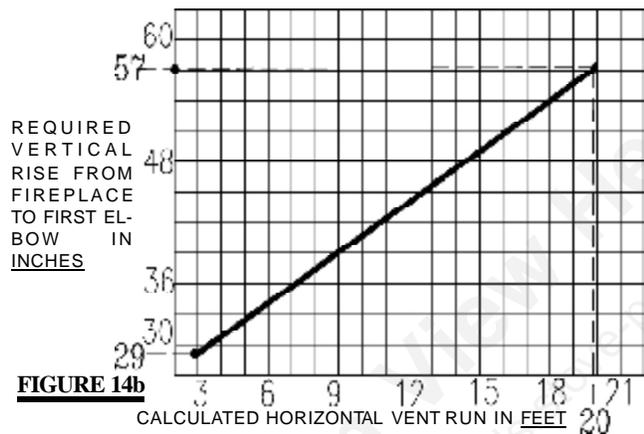


FIGURE 14b

Use the chart on this page to calculate horizontal runs for vertical rises between 29 and 57 inches. When calculating maximum run lengths, include 5 feet for each 90° or 45° elbow. (DO NOT INCLUDE THE FIRST TWO ELBOWS DIRECTLY OFF THE UNIT WHEN VENTING HORIZONTALLY.)

ORIFICE REPLACEMENT



FIGURE 15

In order to access the orifice, the log support secured by two screws, must be removed.



FIGURE 16

Care should be taken not to damage the gas pipe. When removing the orifice, using a 9/16" socket wrench, a 7/8" back-up wrench must be used on the manifold, located below the housing, to ensure that the aluminum tubing does not twist or kink.

CHANGING A TOP VENT TO A REAR VENT



FIGURE 17a

Unscrew and discard the top vent filler plate. Lift off the cast stove top. Unscrew the four screws holding both the top heat shield and the 7" flue collar in place and lift off.



FIGURE 17b

Lift the gasket off. Unscrew the 4 screws securing the 4" collar and its gasket in place and remove it and the knock-out from the rear panel. Remove the 7" and 4" covers and gaskets from the back. Position the 4" gasket and cover over the flue opening in the top.



FIGURE 17c

Secure with 4 screws. Place the 7" gasket and cover over the air opening in the top. Replace the top heat shield and re-secure. Secure both gaskets and collars over the rear openings. Using the 2 screws secure the optional trivet to the underside of the top. Replace the stove top.




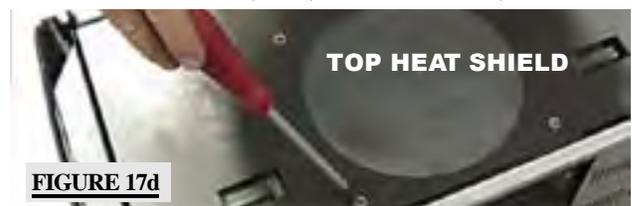


FIGURE 17d

VENTING PARAMETERS


FIGURES 18a-d

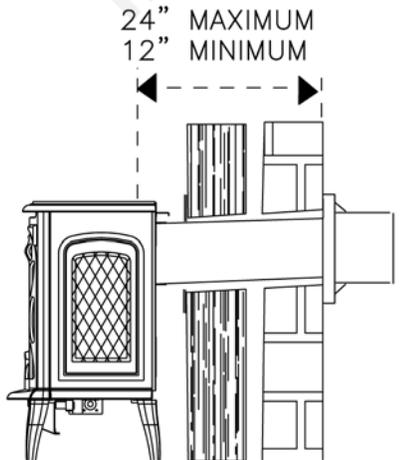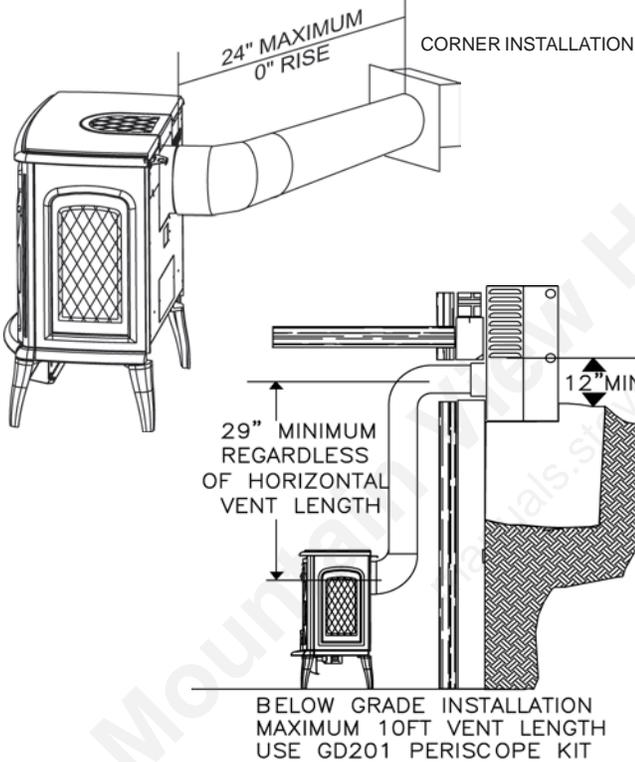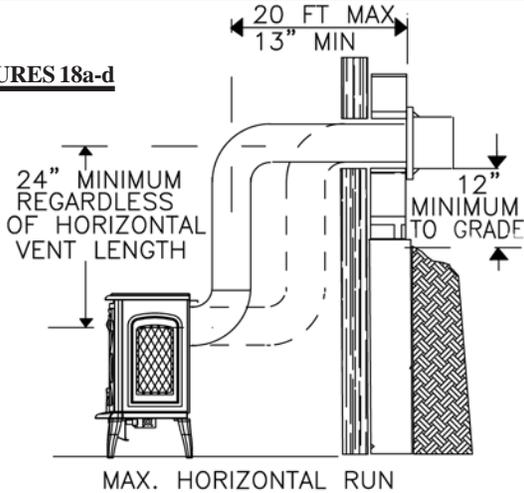

W415-0158/E/02.19.04

WALL & CEILING PROTECTION

FOR SAFE AND PROPER OPERATION OF THE STOVE, FOLLOW THE VENTING INSTRUCTIONS EXACTLY.

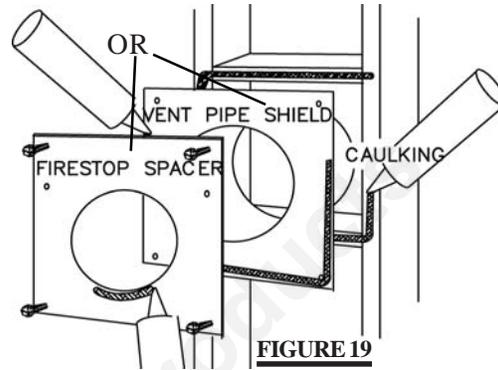

HORIZONTAL INSTALLATION

This application occurs when venting through an exterior wall. Having determined the air terminal location, cut and frame a hole in an exterior wall with a minimum square or round opening of 9". (As an alternative to framing, a vent pipe shield may be installed, ensuring a 1" clearance to combustibles.)

FOR OPTIMUM PERFORMANCE, THE STOVE PIPE SHOULD RISE 1/4" PER FOOT OF RUN.

1. Mark and cut the vent pipe shield to the determined depth of the combustible wall. Apply a bead of caulking (not supplied) to the framework or to the shield plate (in the case of a finished wall) and secure the shield through the opening to the interior wall. *The final location of the vent pipe shield should maintain the required clearance to the 7" vent pipe. Do not fill this cavity with any type of material.* Apply a bead of caulking all around and place a firestop spacer over the vent shield to restrict cold air from being drawn into the room or around the stove. Ensure that both spacer and shield maintain the required clearance to combustibles. Once the vent pipe is installed in its final position, apply sealant between the pipe and the firestop spacer.

VERTICAL INSTALLATION

This application occurs when venting through a roof.

Installation kits for various roof pitches are available from your Napoleon dealer. See Accessories to order the specific kit required.

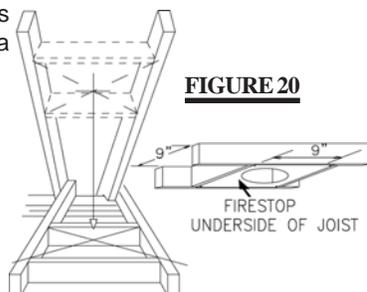


FIGURE 20

1. Determine the air terminal location and move the stove into position. Cut and frame 9 inch openings in the ceiling and the roof to provide the minimum 1 inch clearance between the stove pipe and any combustible material. Try to center the exhaust pipe location midway between two joist to prevent having to cut them. Use a plumb bob to line up the center of the openings.

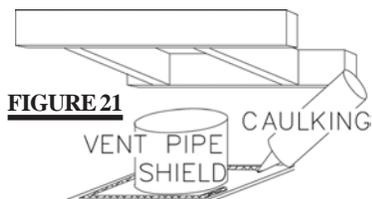


FIGURE 21

DO NOT FILL THIS SPACE WITH ANY TYPE OF MATERIAL.

A vent pipe shield will prevent any materials such as insulation, from filling up the 1" air space around the pipe. Nail headers between the joist for extra support.

2. Apply a bead of caulking (not supplied) to the framework or to the Wolf Steel vent pipe shield plate or equivalent (in the case of a finished ceiling), and secure over the opening in the ceiling. A firestop must be placed on the bottom of each framed opening in a roof or ceiling that the venting system passes through. Apply a bead of caulking all around and place a firestop spacer over the vent shield to restrict cold air from being drawn into the room or around the stove. Ensure that both spacer and shield maintain the required clearance to combustibles. Once the vent pipe is installed in its final position, apply sealant between the pipe and the firestop spacer.

3. In the attic, after the pipe has been installed, slide the vent pipe collar down to cover up the open end of the shield and tighten. This will prevent any materials, such as insulation, from filling up the 1" air space around the pipe.

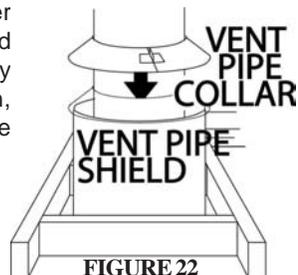


FIGURE 22

HORIZONTAL VENTING INSTALLATION

FOR SAFE AND PROPER OPERATION OF THE STOVE, FOLLOW THE VENTING INSTRUCTIONS EXACTLY.

FOR HORIZONTAL RUNS, BOTH WOLF STEEL AND SIMPSON DURA-VENT VENTING COMPONENTS MAY HAVE A 0" RISE PER FOOT.

FOR OPTIMUM PERFORMANCE IT IS RECOMMENDED THAT ALL HORIZONTAL RUNS HAVE A MINIMUM 1/4 INCH RISE PER FOOT.

1. Stretch the 4" diameter aluminum flexible liner to the required length taking into account the additional length needed for the finished wall surface.

Spacers are attached to the 4" inner flex liner at predetermined intervals to maintain a 1-1/4" air gap to the 7" outer stove pipe. These spacers must not be removed.

Slip a 4" diameter length of aluminum flexible liner a minimum of 2" over the inner sleeve of the air terminal. Secure to the sleeve using 3 screws. Seal the joint and screw heads using the high temperature sealant.

2. Slip the first section of 7" diameter stove pipe a minimum of 2" over the outer sleeve of the air terminal. Secure to the sleeve using 3 screws. Seal the joint and screw heads using high temperature sealant.

3. Insert the liners through the firestop / vent pipe shield. Holding the air terminal (lettering in an upright, readable position), secure to the exterior wall. Make weather tight by sealing with caulking (not supplied). The air terminal mounting plate may be recessed (up to 3/4" maximum) into the exterior wall or siding.

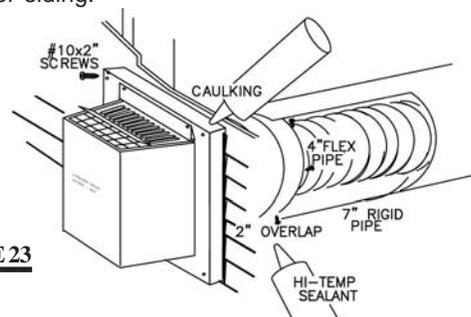


FIGURE 23

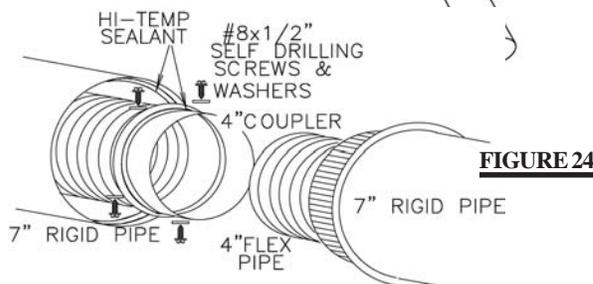


FIGURE 24

4. If more than one length of liner needs to be used to reach the stove, couple them together as illustrated in **FIGURE 24**. Seal the joints using the same procedure as described above.

The vent system must be supported approximately every 10 feet along a horizontal run. Use supports or equivalent non-combustible strapping to maintain the 1" clearance from combustibles.

VERTICAL VENTING INSTALLATION

1. Fasten the roof support to the roof using the screws provided. The roof support is optional. In this case the venting is to be adequately supported using either an alternate method suitable to the authority having jurisdiction or the optional roof support.

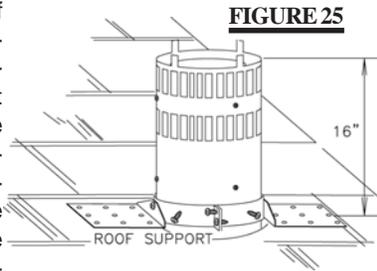


FIGURE 25

2. Slip a 4" diameter length of aluminum flexible liner a minimum of 2" over the inner sleeve of the air terminal.

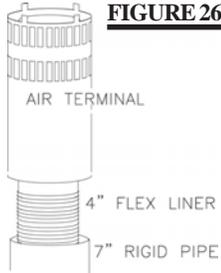


FIGURE 26

Secure to the sleeve using 3 screws and flat washers. Seal the joint and screw heads using high temperature sealant. Repeat using a 7" diameter length of rigid piping.

If the attic space is tight, we recommend adding sufficient lengths of 7" rigid piping, secured and sealed as necessary.

3. Thread the air terminal pipe assembly down through the roof support and attach, ensuring that a minimum 16" of air terminal will penetrate the roof when fastened. The air terminal must be located vertically and plumb.

4. Remove nails from the shingles, above and to the sides of the chimney. Place the flashing over the air terminal and slide it underneath the sides and upper edge of the

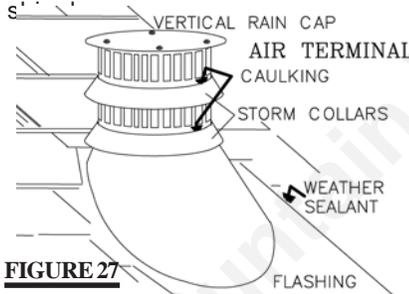


FIGURE 27

Ensure that the air terminal is properly centered within the flashing, giving a 3/4" margin all around. Fasten to the roof. Do **NOT** nail through the flashing. Make weather-tight by sealing with caulking.

Where possible, cover the sides and top edges of the flashing with roofing material.

5. Apply a heavy bead of waterproof caulking 2 inches above the flashing.

Slide the storm collar around the air terminal and down to the caulking. Tighten to ensure that a weather-tight seal between the air terminal and the collar is achieved. Attach the other storm collar centered between the air intake and air exhaust slots onto the air terminal. Tighten securely.

6. Attach the vertical rain cap.

7. In the attic, slide the vent pipe collar down to cover up the open end of the shield and tighten. This will prevent any materials, such as insulation, from filling up the 1" air space around the pipe.

STOVE VENT CONNECTION

1. Attach the adjustable pipe to the last section of rigid piping. Secure with screws and seal.

2. Install the 4" aluminum flexible liner to the stove. Secure with 3 screws and flat washers. Seal the joint and screw holes using the high temperature sealant provided.

3. Run a bead of high temperature sealant around the inside of the air intake collar. Pull the adjustable pipe a minimum 2" into the air intake collar.

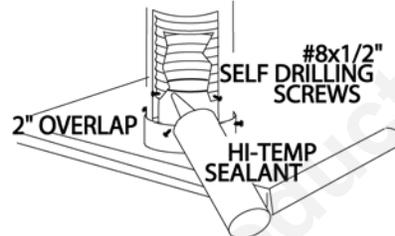


FIGURE 28

ENSURE THAT THE SEALANT IS NOT VISIBLE ON THE EXTERIOR PIPES ONCE INSTALLATION IS COMPLETED. AN OPTIONAL DECORATIVE BRASS BAND IS AVAILABLE FOR THIS USE. (STANDARD WITH A GD175 KIT). IN THE EVENT THAT THE VENTING MUST BE DISASSEMBLED, CARE MUST BE TAKEN TO RESEAL THE VENTING.

MOBILE HOME INSTALLATION

In Canada, mobile home installation may be vented horizontally or vertically. In the United States, it may only be installed vertically. See "Vertical Venting" or "Horizontal Air Terminal Installation" for installation.

For mobile home installations, the fireplace must be fastened in place. It is recommended that the fireplace be secured in all installations. Use the leveling/securing kit, GDSLL-KT for this purpose.

CONTINUE WITH "GAS INSTALLATION", PAGE 14


B-VENT SPECIFICS - MODEL GS60

CHIMNEY INSTALLATION



THREE TYPES OF CHIMNEY SYSTEMS MAY BE USED WITH THIS STOVE:

FIGURES 29

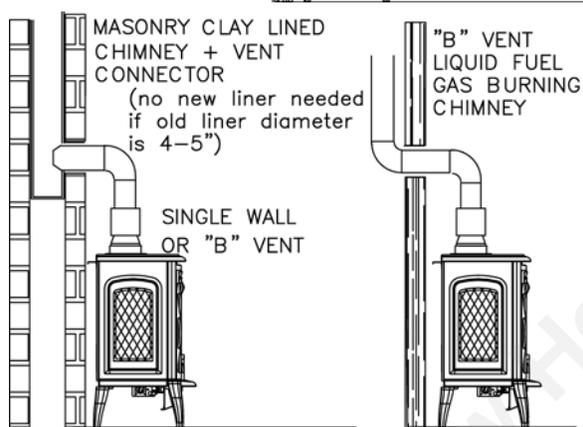

INSTALLING 'B' VENT:

Follow the instructions of the 'B' vent manufacturer for chimney installation.

1. Remove the access plate. Remove and discard the air intake cover plate located directly behind the access plate.
2. Feed the 2 wires, supplied, through the 7" collar at the top of the unit; bring them out the air intake opening but behind the rear panel as shown.

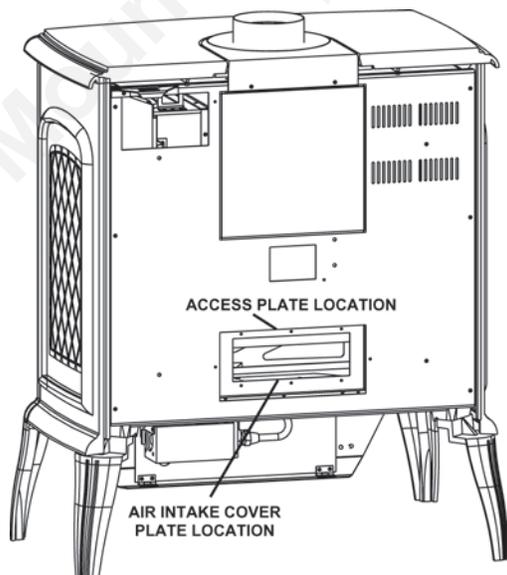


FIGURE 30

Ensure that 2 female ends remain at the top.

Re-secure the access plate.


3. Remove the spill switch bracket from the rear of the adapter. Unscrew the spill switch and discard the bracket. Attach the spill switch to the bracket supplied with the stove and secure onto the adapter.

4. Bring the wires through the lower hole in the adapter. To pass the wires through the hole more easily, temporarily tape the two terminals together.

5. With the spill switch opening aligned to the back of the stove, take hold of the adapter base and push the crimped edge into the stove flue collar.

6. Connect the upper wire terminals to the spill switch.

FIGURE 31

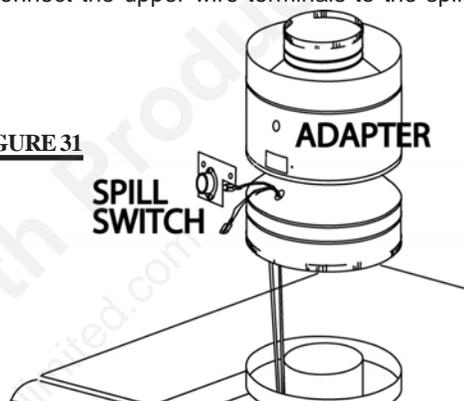

7. Disconnect the wire lead from terminal 3 on the valve and reconnect to the male end of the spill switch wire. Connect the female end of the spill switch wire to terminal 3 on the valve.

Leave all excess wire in an orderly manner.

For aesthetics, the adapter has been designed to accept a standard matte black 7" stove pipe and the Napoleon decorative brass band (standard with the GS-150KT). Both are available from your Napoleon dealer.

B-VENT MODEL GS60 ONLY

Attach the B-Vent label, shown below, in the control area of the appliance.

ATTACH THIS LABEL IN THE CONTROL AREA OF THE FIREPLACE.
THIS FIREPLACE HAS BEEN CONVERTED TO A 'B' VENT MODEL.
 ATTACHEZ CET ETIQUETTE DANS LA REGION DE CONTROLE DU FOYER.
CE FOYER A ETE CONVERTI A UN MODELE A SYSTEME D'EVACUATION 'B'.
 ws-385-160



COMBUSTION AIR

A chimney venting this stove shall not vent any solid fuel burning appliance.

Any stove needs air for safe operation and must be installed in such a way that adequate combustion air is available.

ADDING VENT SECTIONS

For ease of assembly, a 7" telescoping stove pipe may be installed over the 4" vent connection of the adapter. Add vent sections, twist locking (clockwise) securely, to the required height. The vent should extend, at least, 3 feet above its point of contact with the roof and, at least, 2 feet higher than any wall, roof or building within 10 feet. (This is a guideline only; local venting codes should be followed which may differ in height and clearance requirements.)

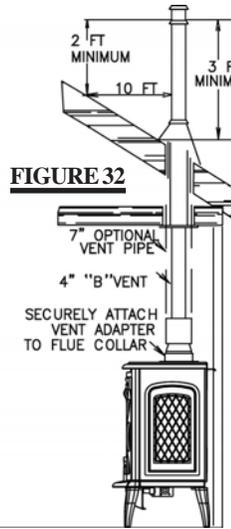


FIGURE 32

GAS INSTALLATION

1. Install rigid black pipe, or 1/2" type L copper tubing with a shut-off valve to the stove.
2. Seal and tighten the gas line securely to the flex connector.




FIGURE 34

DO NOT KINK FLEXIBLE CONNECTOR.

3. Check for gas leaks by brushing on a soap and water solution. **DO NOT USE OPEN FLAME.**

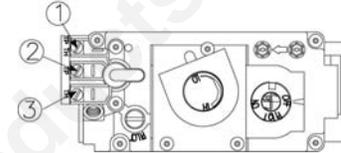


FIGURE 35

4. Mark the appropriate boxes on the rating plate label to indicate the model type depending on the installation (direct vent or B-vent).

Figure 36.

For ease of accessibility, an optional remote wall switch or millivolt thermostat may be installed in a convenient location. Route 2 strand solid core millivolt wire from the gas stove to the wall switch / millivolt thermostat. The recommended maximum lead length depends on the wire size:

WIRE SIZE	MAX. LENGTH
14gauge	100 feet
16gauge	60 feet
18gauge	40 feet

DIRECT VENT MODEL GDS60: Disconnect the existing wires from terminals 1 and 3 (from the on/off switch) and replace with the leads from the wall switch/millivolt thermostat.

B-VENT MODEL GS60: Disconnect the spill switch wire from terminal 3 on the valve. Connect one lead from the thermostat to terminal 3 on the valve and the other lead to the wire from the spill switch.

INSTALLING FLASHING AND STORM COLLAR

Remove nails from the shingles above and to the sides of the chimney. Place the flashing over the vent pipe and slide it underneath the sides and upper edge of the shingles. Ensure that the vent pipe is properly centered within the flashing, giving a 3/4" margin all

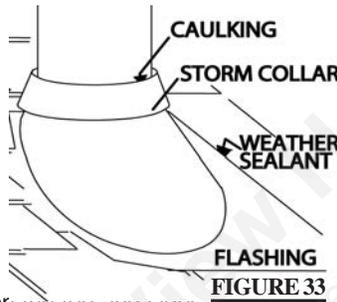


FIGURE 33

around. Fasten to the roof on the top and sides.

DO NOT NAIL through the lower portion of the flashing. Make weather-tight by sealing with caulking. Where possible, cover the sides and top edges of the flashing with roofing material.

Apply waterproof caulking around the vent, 1" above the top of the flashing and push the storm collar down into the caulking. Attach a rain cap to the top of the last vent section.

FIGURE 36

Warnock Hersey

US

CERTIFIED UNDER: CSA 2.33-2000, ANSI Z21.88-2000 VENTED GAS FIREPLACE HEATER AS A DIRECT VENT AND CSA 2.2-1998, ANSI Z21.50-1998 VENTED GAS FIREPLACE AS A B-VENT. HOMOLOGUE SELON LES NORMES: CSA 2.33-2000, ANSI Z21.88-2000 FOYER DE CHAUFFAGE AU GAZ AVEC EVACUATION EN TANT QU'UNE EVACUATION DIRECTE ET CSA 2.2-1998, ANSI Z21.50-1998 FOYER AU GAZ AVEC EVACUATION EN TANT QU'UN EVENENT "B".

NOT FOR USE WITH SOLID FUEL.
UN COMBUSTIBLE SOLIDE NE DOIT PAS ETRE UTILISE AVEC CET APPAREIL.

DIRECT VENT		B-VENT		B-VENT		DIRECT VENT	
Model	Input	Model	Input	Model	Input	Model	Input
GDS60-N	0-4500	GS60-N	0-4500	GS60-P	0-4500	GDS60-P	0-4500
CDV6600-N	35,000	CS6600-N	35,000	CS6600-P	21,000	CDV6600-P	31,500
	21,000		21,000		13,000		22,000
	24,500		24,500		14,700		22,050
#35	#45	#35	#45	#53	#55	#53	#55

MANIFOLD PRESSURE: 3.5 INCHES W.C. (NG) / 10 INCHES W.C. (LP)
 PRESSION AU COLLECTEUR: 3.5" (NG) / 10" (LP) D'UNE COLONNE D'EAU
 MIN SUPPLY PRESSURE: 4.5" W.C. (NG) / 11" W.C. (LP)
 PRESSION D'ALIMENTATION MIN: 4.5" (NG) / 11" (LP) D'UNE COLONNE D'EAU
 MAX. SUPPLY PRESSURE: 7" W.C. (NG) / 13" W.C. (LP)
 PRESSION D'ALIMENTATION MAX: 7" (NG) / 13" (LP) D'UNE COLONNE D'EAU
 FOR USE WITH GLASS DOORS CERTIFIED WITH THIS UNIT ONLY.
 UTILISER AVEC LES PORTES VITREES HOMOLOGUEES SEULEMENT AVEC CETTE UNITE.

WARNING: DO NOT ADD ANY MATERIAL TO THE APPLANCE, WHICH WILL COME IN CONTACT WITH THE FLAMES, OTHER THAN THAT SUPPLIED BY THE MANUFACTURER WITH THE APPLANCE.
 OPTIONAL BLOWER KIT / ENSEMBLE DE VENTILATEUR FACULTATIF: GS64-KT

APPROVED FOR BEDROOM & BEDSITTING ROOM INSTALLATION. HOMOLOGUE POUR INSTALLATION DANS UNE CHAMBRE A COUCHER, A UN STUDIO. THIS APPLANCE MUST BE INSTALLED USING AN ADAPTER KIT GS-150/KT. CET APPAREIL DOIT ETRE INSTALLE EN UTILISANT UN ENSEMBLE ADAPTEUR GS-150/KT.

MODEL CDV6600/GDS60 APPROVED FOR BEDROOM, BATHROOM & BEDSITTING ROOM INSTALLATION. SUITABLE FOR MOBILE HOME INSTALLATION IF INSTALLED IN ACCORDANCE WITH THE CURRENT STANDARD CAN/CSA Z240M SERIES GAS EQUIPPED MOBILE HOMES, IN CANADA OR IN THE UNITED STATES THE MANUFACTURED HOME CONSTRUCTION AND SAFETY STANDARD, TITLE 24 CFR, PART 3280. WHEN THIS US STANDARD IS NOT APPLICABLE USE THE STANDARD FOR FIRE SAFETY CRITERIA FOR MANUFACTURED HOME INSTALLATIONS, SITES AND COMMUNITIES, ANSINFPRA 501A.

HOMOLOGUE POUR INSTALLATION DANS UNE CHAMBRE A COUCHER, UNE SALLE DE BAIN ET UN STUDIO. APPROPRIE POUR INSTALLATION DANS UNE MAISON MOBILE SI SON INSTALLATION CONFORME AUX EXIGENCES DE LA NORME CAN/CSA Z240M SERIE DE MAISONS MOBILES EQUIPEES AU GAZ, EN VIGUEUR AU CANADA OU AUX ETATS-UNIS DE LA NORME DE SECURITE ET DE CONSTRUCTION DE MAISONS MANUFACTUREES, TITRE 24 CFR, SECTION 3280. DANS LE CAS OU CETTE NORME D'ETATS-UNIS NE PEUT ETRE APPLIQUEE, SE REFERER A LA NORME RELATIVE AU CRITERE DE MESURES DE SECURITE CONTRE L'INCENDIE POUR LES INSTALLATIONS DANS LES MAISONS MANUFACTUREES, LES SITES ET LES COMMUNAUTES, ANSINFPRA 501A.

STEADY STATE EFFICIENCY / EFFICACITE CONSTATE: 70%
 STEADY STATE EFFICIENCY APPLIES TO CANADA ONLY / L'EFFICACITE CONSTATEE S'APPLIQUE SEULEMENT AU CANADA.

AFUE: 64%
 MINIMUM AND MAXIMUM HORIZONTAL VENT LENGTHS ARE 25 INCHES AND 20 FEET RESPECTIVELY FOR TOP VENTED UNITS AND 13 INCHES AND 20 FEET RESPECTIVELY FOR REAR VENTED UNITS. LES LONGUEURS HORIZONTALES MINIMALE ET MAXIMALE SONT 25 POUCES ET 20 PIEDS RESPECTIVEMENT POUR UN EVACUATION VERTICALE ET 13 POUCES ET 20 PIEDS RESPECTIVEMENT POUR UN EVACUATION HORIZONTALE. L'APPLANCE MUST BE VENTED USING THE APPROPRIATE NARPOLEON VENT KITS. SEE OWNERS INSTALLATION MANUAL FOR VENTING SPECIFICS. PROPER REINSTALLATION AND RESEALING IS NECESSARY AFTER SERVICING THE VENT-AIR INTAKE SYSTEM.

L'APPAREIL DOIT EVACUER SES GAZ EN UTILISANT L'ENSEMBLE D'EVACUATION PROPRE A NARPOLEON. REFERER AU MANUEL D'INSTALLATION DE PROPRIETAIRE POUR L'EVACUATION PRECISE. IL EST IMPORTANT DE BIEN REINSTALLER ET RESECELLER L'EVENT APRES AVOIR ASSURE LE MAINTIEN DU SYSTEME DE PRISE D'AIR.

DIAGRAM TO AID IN THE OPERATION OF THIS FIREPLACE/DIAGRAMME AIDANT POUR L'OPERATION DE CE Foyer:

FLAME ADJUSTMENT / AJUSTEMENT DE LA FLAMME

ON/OFF CONTROL / INTERRUPTEUR ON/OFF

IGNITOR / BOUTON D'IGNITION

WOLF STEEL LTD BARRIE, ON CANADA
 MADE IN CANADA / FABRIQUE AU CANADA

SERIAL NUMBER / NO. DE SERIE: **GDS/CDV660**

W385-0172

INSTALLER: It is your responsibility to check off the appropriate box on the rating plate according to the model, venting and gas type of the unit.

FINISHING

LOGO PLACEMENT

Remove the backing of the logo supplied and centre over the logo installation holes, as indicated.



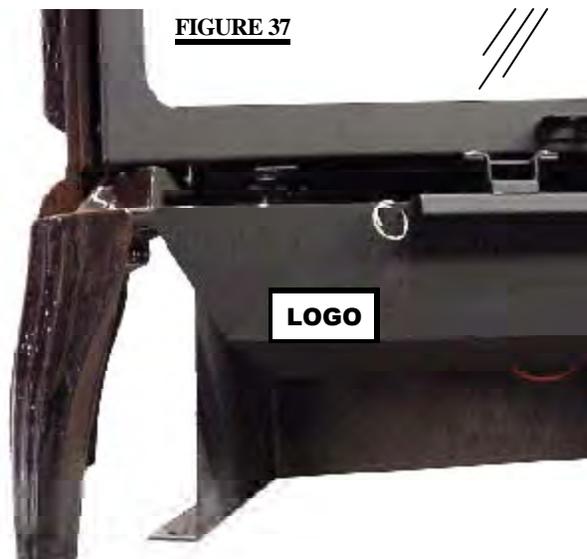


FIGURE 37

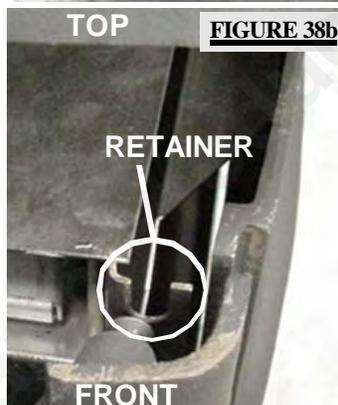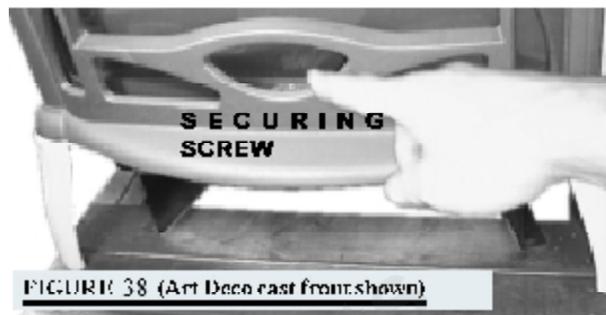

FRONT CAST INSTALLATION

1. Lift the top casting off the unit.
2. Fit the securing bolts on the cast front into each of the respective retainer brackets (located at either side on the top **SEE FIGURE 37b**). Insert and tighten the securing screw from the bottom up (located at the lower center behind the cast front **SEE FIGURE 37a**). This will hold the cast front in place. Replace the top casting.
3. To remove the front, repeat in reverse order.

GLASS DOOR INSTALLATION AND REMOVAL

When installing the glass door, a simple procedure must be followed in order to not damage the door.


1. Lift the top casting off.
2. Undo the securing screw (located at the lower center of the cast front) holding the cast front in place. **Figure 37a**.
3. Lift the cast front out of its retainers (located at either side on the top). **Figure 37b**.
4. Open the valve control cover. Pull the latch handles forward to release. **Figure 37c**. The door may now be safely removed by swinging the bottom out and lifting it off. To install the door, repeat in reverse order.

The return flange must fit over the top of the ridge so that it rests on top of the firebox. Figure 37d. The 'T' latch portion is threaded and can be loosened or tightened to adjust for an effective door seal. Care must be taken when re-installing the door to ensure that the gasket at the top of the door does not bunch.

LOG PLACEMENT

Blocked burner ports can cause an incorrect flame pattern, carbon deposits and delayed ignition. **PHAZER™** logs glow when exposed to direct flame and provide a unique and realistic glowing effect. Use only certified **PHAZER™** logs available from your Napoleon dealer.


FIGURE 39a-d

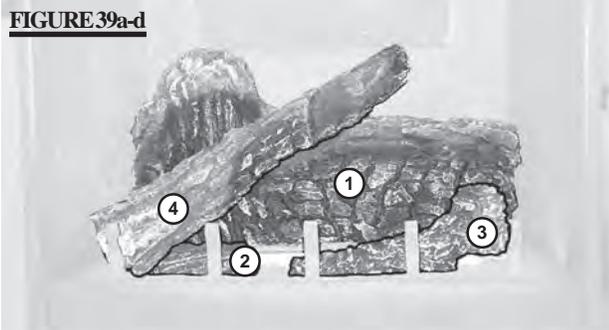


Place log #1 onto the burner, centering it onto the burner tray and pushing it as close to the rear wall of the firebox as possible. Move logs # 2 and 3 into position, lining up the studs located on the burner with the holes on the bottom of the logs. Sit the notch at the bottom of log #4 against the left outermost grate post and position the top of the log into the pocket provided on the rear log (#1).



The notch in log #5 should be pressed down onto the skewering pin located at the end of the grate as shown to prevent it from rocking.

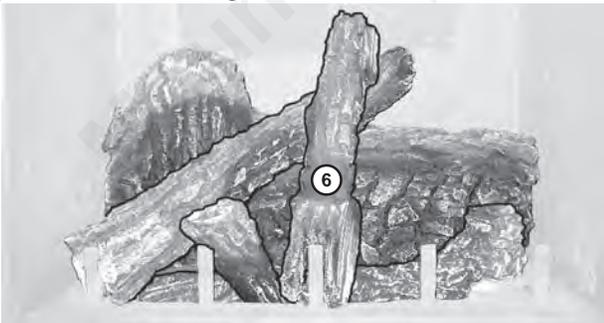

Position the notch located in log #6 against the grate post.

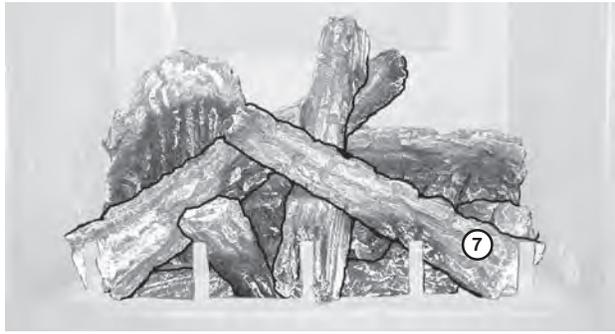

Place the bottom of log #7 against the right outermost grate post and the top into the pocket provided on the center log (#6). Bend up the tab in the log support to cradle log #7. Tear the glowing embers into pieces and place onto the front of the burner. Care should be taken to shred the embers into *thin, small irregular pieces* as only the exposed edges of the fibre hairs will glow when exposed to direct flame; however care should be taken to not block the burner ports. Blocked ports can cause an incorrect flame pattern, carbon deposits and delayed ignition.

Log colours may vary. During the initial use of the fireplace, the colours will become more uniform as colour pigments burn in during the heat activated curing process.

POSITIONING THE LOGS IMPROPERLY WILL CAUSE FLAME IMPINGEMENT AND CARBONING.

OPERATION / MAINTENANCE

PURGE ALL GAS LINES WITH THE GLASS DOOR OPEN. ASSURE THAT A CONTINUOUS GAS FLOW IS AT THE BURNER BEFORE CLOSING THE DOOR. ALLOW SEVERAL MINUTES (5-15) FOR THE FLAME TO STABILIZE AFTER IGNITION.

MODEL GS60 ONLY: SPILL SWITCH

This is a thermally activated switch, attached to the back of the chimney adapter, which senses the change in temperature and shuts down the gas valve in the event of a blocked or disconnected vent. It acts as a safety shut-off to prevent a build up of carbon monoxide or an explosion of unburnt gases during start up. If the flue is blocked or has no "draw", the spill switch will automatically shut off the supply of gas within about 5-10 minutes.

TAMPERING WITH THE SWITCH CAN RESULT IN CARBON MONOXIDE (CO) POISONING AND POSSIBLE DEATH.



MODEL GS60 ONLY: VENTING ACTION CHECK

A CHECK FOR CORRECT VENTING ACTION MUST BE MADE BEFORE THE INSTALLED STOVE IS LEFT WITH THE CUSTOMER. Test in the following manner:

1. Close all doors and windows in the room / start exhaust fans in the home / turn fireplace blower off (if equipped).

2. Set controls to "high" and light the unit.

3. Wait 5 minutes. Light a match and extend it 1" into the hole located above the spill switch bracket on the adapter.

4. Venting action is satisfactory if the flame stays lit. Venting action is unsatisfactory if the flame extinguishes.

5. If venting action is unsatisfactory, turn the unit off, wait 10 minutes and try again. If the match does not stay lit, turn the unit off and check for vent blockage or restriction. If necessary, consult with a qualified inspector.



FIGURE 40

OPERATING INSTRUCTIONS

The on-off switch is located on the back of the unit at the top left corner on models GDS60 and GS60.

NOTE: The upper firebox baffle of your new cast stove has intentionally been left unpainted. Its shiny appearance will quickly transform to a dull black finish during the curing process.

When lit for the first time, the fireplace will emit a slight odour for a few hours. This is a normal temporary condition caused by the curing of the logs and the "burn-in" of internal paints and lubricants used in the manufacturing process and will not occur again. Simply open a window to sufficiently ventilate the room. After extended periods of non-operation such as following a vacation or a warm weather season, the fireplace may emit a slight odour for a few hours. This is caused by dust particles in the heat exchanger burning off. Open a window to sufficiently ventilate the room.

OPERATING INSTRUCTIONS

FOR YOUR SAFETY READ BEFORE OPERATING

WARNING: IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.

A. This fireplace is equipped with a pilot which must be lit by hand while following these instructions exactly.

B. Before operating smell all around the fireplace area for gas and next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS:

- Turn off all gas to the fireplace.
- Open windows.
- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not turn by hand, do not try to repair it. Call a qualified service technician. Force or attempted repair may result in a fire or explosion.


D. Do not use this fireplace if any part has been under water. Immediately call a qualified service technician to inspect the fireplace and replace any part of the control system and any gas control which has been under water.

W415-0158 / E / 02.19.04

LIGHTING INSTRUCTIONS

WARNING: The gas valve has an interlock device which will not allow the pilot burner to be lit until the thermocouple has cooled. Allow approximately 60 seconds for the thermocouple to cool before attempting to re-light. When lighting and re-lighting, the gas knob cannot be turned from PILOT to OFF unless the knob is depressed.

1. **STOP!** Read the safety information on the operating label.
2. Turn off all electric power to the fireplace.
3. Turn the gas knob clockwise  to off.
4. Wait five (5) minutes to clear out any gas. If you smell gas including near the floor, **STOP!** Follow "B" on the operating label. If you don't smell gas go to the next step.

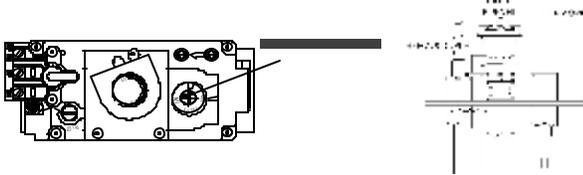

5. Find pilot located in front of the back log.
6. Turn gas knob counter-clockwise  to pilot.
7. Depress and hold the gas knob while lighting the pilot with the push button ignitor. Keep knob fully depressed for one minute, then release. If the pilot does not continue to burn, repeat steps 3 through 6.
8. With the pilot lit, turn the gas knob counter-clockwise  to on.
9. If equipped with a remote ON-OFF switch, main burner may not come on when you turn the valve to ON. The remote switch must be in the ON position to ignite the burner.
10. Turn on all electric power to the fireplace.

TO TURN OFF GAS

1. Turn off all electric power to the fireplace if service is to be performed.
2. Push in gas control knob slightly and turn clockwise  to off. Do not force.

MAINTENANCE

TURN OFF THE GAS AND UNPLUG ELECTRICAL POWER BEFORE SERVICING THE STOVE!

CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing. This stove and its venting system should be inspected before use and at least annually by a qualified service person. The fireplace area must be kept clear and free of combustible materials, gasoline or other flammable vapours and liquids. The flow of combustion and ventilation air must not be obstructed.

1. In order to properly clean the burner and pilot assembly, remove the logs exposing both assemblies.
2. Keep the control compartment, logs, burner, air shutter opening and the area surrounding the logs clean by vacuuming or brushing, at least once a year.

3. Check to see that all burner ports are burning. Clean out any of the ports which may not be burning or are not burning properly.

4. Check to see that the pilot flames are large enough to engulf the thermocouple and the thermopile on one leg and reaches toward the burner on the other leg.

5. Replace the cleaned logs.

6. Check to see that the main burner ignites completely on all openings when the gas knob for the burner is turned on. A 5-10 second total light-up period is satisfactory. If ignition takes longer, consult your Napoleon dealer/distributor.

7. Check that the door gasketing is not broken or missing. Replace if necessary.

BLOWER INSTALLATION

1. Ensure that the access cover plate has been installed. For location, see Figure 30.
2. Remove the on/off switch bracket and the cover plate below it. The switch spacers and cover plate may now be discarded.
3. Decide which side of the blower housing you prefer the on/off switch to be located on.

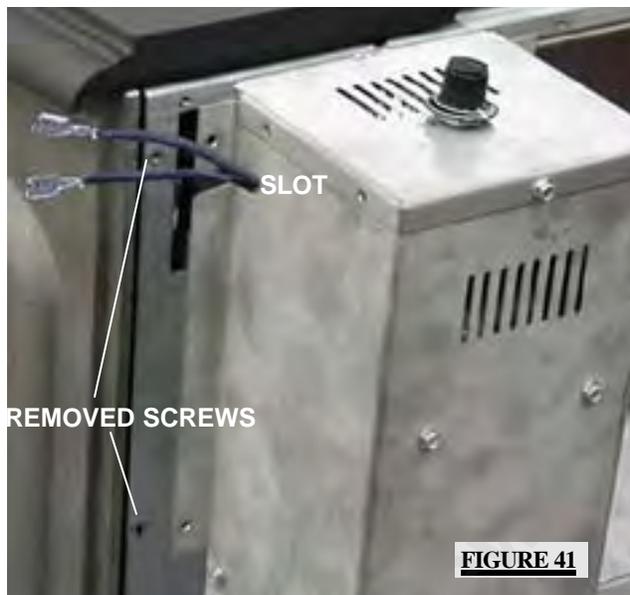


FIGURE 41

4. Remove the 2 screws from the top outer edge of the rear stove panel. The housing is mounted using these two holes, as well as two other holes located in the rear panel, using the same screw holes for one side of the housing.
5. Mount and secure the blower housing using 4 screws. Ensure that the on/off switch wires pass through the appropriate slot located on either side of the blower housing.
6. Remove the 2 screws from the side of the blower housing that you want the switch to be located on and resecure the on/off switch.

Because the blower is thermally activated, when turned on, it will automatically start approximately 15-30 minutes after lighting the stove and will run for approximately 30-45 minutes after the stove has been turned off. Use of the fan increases the output of heat.



FIGURE 42

Drywall dust will penetrate into blower bearings causing irreparable damage and must be prevented from coming into contact with the blower or its compartment. Any damage resulting from this condition is not covered by the warranty policy.

ADJUSTMENTS

PILOT BURNER ADJUSTMENT

Adjust the pilot screw to provide properly sized flame. Turn in a clockwise direction to reduce the gas flow.

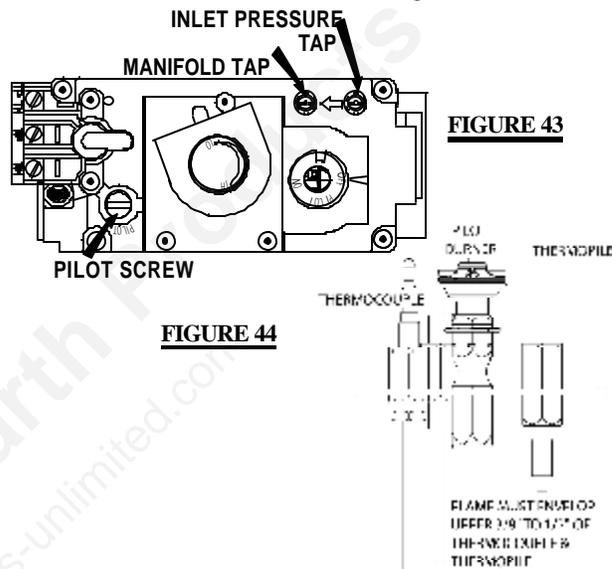


FIGURE 44

VENTURI ADJUSTMENT

Remove the 2 screws securing the log support bracket. Natural gas models have air shutters set to 0.375" open (3/8"). Propane models have air shutters set to 0.313" open (5/16"). Closing the air shutter will cause a more yellow flame, but can lead to carboning. The flame may not appear yellow immediately; allow 15 to 30 minutes for the final flame colour to be established. After making adjustments replace the log support bracket.

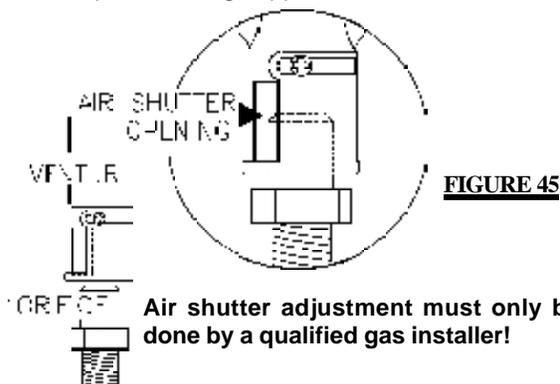


FIGURE 45

RESTRICTING VERTICAL VENTS

Vertical installations may display a very active flame. If this appearance is not desirable, the vent exit must be restricted using the restrictor vent kit, GDSRP-KT. This will reduce the velocity of the exhaust gases, slowing down the flame pattern and creating a more traditional gentle appearance. Specific instructions are included with the kit.

W415-0158 / E / 02.19.04

REPLACEMENTS

Contact your dealer for questions concerning prices and availability of replacement parts. Normally all parts can be ordered through your Napoleon dealer or distributor. When ordering replacement parts always give the following information:

FOR WARRANTY REPLACEMENT PARTS, A PHOTOCOPY OF THE ORIGINAL INVOICE WILL BE REQUIRED TO HONOUR THE CLAIM.

1. MODEL & SERIAL NUMBER OF FIREPLACE
2. INSTALLATION DATE OF FIREPLACE
3. PART NUMBER
4. DESCRIPTION OF PART
5. FINISH

*** IDENTIFIES ITEMS WHICH ARE NOT ILLUSTRATED. FOR FURTHER INFORMATION, CONTACT YOUR NAPOLEON DEALER.**

COMPONENTS COMMON TO BOTH UNITS:

#	PART #	DESCRIPTION
1	W135-0209	LOG #1
2	W135-0082	CHARCOAL PIECE (LOG #2)
3	W135-0076	LOG #3
4	W135-0210	LOG #4
5	W135-0211	LOG #5
6	W135-0212	LOG #6
7	W135-0213	LOG #7
8	GL-646	LOG SET
9	W725-0035	SIT VALVE - NG
9	W725-0026	SIT VALVE - LP
10	W010-0624	BURNER
11	W455-0058	#35 BURNER ORIFICE - NG
11	W455-0059	#53 BURNER ORIFICE - LP
11	W455-0065	#45 BURNER ORIFICE - NG
11	W455-0050	#55 BURNER ORIFICE - LP
12	W010-0800	PILOT ASSEMBLY - NG
12	W010-0801	PILOT ASSEMBLY - LP
13	W455-0069	PILOT INJECTOR - NG
13	W455-0067	PILOT INJECTOR - LP
14	W680-0005	THERMOCOUPLE
15	W680-0004	THERMOPILE
16*	W290-0029	PILOT GASKET
17	W357-0001	PIEZO IGNITOR
18*	W361-0016	GLOWING EMBERS
19*	W550-0001	CHARCOAL EMBERS
20*	W573-0008	HIGH TEMPERATURE SEALANT
21*	W385-0245	NAPOLEON LOGO
22	W390-0001	LATCH
23*	W660-0009	ON/OFF SWITCH
24	W690-0002	THERMODISC
25*	W380-0002	VARIABLE SPEED SWITCH KNOB
26	KB-35	VARIABLE SPEED SWITCH
27	GZ-552	REPLACEMENT BLOWER
28	W135-0069	SIDE (LEFT OR RIGHT)
29	W135-0073	TOP
30	W135-0068	LEG EA.
31	W135-0074	BASE PAINT FINISH ONLY

GS60 COMPONENTS

32	W010-0459	ADAPTOR c/w SPILL SWITCH
33	W660-0006	SPILL SWITCH
34	W080-0405	SPILL SWITCH BRACKET

TERMINAL KITS

35 GD175 - WALL TERMINAL KIT

36	BM6790	90° ELBOW - 7" DIAMETER
37	GD222	TERMINAL ASSEMBLY
38	BM67ADJ	30" TO 53" ADJUSTABLE PIPE - 7" DIA
39	W500-0077	FIRESTOP / WALL PLATE
40	W020-0032	HARDWARE
41	BRTC7	BRASS TRIM COLLAR
42	BM6724	24" STOVE PIPE - 7" DIAMETER
43	W010-0300	10' ALUMINUM FLEX LINER c/w SPACERS - 4" DIA
44	W025-0001	DECORATIVE BRASS BAND

46 GD180 - PERISCOPE TERMINAL KIT

36	BM6790	90° ELBOW - 7" DIAMETER
45	GD201	PERISCOPE
38	BM67ADJ	30" TO 53" ADJUSTABLE PIPE - 7" DIA
49	W500-0077	FIRESTOP / WALL PLATE
40	W020-0032	HARDWARE
41	BRTC7	BRASS TRIM COLLAR
42	BM6724	24" STOVE PIPE - 7" DIAMETER
43	W010-0300	10' ALUMINUM FLEX LINER c/w SPACERS - 4" DIA
44	W025-0001	DECORATIVE BRASS BAND

W415-0158/E / 02.19.04

ROOF TERMINAL KITS

GD110 - 1/12 TO 7/12 PITCH

46	W010-0569	AIR TERMINAL
47	W120-0036	VERTICAL CAP
48	W010-0567	ROOF SUPPORT
49	W170-0063	STORM COLLAR
50	W263-0054	ROOF FLASHING

GD111 - 8/12 TO 12/12 PITCH

46	W010-0569	AIR TERMINAL
47	W120-0036	VERTICAL CAP
48	W010-0567	ROOF SUPPORT
49	W170-0063	STORM COLLAR
50	W263-0055	ROOF FLASHING

GD112 - FLAT ROOF

46	W010-0569	AIR TERMINAL
47	W120-0036	VERTICAL CAP
48	W010-0567	ROOF SUPPORT
49	W263-0056	ROOF FLASHING
50	W170-0063	STORM COLLAR

ACCESSORIES:

51*	W690-0001	MILLIVOLT THERMOSTAT
52*	W690-0010	REMOTE CONTROL - ADVANTAGE
52*	W690-0011	REMOTE CONTROL - ADVANTAGE PLUS
53*	W300-0041	WINDOW GLASS
54*	W562-0031	GLASS GASKET
55	GS830-G	GOLD TRIVET
55	GS830-K	BLACK TRIVET
55	GS830-C	CHROME TRIVET
56*	GDSLL-KT	LEVELING / SECURING KIT
57	GS-64KT	BLOWER KIT
58*	GDS-786KT	DECORATIVE BRICK PANEL
59	F_A**	ART DECO FRONT
60	F_E**	EARLY AMERICAN FRONT
61	F_P**	PANORAMIC FRONT
62*	W175-0138	CONVERSION KIT - NG-LP
62*	W175-0139	CONVERSION KIT - LP-NG
63*	BM6745	45° ELBOW
64	GD-301	HEAT GUARD

GDS60 ACCESSORIES


65*	W175-0001	4" COUPLER
45	GD-201	PERISCOPE
66*	GDSRP-KT	RESTRICTOR KIT

GS60 ACCESSORIES

67	GS-150KT	ADAPTOR KIT
44	W025-0001	DECORATIVE BRASS BAND

**FOR AVAILABLE PORCELAIN COLOURS, ADD THESE LETTERS TO THE BASE PART NUMBER:

BLUE	- B	BROWN	- N
BLACK	- K	ALMOND	- S
GREEN	- F		

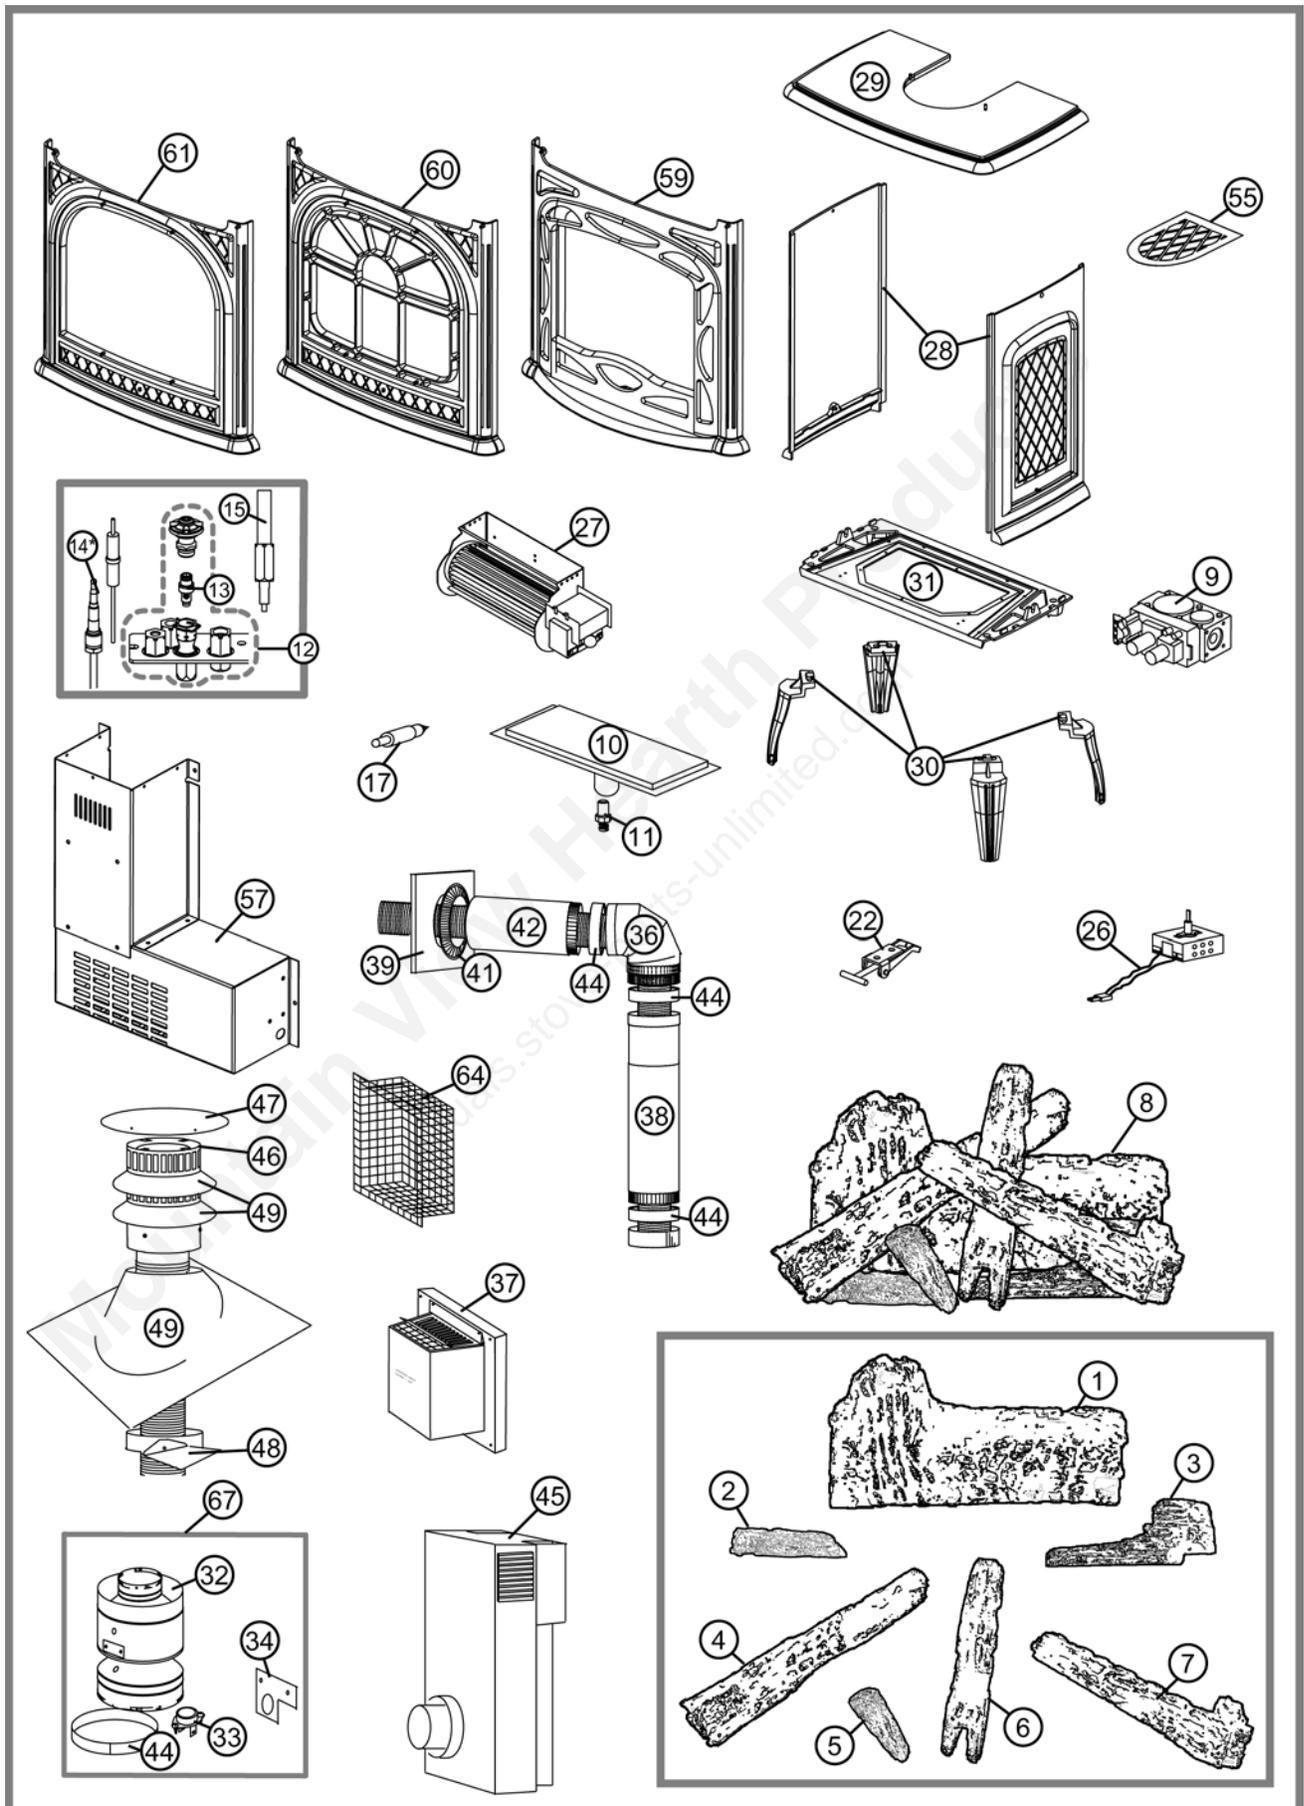


*** WARNING: This is a fast acting thermocouple. It is an integral safety component. Replace only with a fast acting thermocouple supplied by Wolf Steel Ltd.**

W415-0158/E/02.19.04

TROUBLE SHOOTING GUIDE

BEFORE ATTEMPTING TO TROUBLESHOOT, PURGE YOUR UNIT AND INITIALLY LIGHT THE PILOT AND THE MAIN BURNER WITH THE GLASS DOOR REMOVED.

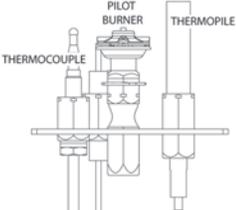SYMPTOM	PROBLEM	TEST SOLUTION
Pilot will not light. <div style="text-align: center; margin-top: 10px;">  </div>	No spark at pilot burner	<ul style="list-style-type: none"> - check if pilot can be lit by a match - check that the wire is connected to the push button ignitor. - check if the push button ignitor needs tightening. - replace the wire if the wire insulation is broken or frayed. - replace the electrode if the ceramic insulator is cracked or broken.
	Spark gap is incorrect	<ul style="list-style-type: none"> - spark gap should be 0.150" to 0.175" (5/32" to 11/64" approx.) from the electrode tip and the pilot burner. To ensure proper electrode location, tighten securing nut (finger tight plus 1/4 turn).
	No gas at the pilot burner	<ul style="list-style-type: none"> - check that the manual valve is turned on. - check the pilot orifice for blockage. - replace the valve. - call the gas distributor.
	Out of propane gas.	<ul style="list-style-type: none"> - fill the tank.
Pilot goes out when the gas knob is released.	System is not correctly purged.	<ul style="list-style-type: none"> - purge the gas line with the stove door open.
	Out of propane gas	<ul style="list-style-type: none"> - fill the tank.
	Pilot flame is not large enough	<ul style="list-style-type: none"> - turn up the pilot flame.
	Pilot flame is not engulfing the thermocouple.	<ul style="list-style-type: none"> - turn up pilot flame. - replace pilot assembly.
	Thermocouple shorting.	<ul style="list-style-type: none"> - loosen and tighten thermocouple. - clean thermocouple and valve connection. - replace thermocouple. - replace valve.
	Faultly thermocouple.	<ul style="list-style-type: none"> - replace.
	Faulty valve.	<ul style="list-style-type: none"> - replace.
Pilot burning; no gas to main burner; gas knob is on 'HI'; wall switch / thermostat is on.	Main burner orifice is plugged.	<ul style="list-style-type: none"> - remove stoppage in orifice.
	Faulty thermopile.	<ul style="list-style-type: none"> - replace.
	Faulty thermostat or switch.	<ul style="list-style-type: none"> - connect a jumper wire across the wall switch terminals; if main burner lights, replace thermostat. - disconnect switch wires from the valve & connect a jumper wire across terminals 1 & 3; if the main burner lights, check the wires for defects and / or replace wires.
	Faulty valve.	<ul style="list-style-type: none"> - replace.
Pilot goes out while standing; Main burner is in 'OFF' position.	Gas piping is undersized.	<ul style="list-style-type: none"> - turn on all gas appliances and see if pilot flame flutters, diminishes or extinguishes, especially when main burner ignites. Monitor supply pressure. - check if supply piping size is to code. Correct all undersized piping.
	Main burner goes out; pilot stays on.	Pilot flame is not large enough or not engulfing the thermopile. <ul style="list-style-type: none"> - turn up pilot flame. - replace pilot assembly.
	Thermopile shorting	<ul style="list-style-type: none"> - clean thermopile and thermopile connection to valve.
	Remote wall switch wire is too long, too much resistance in the system	<ul style="list-style-type: none"> - shorten wire to correct length or wire gauge.
	Faulty thermostat or switch	<ul style="list-style-type: none"> - replace
	MODEL GS60 ONLY:	<ul style="list-style-type: none"> - test with spill switch bypassed. Replace if defective.
	Venting is spilling	<ul style="list-style-type: none"> - check for vent blockage.

SYMPTOM	PROBLEM	TEST SOLUTION
Main burner goes out; pilot goes out.	REFER TO "MAIN BURNER GOES OUT; PILOT STAYS ON"	
	Vent re-circulating (MODEL GDS60 ONLY)	- check joint seals and installation.
	Thermocouple shorting or	- loosen and tighten thermocouple - clean thermocouple and valve connection. - replace thermocouple. - replace valve.
Exhaust fumes smelled in room, headaches.	Fireplace is spilling.	- check all seals.
Carbon is being deposited on glass, logs or combustion chamber surfaces.	Air shutter has become blocked	- ensure air shutter opening is free of lint or other obstructions.
	Flame is impinging on the logs or combustion chamber.	- check that the logs are correctly positioned. - open air shutter to increase the primary air. - check the input rate: check the manifold pressure and orifice size as specified by the rating plate values. - check that the door gasketing is not broken or missing and that the seal is tight. - check that both vent liners are free of holes and well sealed at all joints. - check that minimum rise per foot has been adhered to for any horizontal venting.
Flames are very aggressive. (GDS60 REAR VENT VERTICAL TERMINATION)	Door is ajar	- tighten door clamps
	Venting action is too great.	- restrict vent exit with restrictor vent kit, GDSRP-KT.
MODEL GDS60 ONLY: Main burner flame is a blue, lazy, transparent flame.	Blockage in vent.	- remove blockage. In really cold conditions, ice buildup may occur on the terminal and should be removed as required.
	Incorrect installation (vertical termination only).	- refer to Figure 27 to ensure correct location of storm collars.
White / grey film forms.	Sulphur from fuel is being deposited on glass, logs or combustion chamber surfaces.	- clean the glass with a recommended gas fireplace glass cleaner. DO NOT CLEAN GLASS WHEN HOT. If deposits are not cleaned off regularly, the glass may become permanently marked.

